

VIVITAR® 4K POCKET CAMCORDER

3-AXIS GIMBAL STABILIZATION



ROTATABLE
1.9" SCREEN



INTELLIGENT
TRACKING



ULTRA HD
RECORDING



User's Manual
FOR ITEM: VESGBL24

Important Safety Precautions

When using your Vivitar 4K Pocket Camcorder, Item VESGBL24, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR CAMCORDER.
2. Do not use your camcorder near water. Clean using a soft cloth or paper towel.
3. Do not place your camcorder on any wet surfaces.
4. Do not expose your camcorder to excessive heat, flames or fire.
5. Always press all buttons or switches carefully. Do not manhandle your camcorder.
6. Do not expose your camcorder to temperatures above 40°C. Keep out of direct sunlight.
7. Do not attempt to repair this product yourself. Contact a qualified service center if your camcorder is in need of service.
8. Do not drop, puncture or expose your camcorder to excessive trauma.
9. Your camcorder is not intended for commercial use.
10. Do not place near objects that generate a strong magnetic field.
11. Unplug your camcorder when charging is complete or during lightning storms.
12. Please recycle or dispose of your camcorder properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your product for further information.



BATTERY WARNING:

- The device is equipped with an integrated lithium ion battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.
- Do not dispose of in fire or expose to excessive heat.
- Do not crush, puncture, incinerate, or short circuit external contacts.
- Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

Package Contents

- 4K Pocket Camcorder
- Carrying Case
- USB-C Charging Cable (Data Cable)
- 16GB Memory Card
- User's Manual With Warranty Information
- Lens cleaning cloth

Features

- 4K Ultra HD With 20fps
- 3-Axis Mechanical Gimbal
- Intelligent Tracking
- Rotatable 1.9" Display Screen
- Compact & Portable for Travel
- Build-in 7.4V 1000mAh Rechargeable Battery


Powering Your Camcorder



In order to power ON or power OFF your camera, press and hold the Power button for approximately 2-3 seconds.


Note: If no input is registered by the camera, such as a button press or screen change, the camera may automatically turn OFF.

A Closer Look

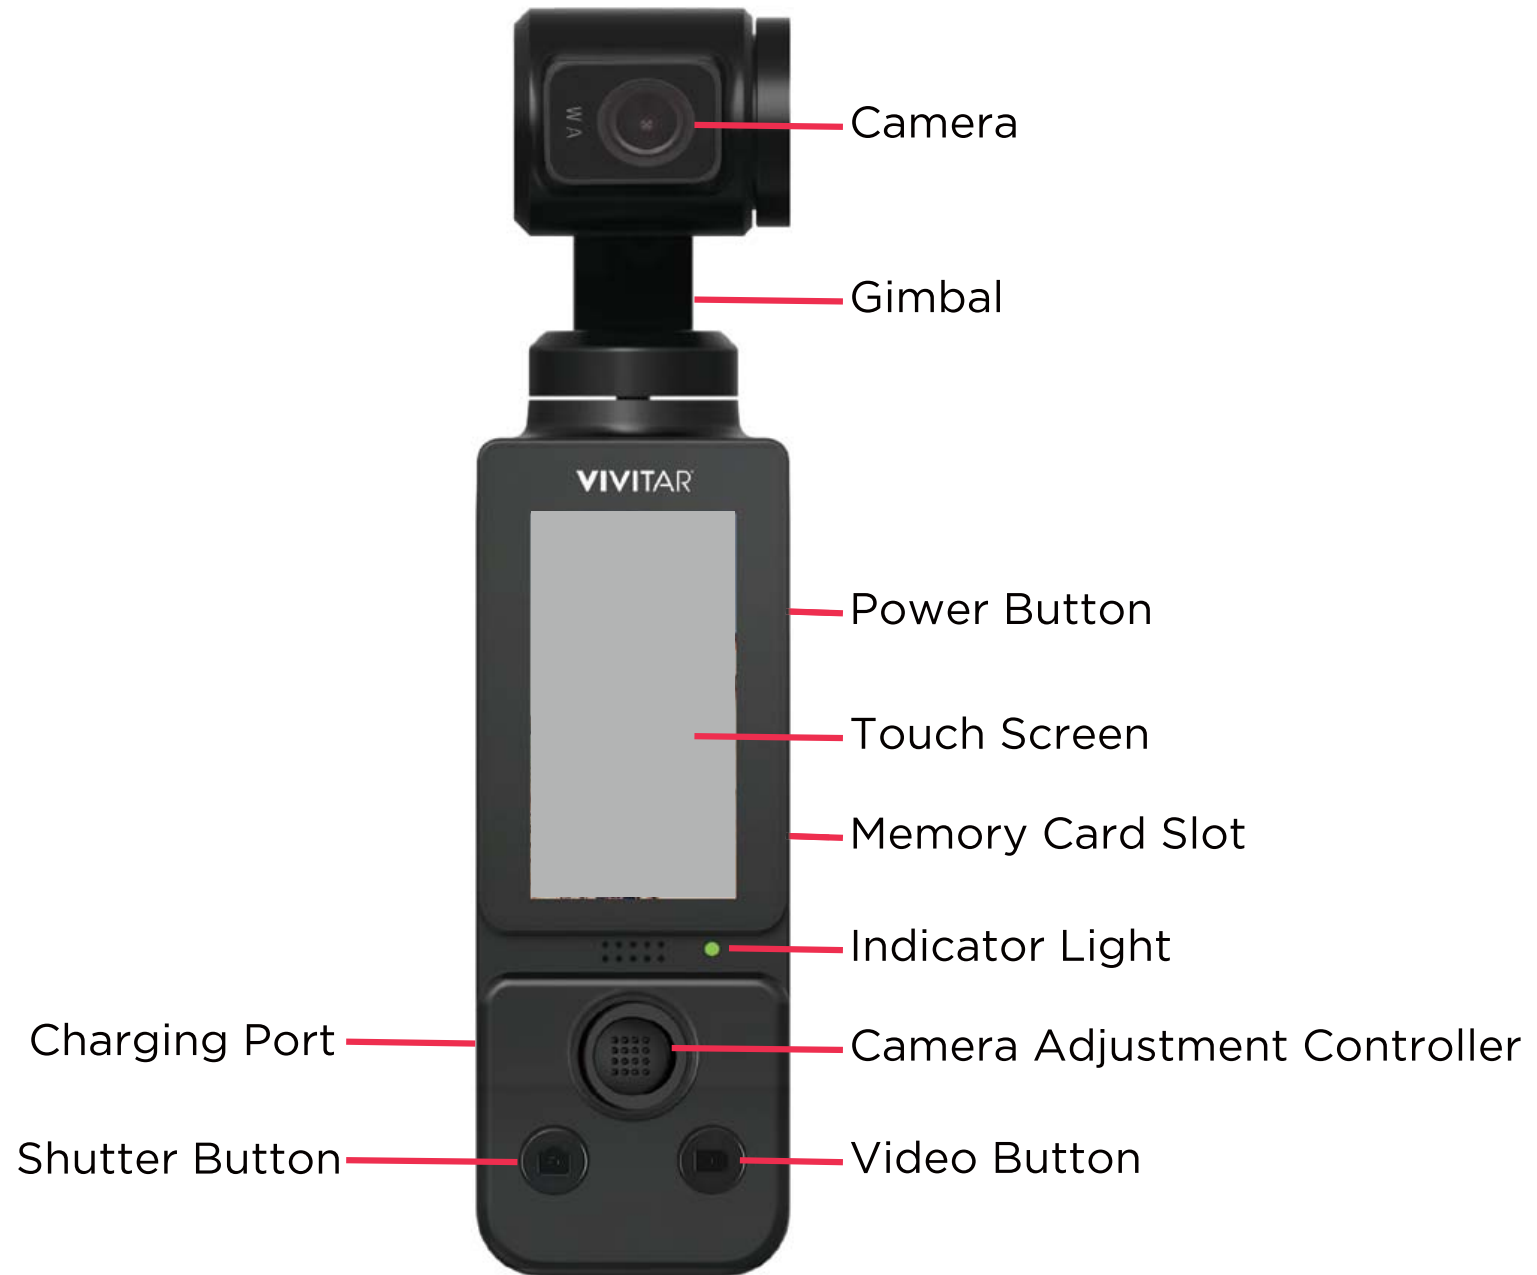


Charging Your Camcorder

Please charge your camcorder before using.

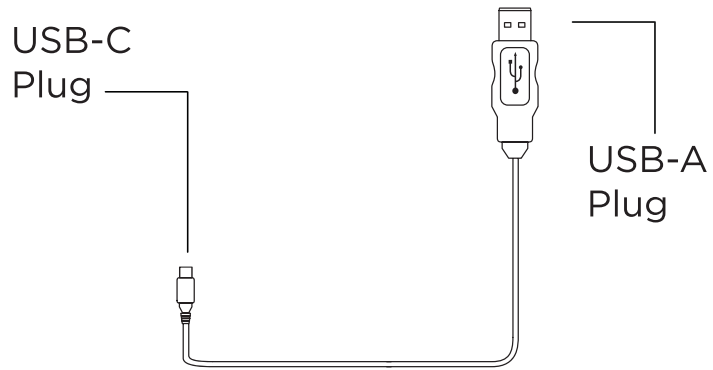


1. The included USB charging cable has a USB-C plug and a standard USB-A plug.

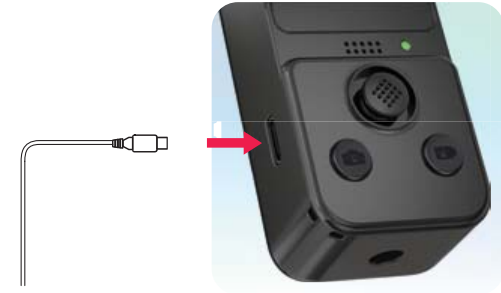

2. Insert the USB charging cable's USB-C plug into the charging port on your camcorder.

3. Insert the USB charging cable's standard USB-A plug into the suitable USB charging adapter.

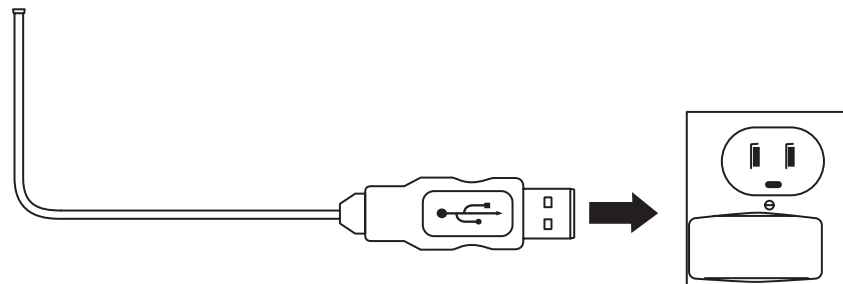

Inserting a Memory Card



To store photos or videos, insert a compatible microSD memory card into your camcorder's memory card slot. A class 10 or higher speed memory card is recommended for normal use. When using a memory card that has not been used with the camera before, it is recommended to format the memory card. Formatting will PERMANENTLY delete all files from the memory card. Before formatting, ensure that the memory card does not contain any files, images, or videos you want saved.

To remove the card, push the card inwards until you feel it spring back out.

NOTE: This camera can handle memory cards up to 512 GB.

Controls

Power Button:

- Press and hold to turn on/off the camcorder.

Camera Adjustment Controller

- Use to adjust the camera's position.
- Double-tap to switch to selfie mode.

Shutter Button:

- Press to take a photo.

Video Button:

- Press to start/stop a video recording.

Taking Photos/Videos

To take a photo, press the Shutter Button.

To take a video, press the Video button to start and stop recording.

To change the camera's orientation, use the Camera Adjustment Controller.



Segmented Saving Function

When the camcorder is in recording mode, the recorded video will be automatically saved in segments at an interval of every 10 minutes. Each segment will be stored as an independent video file in the connected storage device (e.g., SD card, mobile phone storage), which facilitates file management and avoids data loss caused by unexpected situations (such as sudden power failure) during long-time recording.

Note: The segmentation interval is fixed at 10 minutes and cannot be customized. The saved video files will be named in chronological order for easy identification and retrieval.

Touchscreen

You can access addition features using the Touchscreen.

How to access the function menu: Swipe right on the home screen to access the function menu.

Menu functions are as below:

1. Resolution: Select to change the video recording resolution.
2. Selfie: Select to rotate the camera 180°. Select again to return the camera to its previous location.
3. Gimbal Calibration: Select to calibrate the Gimbal if there is any noticeable tilting or drifting when using the Gimbal.

NOTE: When calibrating the Gimble, place the device on a stable flat surface. Do not hold the camcorder by hand or touch the Gimbal during calibration.

4. Gimbal Modes: Select repeatedly to cycle through the following Gimbal modes.
 - Pitch Lock: Locks rotation, only allowing alteration of the camera's angle.
 - FPV: Follows the handle's movement. In this mode, switching to selfie mode is not supported, left/right lens rotation is disabled, and only up/down adjustment is allowed.
 - Follow: Automatically track a focus.

5. Time-lapse Photography: Time-lapse photography compresses a long time period into a fast forward video of short moments

Disabled: Turn off the time-lapse photography mode

1~60s: Enable time-lapse photography and set the shooting interval (the interval between each frame)

Touchscreen (Continued)

6. Slow Motion: Slow motion stretches short moments into detailed slow playback
Disabled: Turn off the slow motion photography mode
FHD 2X: Enable slow motion photography and set the time stretch rate to 2x
7. Wi-Fi: Select to enable or disable Wi-Fi connection.
8. Auto Power-OFF: Select to set the amount of time until the device automatically shuts down.
9. Format: Select to erase all data in the inserted MicroSD card. Formatting will PERMANENTLY delete all files from the memory card. Before formatting, ensure the memory card does not contain any files, images, or videos you want to keep.
10. Language: Select to change the system display language.
11. Device Information: Select to view the firmware version, Wi-Fi hotspot name, and additional details.
12. Restore Default Settings: Select to reset all device settings to factory default.

How to access the camcorder's album: Swipe left on the home screen to access the album. Swipe up and down to browse photos and videos.

VIVITAR PLAY App

For remote access to the device and additional features, you can download the **VIVITAR PLAY** app from the Apple App Store or Google Play Store by searching for the application or scanning the QR codes below.

IOS



Google Play



To connect the camcorder to your mobile application, select Device Information on your camcorder's touchscreen to see the device's hotspot name. Enable Wi-Fi on the camcorder, turn on WiFi list on the phone, find “**Pocket Camcorder_XXXXXX**” on the list and connect to your mobile device. Once connected, open the VIVITAR PLAY app to operate.

Product Specification

Screen: 1.9-inch IPS HD screen

Photo Resolution: 2M, 5M, 8M

Photo Format: JPEG

Video Resolution: 4K/20fps, 2K/40fps, 1080P/60fps

Video Format: MP4

Charging Method: Type-C DC 5V

Memory Expansion: Supports up to 512GB memory card

Battery: 7.4V 1000mAh

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

One Year Warranty

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:
Call 1-800-592-9541 or visit our website at www.vivitar.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaired.

VIVITAR[®]

© 2026 Sakar International
195 Carter Drive
Edison, NJ 08817
Support: 800 592 9541
www.vivitar.com