

Start Here!



bonjour !

¡hola!

olá!

hey!

ابحرم

hallo!

こんにちは!

guten tag!

 
hello!

你好

PARENTS, GET STARTED!


1

Install the free app from
www.octopus.watch/app

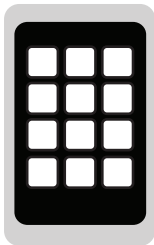

2

 Launch the app and
follow instructions

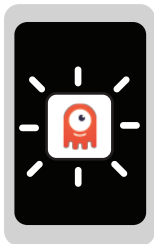


Enjoy!



KIDS, GET STARTED!

The time

 To read the time, press the button.
The screen will turn on for 6 seconds.

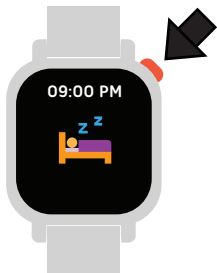

In case of emergency (I.C.E)

Press the button for 3 seconds to display I.C.E

 
 


Reminders


They automatically pop up for 6 seconds, along with a gentle vibration every minute until the end time.



Some reminders have a little check mark ✓ next to it, it means your parents want you to press the button after you've done the task.

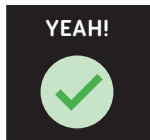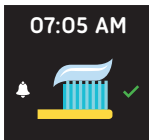

 If the option is activated, you may see a progress bar below the time. The grey represents the total duration of the task, and the yellow represents the progress.

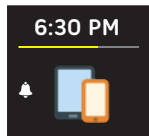

TIPS!

Charging the watch

If you see this icon on the watch, charge it immediately as you have less than 10% battery remaining. Just plug the USB cable to a computer or to a 5V wall charger and plug the other side to the back of the Octopus watch.



22:15 PM

 


22:15 PM 



Synchronizing

To turn on the connection, plug the watch to a power source or press the button for 3 seconds until seeing this icon in the top right corner . Then, press "synchronize" in the right hand menu in the app.

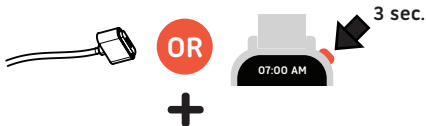

Synchronize now

Last synched Mar 1, 20176 at 10:10 am



 
07:00 AM 



Updating the firmware

When you see a badge next to the firmware update button in the right hand menu of your app, it's time to update your Octopus Watch with the latest software and icon packs.

Turn on the connection by plugging the watch to a power source or by pressing the button for 3 seconds. Then, press firmware update" in the right hand menu in the app.

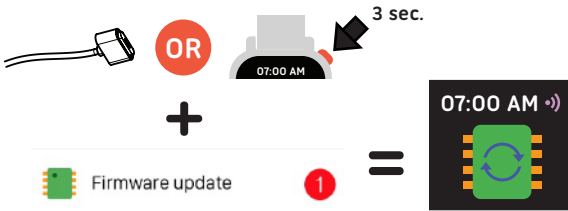

Troubleshooting

If your Octopus Watch acts weird or is frozen, you can reset it by plugging it to a power source and by pressing the button for 15 seconds. When it restarts, you should be able to synchronize it.

More support on:
www.heyjoy.io/support



JOY

JOYO1R7

5V  200mA



"This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

CAN ICES-3 (B)/NMB-3(B)

Changes or modifications not expressly approved by JOY could void the user's authority to operate the equipment

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct interference by one or more of the following measures:

- Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.

This device complies with FCC and Industry Canada RF radiation exposure limits set forth for general population (uncontrolled exposure). This device must not be collocated or operating in conjunction with any other antenna or transmitter. This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

OCTOPUS LIMITED WARRANTY - USA

This Limited Warranty applies only if you purchased your JOY Home in the United States.

What does this warranty cover and how long does it last? JOY warrants that a new JOY Home device (including any ancillary parts that may be packaged with it) will be free from defects in materials and workmanship under normal use in accordance with JOY's published user documentation for one year from the date of original retail purchase in its original packaging by you. If a JOY Home has been refurbished, JOY warrants that the JOY Home (including any ancillary parts that may be packaged with it) will be free from defects in materials and workmanship under normal use in accordance with JOY's published user documentation for ninety days from the original date of retail purchase by you (these warranties are collectively referred to as our "Limited Warranty").

What will JOY do? (THIS IS YOUR EXCLUSIVE REMEDY) If a defect arises and you return your JOY Home during the Limited Warranty period (which is one year for new devices and ninety days for refurbished devices), JOY will in its sole discretion and to the extent permitted by law repair your JOY Home using new or refurbished parts, replace your JOY Home with a new or refurbished JOY Home functionally at least equivalent to yours, or accept the return of your JOY Home in exchange for a refund of the purchase price you paid for your JOY Home. If JOY repairs or replaces your JOY Home, the repaired or replaced JOY Home will continue to be warranted for the remaining time of the original warranty period. All returned parts for which you have received a replacement will become the property of JOY. Nothing in this Limited Warranty will reduce or otherwise affect your statutory rights in relation to your JOY Home.

THE LIMITED WARRANTY WRITTEN ABOVE IS THE ONLY EXPRESS WARRANTY JOY PROVIDES FOR YOUR JOY HOME, AND THE ABOVE REMEDY IS YOUR SOLE REMEDY. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, JOY EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES AND CONDITIONS OF ANY KIND, WHETHER STATUTORY OR IMPLIED, ARISING FROM COURSE OF CONDUCT OR OTHERWISE, REGARDING YOUR JOY HOME, EXCEPT THAT ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT ARE LIMITED IN DURATION TO THE PERIOD OF THE EXPRESS WARRANTY ABOVE (EITHER ONE YEAR OR NINETY DAYS, DEPENDENT ON WHETHER YOUR JOY HOME IS NEW OR REFURBISHED).

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

What does this warranty not cover? This Limited Warranty is only valid and enforceable in locations where JOY Home is sold and will apply only if you purchased your JOY Home from JOY or its authorized resellers. This Limited Warranty only applies to hardware components (and not any software elements) of JOY Home, and this Limited Warranty does not apply to damage caused by: (1) normal wear and tear; (2) accidents; (3) misuse (including failure to follow product documentation); (4) neglect; (5) disassembly; (6) alterations; (7) servicing other than by JOY authorized technicians; and (8) external causes such as, but not limited to, water damage, anomalies in the electrical current supplied to the device, and extreme thermal or environmental conditions. This Limited Warranty does not guarantee that use of the JOY Home will be uninterrupted or error free.

YOU EXPRESSLY UNDERSTAND AND AGREE THAT, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, JOY AND ITS SUBSIDIARIES AND AFFILIATES (COLLECTIVELY, "JOY PARTIES") SHALL NOT BE LIABLE TO YOU UNDER ANY THEORY OF LIABILITY (WHETHER CONTRACT, TORT (INCLUDING NEGLIGENCE), BREACH OR FAILURE OF ANY WARRANTY OR OTHERWISE) FOR ANY INDIRECT, INCIDENTAL, SPECIAL, CONSEQUENTIAL OR EXEMPLARY DAMAGES THAT MAY BE INCURRED BY YOU IN CONNECTION WITH YOUR JOY HOME OR THESE TERMS, INCLUDING ANY LOSS OF DATA, WHETHER OR NOT A JOY PARTY OR ITS REPRESENTATIVES HAVE BEEN ADVISED OF OR SHOULD HAVE BEEN AWARE OF THE POSSIBILITY OF ANY SUCH LOSSES ARISING. YOU EXPRESSLY UNDERSTAND AND AGREE THAT, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE JOY PARTIES' TOTAL LIABILITY IN CONNECTION WITH YOUR JOY HOME OR THIS LIMITED WARRANTY WILL NOT EXCEED THE AMOUNT YOU ACTUALLY PAID JOY FOR YOUR JOY HOME.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

How do you get service? To make a claim under the Limited Warranty, please contact JOY Home Support . You must provide your name, contact information and the serial number of your JOY Home to receive support. You may also be required to provide a purchase receipt.

Other limitations: No vendor, seller, authorized reseller, employee or representative of JOY or its affiliates or any third party is authorized to make any modification, extension or addition to this Limited Warranty. If any term of this Limited Warranty is held to be illegal or unenforceable, the remaining terms of this Limited Warranty will remain in full force and effect.

How state and other laws apply to you: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.