


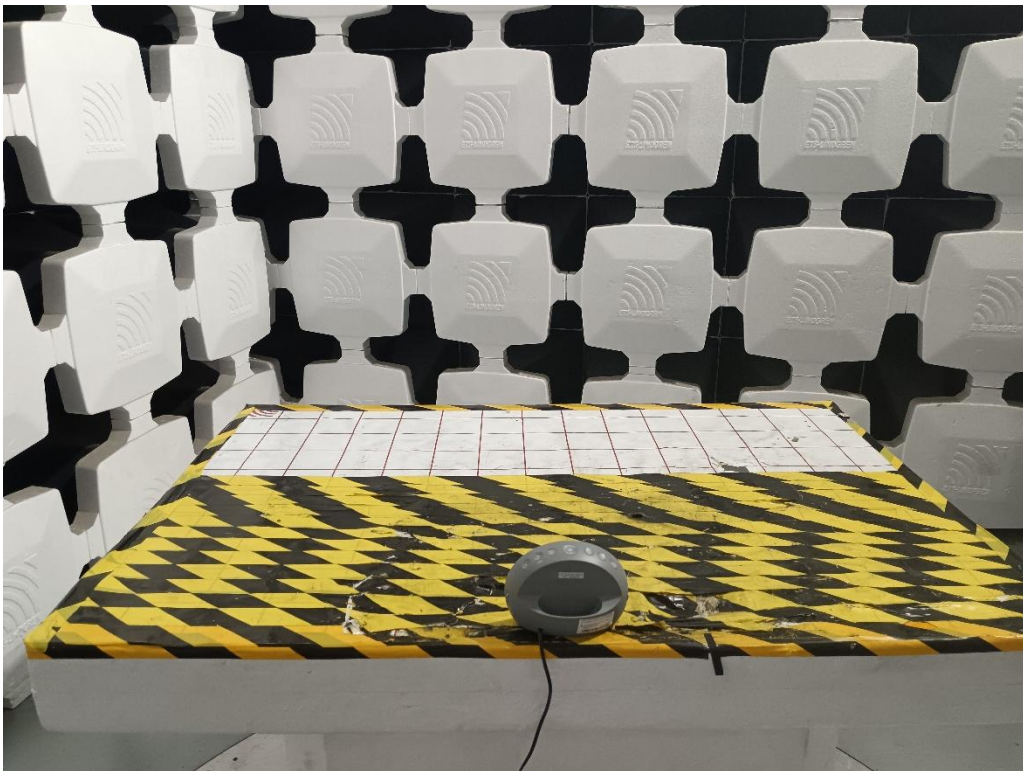

9KHz to 30MHz

(The EUT was placed in the center of the turntable)




30MHz to 1GHz

(The EUT was placed in the center of the turntable)



1GHz to 18GHz

(The EUT was placed in the center of the turntable)

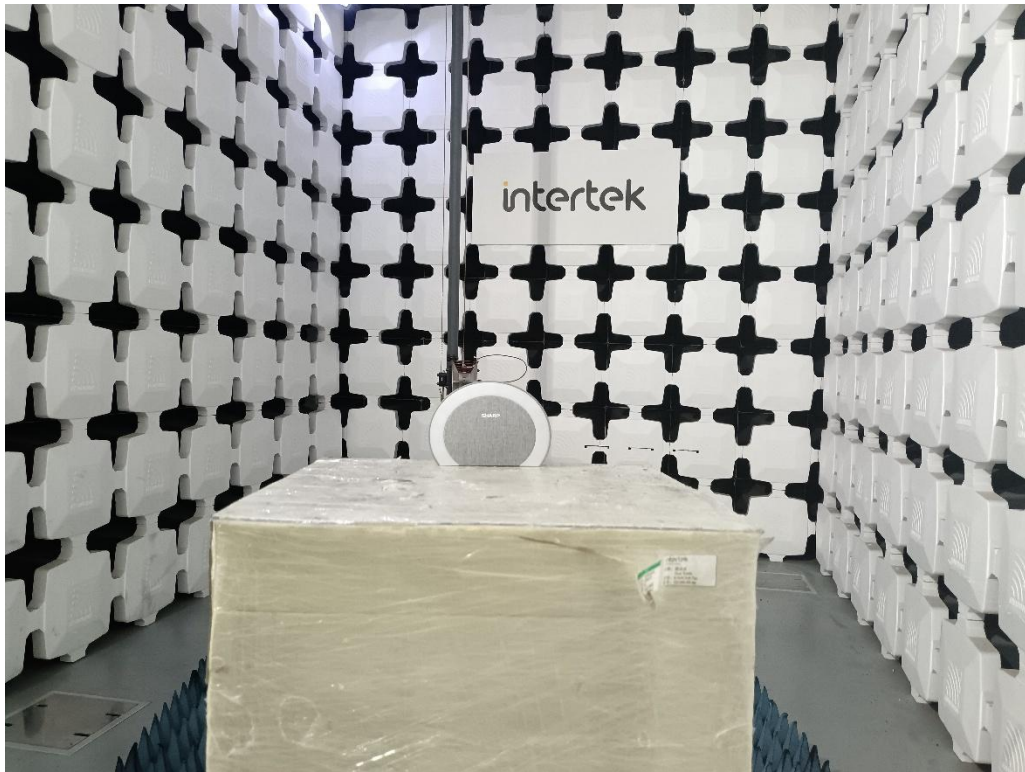

18GHz to 40GHz

(The EUT was placed in the center of the turntable)