


SHARP

LED Alarm Clock with Wireless Vibration Puck Instruction Manual & Warranty

ALARM CLOCK INSTRUCTION MANUAL & WARRANTY

Thank you for your purchase of this quality clock. The utmost care has gone into the design and manufacture of your clock. Please read these instructions and store them in a safe place for future reference.

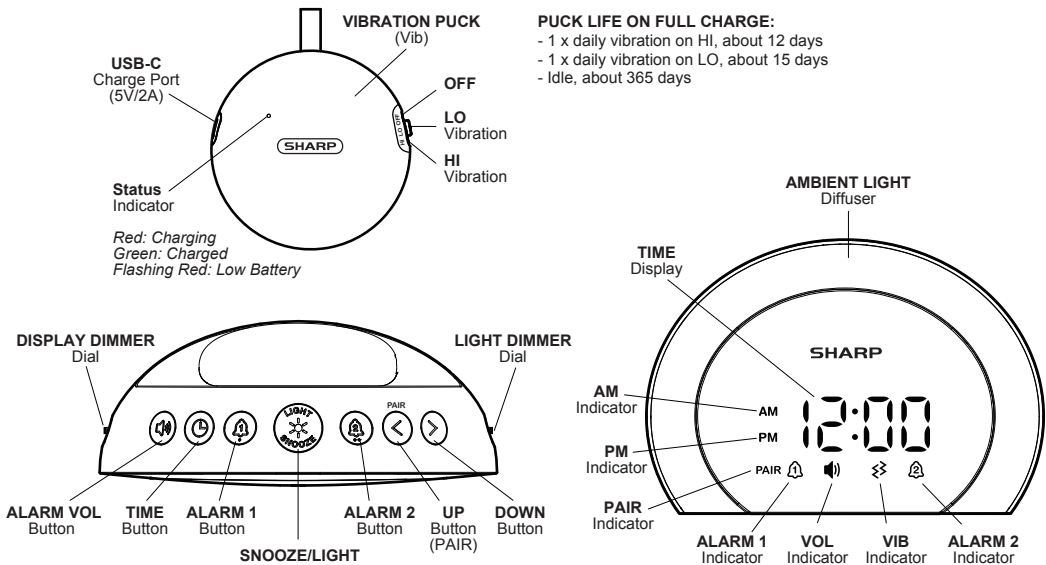

PUCK LIFE ON FULL CHARGE:
- 1 x daily vibration on HI, about 12 days
- 1 x daily vibration on LO, about 15 days
- Idle, about 365 days

POWER SUPPLY

- Begin by plugging power cord into a standard household outlet. The clock will display 12:00 and need to be set.
- Charge the **Vibration Puck** using the included USB-C to USB-C cord. Connected to the puck's USB-C port with one end of the USB-C cord and the other cord end to any USB-C charge port that does not exceed 5V/2A (MAX) in power.

TIME SETUP

- Press and hold the **TIME** button for 2 seconds to activate time setting, **DISPLAY** will flash.
- Press the **UP** or **DOWN** buttons to select **12** or **24hr** time format.
- Press the **TIME** button to confirm the **12** or **24hr** format, **HOURL** will begin to flash.
- Press the **UP** or **DOWN** buttons to the correct **HOURL**.

NOTE: In 12hr format, the **AM** or **PM** indicator will light when the **HOURL** is advanced into the **AM** or **PM** time.

- Press the **TIME** button to confirm the **HOURL**, **MINUTES** will begin to flash.
- Press the **UP** or **DOWN** buttons to the correct **MINUTE**.
- Press the **TIME** button to confirm and save the time setting.

Display will stop flashing.

VIBRATION SETUP (VIB)

- When the clock first receives power the **PAIR** icon will blink, set the **Vibration Puck** switch to **LO** or **HI**, if it's not already. The blue light on the **Vibration Puck** will start flashing.
 - When paired successfully, the alarm clock's **PAIR** icon will stop flashing and stay lit on the display.
- The **Vibration Puck's** blue light will turn off.

NOTE: The **PAIR** icon will blink whenever connection between the clock and the vibration puck is interrupted.

The **PAIR** icon will blink if:

- The vibration puck needs charging.
- The vibration puck's switch is turned to OFF.
- The vibration puck lost connection from a power outage and needs to be paired again.

While connecting, if the clock and puck are **NOT** paired in **60 seconds** the **PAIR** icon will disappear from the display. The puck will **NOT** vibrate while charging.

IN THE EVENT OF A LOST CONNECTION:

Press and hold the **UP (PAIR)** button on the alarm clock for 5 seconds.

The **PAIR** icon will flash rapidly, entering pairing mode.

Set the **Vibration Puck** switch to **LO** or **HI**. The blue light on the **Vibration Puck** will start flashing.

- When paired successfully, the alarm clock's **PAIR** icon will stop flashing and the **Vibration Puck's** blue light will turn off.

DUAL ALARM SETUP & LOW / HIGH ALARM VOLUME SETUP

- Alarm Setting Flow:** Hour > Minute > Alarm Mode (**S01** Beep+Vib, **S02** Beep, **S03** Vib)
- Press and hold the **ALARM 1** or **2** button for 2 seconds to activate alarm time setting, **HOURL** will flash.
- Press the **UP** or **DOWN** buttons to the correct **HOURL**.

NOTE: In 12hr format, the **AM** or **PM** indicator will light when the **HOURL** is advanced into the **AM** or **PM** time.

- Press the **ALARM 1** or **2** button to confirm the **HOURL**, **MINUTES** will begin to flash.
 - Press the **UP** or **DOWN** buttons to correct **MINUTE**.
 - Press the **ALARM 1** or **2** button to confirm the **MINUTE**, **ALARM MODE** will begin to flash.
 - Press the **UP** or **DOWN** buttons to select the alarm mode (**S01** Beep+Vib, **S02** Beep, **S03** Vib), default is **S01**.
 - Press the **ALARM 1** or **2** button to confirm and save alarm 1 or 2 setting.
- Display will stop flashing.
- In time display mode, press the **ALARM VOL** button to switch between **LO** and **HI** volume levels.

USING THE DUAL ALARM

- Press the **ALARM 1** or **2** button to turn the alarm **ON**, the **alarm 1** or **2** indicator will light. The alarm time will show on the display for 3 seconds and then return back to displaying the time.
- Press the **ALARM 1** or **2** button again to turn the alarm **OFF** and the **alarm 1** or **2** indicator will no longer be visible.

USING THE VIBRATION PUCK

- In **S01** or **S03** alarm mode, slide the switch to **LO** or **HI**. When the alarm sounds, the **Vibration Puck** will activate.
- Slide the switch to OFF, the **Vibration Puck** will turn off.

NOTE: The **Vibration Puck** will not vibrate while charging.

VIBRATION PUCK STATUS INDICATOR

- Red:** Charging. **Green:** Fully charged. **Flashing Red:** Low battery.
- Blue:** Vibration puck paired. **Flashing Blue:** Attempting to pair vibration puck.

USING THE SNOOZE

- Pressing the **SNOOZE/LIGHT** button when the wake-up alarm is sounding will cause the alarm to pause and the alarm will sound again in 9 minutes. This will happen each time when the **SNOOZE/LIGHT** button is pressed.

USE THE AMBIENT LIGHT

- Press the **SNOOZE/LIGHT** button to turn **ON** the **AMBIENT LIGHT**.
 - When the **AMBIENT LIGHT** is **ON**, press the **SNOOZE/LIGHT** button again to switch the color of the **AMBIENT LIGHT**.
- Color order:** C01 White > C02 Colorful Rotation > C03 Orange > C04 Yellow > C05 Red > C06 Green > C07 Cyan > C08 Blue > C09 Purple.
- Use the **LIGHT DIMMER** dial to adjust the ambient light brightness: **L01** to **L10**, 10 selectable brightness levels.
 - Press and hold the **SNOOZE/LIGHT** button for 2 seconds to turn **OFF** the **AMBIENT LIGHT**.

USING THE DIMMER

- Use the **DISPLAY DIMMER** dial to adjust the display brightness. There are 10 levels of brightness.

OPTIONAL BATTERY BACKUP

- Remove the **BATTERY** door and insert 2 new "AAA" batteries (not included) in the direction of the polarity symbols.
- Please make sure the batteries (preferably alkaline) are new and inserted correctly.
- The battery will hold **ALARM 1 / ALARM 2 / TIME** settings if the power is interrupted. There will be no display, no light, and no alarm sound under battery power. If there is no battery and the power is interrupted, the clock will display 12:00. The **ALARM 1 / ALARM 2 / TIME** needs to be reset.

CARE OF YOUR CLOCK

- Replace the backup battery annually, or store the clock without a battery when not in use. A soft cloth or a paper towel may be used to clean your clock. Do not use any corrosive cleaner or chemical solutions on the clock. Keep the clock clean and dry to avoid any problems.

TROUBLE SHOOTING GUIDE

1. NO POWER / SCREEN DOES NOT LIGHT UP

- Check if the power outlet works; try another outlet or ensure the power cord is securely connected.
- Turn the **DISPLAY DIMMER** knob (left side) to brighten the screen (may have been turned to minimum brightness).

2. AMBIENT LIGHT NOT WORKING / ABNORMAL BRIGHTNESS

- Turn on ambient light: Short press **SNOOZE/LIGHT**
- Turn off ambient light: Long press **SNOOZE/LIGHT** for 2 seconds.
- If ambient light does not turn on: Rotate the **LIGHT DIMMER** knob (right side) to brighten.
- Change color: While ambient light is on, short press **SNOOZE/LIGHT** repeatedly to cycle colors.

3. ALARM DOES NOT BEEP / VIBRATE

- Confirm alarm is enabled: Press **ALARM 1/ALARM 2**; / icon appears on screen when active.
- Verify alarm time is set correctly.
- Check volume: Press **ALARM VOL** to switch between **HI (high)** / **LO (low)**.
- Check alarm mode: May be set to vibrate only or beep only.
- Pressing any key during alarm stops it for the day; resumes automatically the next day.

4. ALARM CANNOT BE TURNED OFF / KEEPS RINGING

- Pause alarm for the day: Short press any key except **SNOOZE/LIGHT**.
- Disable alarm permanently: Press **ALARM 1** or **ALARM 2** again.
- Snooze mode: Press **SNOOZE/LIGHT** while ringing; alarm repeats after 9 minutes.
- Alarm stops automatically after a maximum of 60 minutes.

5. WIRELESS VIBRATOR DOES NOT VIBRATE

- Check pairing: Long press **UP (PAIR)** for 5 seconds until **PAIR** icon blinks quickly. Set vibration puck switch to **HI** or **LO**; puck's blue light blinks during pairing. When paired successfully, puck's blue light turns off and **PAIR** icon stays lit on the clock.
- Set vibration puck switch to **HI** or **LO** (OFF disables operation).
- Charge vibration puck via USB-C port: Red light = charging, Green light = fully charged.
- Vibration stops automatically after a maximum of 60 minutes.
- Red blinking battery indicator **STOPS** vibration, please fully charge.
- Vibration signal is **NOT** received during charging.

6. HOW TO RECONNECT THE VIBRATOR AFTER POWER LOSS OR SHUTDOWN?

- When the vibration puck is off, the **PAIR** icon on the clock blinks slowly. Set the puck switch to **LO** or **HI**; the blue light blinks during pairing. When paired successfully, the puck's blue light turns off and the **PAIR** icon stays lit on the clock.

7. WILL MULTIPLE UNITS (2 OR MORE) INTERFERE WITH EACH OTHER?

- Pair them one at a time. After pairing is complete, they will not interfere with each other.

8. HOW TO RECONNECT AFTER THE CLOCK LOSES POWER AND RESTARTS?

- When the clock restores power, the **PAIR** icon blinks slowly. Set the vibration puck switch to **LO** or **HI**; the puck's blue light blinks during pairing. When paired successfully, the puck's blue light turns off and the **PAIR** icon stays lit on the clock's display.

BUTTON	OPERATION
 ALARM VOL	Press to select HI or LO alarm volume.
 TIME	Press & hold 2 sec to enter Time Setting. 12/24Hr → Hour → Minute
 ALARM 1 or 2	- Press & hold 2 sec to enter Alarm 1 or 2 Setting. Hour → Minute → Alarm Mode - Press to select alarm ON or OFF.
 SNOOZE/LIGHT	- Press to Snooze active sounding alarm for 9 minutes. - Press to turn ON the ambient Light, when the alarm is not sounding. Press again to change colors. - Press & hold 2 sec to turn OFF the ambient Light.
 UP	- Press to Increase active setting value. - Press & hold 5 sec to turn ON pairing mode for Vibration Puck.
 DOWN	Press to Decrease active setting value.

BATTERY PRECAUTIONS

- Only batteries of the same or equivalent type are to be used.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.
- Exhausted batteries are to be removed from the product.
- Do not dispose of batteries in fire; batteries may explode or leak.
- Adult assembly required to replace and remove battery.

FCC INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

One Year Limited Warranty

MZB & CO., LLC warrants the original consumer purchaser of this product that it shall be free of defects in materials and workmanship for one year from the purchase or delivery date of this product. Defects caused by tampering, improper use, unauthorized modifications or repairs, immersion in water or abuse are not covered by this warranty. If customer service is needed, please contact us by telephone or email:

1-800-221-0131 ask for Customer Service

custserv_clocks@mzb.com

Monday - Friday 9:00AM - 4:00 PM EST

Having the model number and your receipt will help us provide you faster service. MZB will not be liable for any loss or damages of any kind; from any breach of warranty either expressed or implied relating to the product. Since some states do not allow the exclusion or limitation of incidental or consequential damages, this limitation may not apply to you.

Printed in China Model : SPC5171
SHARP, registered in the U.S. Patent & Trademark Office.

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions - All the safety and operating instructions should be read before this product is operated.
- Keep these instructions - The safety and operating instructions should be retained for future reference.
- Heed all warnings - All warnings on the appliance and in the operating instructions should be adhered to.
- Follow all instructions - All operating and use instructions should be followed.
- Do not use this apparatus near water - The appliance should not be used near water or moisture - for example, in a wet basement or near a swimming pool, and the like.
- Clean only with dry cloth.
- Do not block any ventilation openings, Install in accordance with the manufacture's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug the apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Please keep the unit in a good ventilation environment.
- CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth. Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.

WARNING: All above markings were located on the external enclosure of the apparatus, except for label of Date Code was pasted inside the battery compartment. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Caution: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent on similarly qualified persons in order to avoid a hazard

WARNING: The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

WARNING: Do not expose power bank to heat or fire. Do not store in direct sunlight or in a vehicle.

WARNING: Use of a power supply or charger not recommended or sold by power bank manufacturer may result in a risk of fire or injury to persons.

DIGITAL ALARM CLOCK

 This lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (ON BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	 The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product
--	--	---

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE, OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

Please read this before operating your unit.