

说明书

Customer service hotline: +86-400-6982855

  
  
  
Scan the QR code to download the "PopuMusic" APP

### APP for Poputar



**Poputar customers have free VIP APP membership**

All changes are subject to the latest version

  
iOS / Google play

### Warranty Statement

Note: This warranty statement is only for Poputar smart guitars (hereinafter called "Product") sold in the Mainland China (excluding Hong Kong, Macao and Taiwan).

For Poputar encountering performance faults within 7 days from the date of purchase, you can choose a new one instead of the invoice amount, change it to Poputar of the same model with the same specifications or repair the fault.

Customer service Email: support@poputar.com

| Name    | Validity period | Performance fault                                                                                                                                                                                                                                                                 |
|---------|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Poputar | 1 year          | 1. Incidents listed in the manual are treated<br>2. Issues and LED lights on the Poputar board<br>3. Short circuit protection<br>4. Issues of strings and related items in performance<br>5. Issues of other accessories<br>6. Issues of strings and related items in performance |

For Poputar sold in US and Canada, please refer to the additional warranty card: "US/Canada Limited Warranty."


For Poputar sold in other countries, please refer to the additional warranty card.

### Poputar Smart Guitar Kepma Co-brand Edition Manual


### Connect to the Populele via Bluetooth

- Download the "PopuMusic" APP in the APP Store or Google Play, install it and enable Bluetooth on your phone.
- Press the power button on the back of Poputar if the LED lights flash in a doubling mode, the Poputar has started up successfully.
- Open the "PopuMusic" APP, complete the registration and log in.

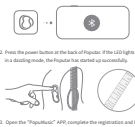

4. Tap the icon of the smart connection and wait. If the Poputar is found, a small guitar icon will appear on the screen.



### Common Problems

**1. What should you do when the Bluetooth connection fails?**

- Make sure you connect via Bluetooth to the "PopuMusic" APP or through the Bluetooth connection on your phone.
- Make sure that the Poputar has started up. Press the button on the back of Poputar to turn it on. After the Poputar is on, connect it to Bluetooth. After it lights up, the Bluetooth icon on the screen will appear. After successful connection to Bluetooth, the connecting interface will disappear.
- The power of the battery may be weak and the power storage time will be short.
- Check the Bluetooth logo on the LED light. If the light is not lit, please check the power of the battery.

**2. What should you do when the APP cannot recognize or successfully register during operation?**

- Check whether you are using "PopuMusic" APP, installed in the storage of your phone. The APP can recognize only after the function is installed.
- Bring the Poputar close to the phone. Please try to get closer to the phone.
- Reset the connection of the Poputar. Connect the Poputar to the phone and then disconnect it. After the connection is successful, the connection will be successful.

**Notes:**

- Do not place the Poputar in strong places or use violence. Protect the Poputar from fire, explosion, lightning, etc. Do not use it in the rain or in the snow.
- Do not disassemble the circuit of the Poputar or tamper with it, causing the internal circuit to be damaged.

### Specifications

| Model                | Poputar Smart Guitar Poputar Co-brand Edition |
|----------------------|-----------------------------------------------|
| Size                 | 36 inches Smart Guitar                        |
| Material             | Placed with Spruce Top + Mahogany             |
| String               | Copper String                                 |
| Body material        | ABS                                           |
| Body                 | Fully Extended Chromed Metal                  |
| Color                | Black Case                                    |
| Design               | Modernized                                    |
| Bluetooth connection | Bluetooth 5.0 BLE                             |
| Power supply         | 2 x 1.5V AAA Battery                          |
| Support system       | Android 5.0, iOS 8.0                          |
| Net weight           | 5.8kg                                         |
| Application scenario | Acoustic guitar                               |

Note: "Net" will change according to the configuration of the Poputar. Please refer to the manual for more details.

For more detailed information, please refer to the Poputar Co-brand Edition Manual.

99mm

70mm

正

反

**FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.