

2D Wireless Barcode Scanner

User Guide




Warning: Do not arbitrary scan the barcodes in this manual


Ver 1.0
US-EN/ ZH-CN



Description

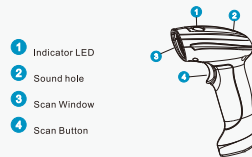

Disconnect cable

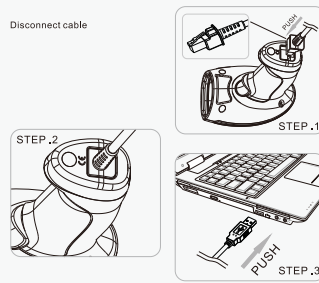

It is strongly recommended not to connect the scanner to your front USB interface of desktop computer. Due to different degrees of aging computer may appear insufficient power supply situation. Scanner may also appear unstable, and many other fault performance.

Disconnect cable





Bluetooth 4.0

1. Open the Bluetooth and searching new device(Phone or TabletPC)
2. Turn on the scanner and press the trigger for 10 seconds or more, then by your Bluetooth device you can search a new Bluetooth keyboard device.
3. Pair Bluetooth devices, when "Bi Bi" it means you have successfully connected.

Charging and cable transmission

Cable Transmission:Using a cable connected to the main device can be used.

Charger:Using a cable connected to the phone charger or computer USB.

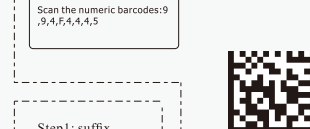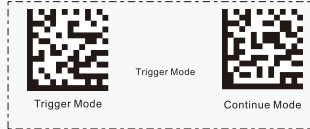

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by Shenzhen Supoin Technology Corp. may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.









HEX:0HEX:1

HEX:2HEX:3

HEX:4HEX:5

HEX:6HEX:7

HEX Digit Barcodes









 
 
 
HEX:8HEX:9

HEX:AHBX:B

HEX:CHEX:D

HEX:EEHX:F

HEX Digit Barcodes



Pair Status

Common Mode

Memory Mode

Upload for DATA

Transfer Mode

Auto Memory Mode

Total for DATA

Remove All DATA

Saving Mode - 2 MIN

Saving Mode - 20SEC

Saving Mode - 5 MIN

Saving Mode - 60SEC

Wireless function settings

Standby Delay



Saving Mode - DISABLE

Saving Mode - 10 MIN

Emulation - COM

HD KEYBOARD

USB

United States Layout

Austria / Germany

France Layout

United Kingdom Layout

Italy Layout

Russia Layout

GB2312

UTF-8

TXT/Excel

WORD

Standby Delay

Interface Mode

KB Layout

Output Text Encoding

Chinese Translate