 


GRYT

BEDROCK WATERPROOF SPEAKER

USER MANUAL

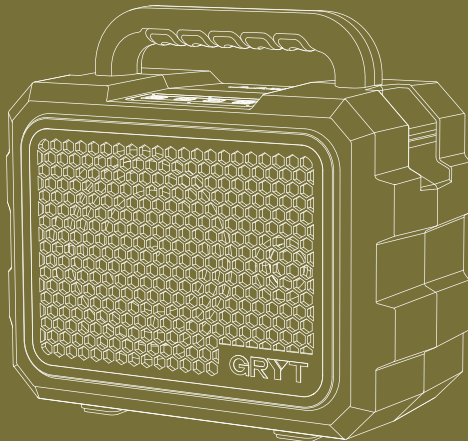

FCC ID: 2AKZ8-LBS271

READ ALL INSTRUCTIONS BEFORE USE AND RETAIN FOR FUTURE REFERENCE

SAFETY PRECAUTIONS

Please read all instructions carefully and follow them as directed.

Do not disassemble, repair, or modify this device without proper authorization.

Do not operate this device with damaged cables or if the device has malfunctioned or been damaged in any way.

Avoid using or charging this device near heat sources such as radiators, hot surfaces, or open flames.

Do not clean this device with corrosive chemicals or solvents. Use a dry or slightly damp cloth with mild detergent.


During thunderstorms, do not charge this device using a power adapter.

Dispose of packaging, batteries, and electronic products properly in accordance with local regulations.

If you need to dispose of the unit, do so in accordance with local ordinances.

Ensure the charging port, power adapter, and power outlet are completely dry before connecting to power. Do not charge the device in wet conditions.


CONTROL PANEL

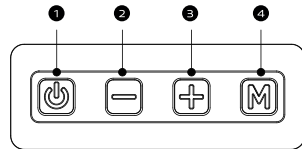

- 1 Power Button: Press and hold for 3 seconds to power the speaker on or off. Press once to play or pause music.
- 2 Button: Press once to go to the previous track. Press and hold to decrease the volume.
- 3 Button: Press once to go to the next track. Press and hold to increase the volume.
- 4 Button: Press once to enter Party Mode. Press twice to enter TWS Mode. Press and hold for 3 seconds to turn the LED lights on or off.

BACK PANEL

Note: Open the rubber cover on the back of the speaker to access the rear panel. Ensure the cover is securely closed during use to maintain water resistance.

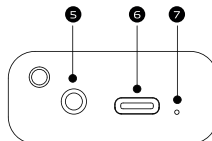

- 5 Charging Indicator Light: Red light indicates charging. When fully charged, the red light turns off and the blue light turns on.
- 6 USB-C Port: Used to charge the speaker.
- 7 AUX Input: 3.5 mm audio input.

OUTDOOR USE AND CARE

This speaker is rated IP67, meaning it is protected against dust and temporary water submersion. It is suitable for outdoor use and everyday adventures.

For optimal battery performance, avoid fully draining the battery before recharging.

To help maintain battery health, fully charge the device at least once every three months. Battery life may vary depending on usage and environmental conditions.

Do not store the speaker in extremely hot or cold conditions for extended periods. Your speaker may require periodic cleaning:

Clean the surface with a soft, damp cloth (water only).

Do not use solvents, chemicals, or abrasive cleaners.

DEVICE OPERATION

POWER ON/OFF

Press and hold the Power button for 3 seconds to turn the speaker on or off.

If a previously connected Bluetooth device is within range, the speaker will reconnect automatically.

If no device is connected for 5 minutes, the speaker will automatically power off.

BLUETOOTH PAIRING

After powering on, the indicator light will stay on steadily. Open your device's Bluetooth settings and select "GRYT BEDROCK_BT" to pair.

Pairing Issues:
Ensure the speaker is not connected to another device. Remove the speaker from your device's Bluetooth list, then reconnect. If pairing issues persist, restart the speaker and try again.

LED ON/OFF

Press and hold the "M" button for 3 seconds to turn the LED lights on or off.

Turning off the LED lights may help extend battery life.

TWS MODE

TWS (True Wireless Stereo) allows two speakers

to function as dedicated left and right audio channels for a stereo listening experience.

Power on both speakers and double-press the "M" button on each speaker to enter pairing mode.

Once paired successfully, one speaker will announce "Left Channel" and the other will announce "Right Channel."

To exit TWS mode, double-press the "M" button on either speaker.

Pairing Issues:
Ensure neither speaker is connected to another Bluetooth device before pairing. If pairing fails, disable Bluetooth on nearby devices, restart both speakers, and try again.

PARTY MODE

Party Mode allows multiple compatible speakers to connect and play the same audio simultaneously.

Use one speaker as the master speaker and connect it to your phone via Bluetooth.

Press the "M" button on the master speaker to enter Party Mode.

Power on the second speaker and press the "M" button once to connect it to the master speaker.

To add additional speakers, repeat the same process for each speaker.

If Party Mode fails to activate, verify that the master speaker is still in Party Mode and that the secondary speaker is not connected to another device.

PARTY MODE OPERATION

After the main speaker is powered on and connected via Bluetooth, press the "M" button once to activate Party Mode.

Power on all additional speakers and press the "M" button once on each speaker. The speakers will automatically connect to the main speaker and play audio in sync.

Only the main speaker supports playback controls, including play/pause, previous/next track, and volume adjustment. Secondary speakers will follow the main speaker and do not support independent controls.

Remarks

- When the speaker is in Party Mode, the Bluetooth device name "GRYT BEDROCK_BT" may not be visible. Exit Party Mode to make the speaker discoverable again.
- If the main speaker moves out of Bluetooth range or loses connection, all connected speakers will disconnect automatically after 5 minutes.
- If a speaker enters Party Mode without

successfully connecting to the main speaker, it may remain powered on. Turn the speaker off manually when not in use to help conserve battery life.

Notes
Only compatible GRYT speakers that support Party Mode can be connected.

When using multiple speakers, play/pause, track controls, and volume adjustments can only be controlled from the primary speaker. All secondary speakers will follow the primary speaker.

AUX MODE

Connect an audio cable to the AUX input port. The speaker will automatically switch to AUX mode and begin playing audio from the connected device.

VOLUME / TRACK ADJUSTMENT BUTTONS

Press the "-" button once to go to the previous track. Press and hold to decrease the volume.

Press the "+" button once to go to the next track. Press and hold to increase the volume.

CHARGING THE SPEAKER

A low-battery voice prompt will play when the battery level is low.

Charge the speaker using the included USB-C

cable. The red indicator light will remain onwhile charging and blue light stays steady when fully charged.

If charging takes an unusually long time, try using a higher-output USB power adapter.

Charge the speaker at least once every 1–2 months to help maintain battery performance and prevent low-power protection mode.

TROUBLESHOOTING

- If charging takes an unusually long time, try using a higher-output USB power adapter.
- Use a high-quality USB-C charging cable. Low-quality cables may reduce charging performance.
- Lower volume levels can significantly extend playback time. Expected playback time is approximately 4–5 hours at 100% volume, 5–10 hours at 80% volume, and up to 30 hours at 50% volume.
- Low-quality audio sources may cause distortion or buzzing. Reduce the volume if this occurs.
- For TWS and Party Mode operation, keep your phone and speakers within 15 meters (49 feet) of each other. Electrical motors, Wi-Fi devices, and other wireless equipment may cause interference.
- If the battery level is too low, audio may cut out. Charge the speaker before continuing use.

 
- If a button does not respond, it may have been pressed too quickly. Wait at least 0.1 seconds between button presses.
- Ensure the USB-C port cover is fully closed before exposing the speaker to water. Water ingress may cause product damage. Avoid prolonged exposure to seawater or heavy rain to help prevent corrosion.

WHAT'S INCLUDED



Speaker

A



Type-C
Charging Cable

B



User Manual

C

WARRANTY

Your Gryt speaker is backed by a 1-year limited warranty from the date of purchase, provided it is used in accordance with the instructions included in this manual. This warranty covers defects in materials and workmanship under normal use.

If a defect arises during the warranty period, the product will be repaired or replaced at no cost, at the manufacturer's discretion. If repair is not possible, a replacement unit will be provided.

This warranty does not cover:

- Damage caused by misuse, abuse, improper handling, or unauthorized repairs
- Normal wear and tear
- Water exposure beyond the product's IP67 rating
- Products without valid proof of purchase

WARRANTY CLAIMS & SUPPORT

To request warranty service, please provide:

- Proof of purchase
- A brief description of the issue
- Photos or videos (if applicable) to help expedite resolution

Do not return accessories unless requested. For customer support, please contact: hello@shopjoyc.com

FCC COMPLIANCE & SAFETY INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device,pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

ADVENTURE SOUNDS BETTER WITH GRYT



WWW.GRYTAUDIO.COM
📱 📺 📶 📷 @GRYTAUDIO

BEDROCK | WATERPROOF SPEAKER

Sound:	DSP Enhanced
Output Power:.....	30W
Playtime:.....	Up to 30 Hours at 50% Volume
Waterproof Rating:.....	IP67
Bluetooth Version:.....	5.4
Bluetooth Range:.....	Up to 49 ft (No Obstacles)
Charging Time:	4.5–5 Hours
Battery:	66.6Wh Rechargeable Lithium-ion Battery
Charging Port:.....	USB-C
Product Size:.....	13.39 * 12.15 * 7.18in

⚠️WARNING

Keep away from flames and sparks.
Do not overcharge the battery.
Contains a lithium-ion battery (66.6Wh).

THIS PRODUCT MAY EXPOSE YOU TO CHEMICALS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, BIRTH DEFECTS, OR OTHER REPRODUCTIVE HARM.