

 
115 mm

GRYT

OUTPOST

WATERPROOF SPEAKER


USER MANUAL

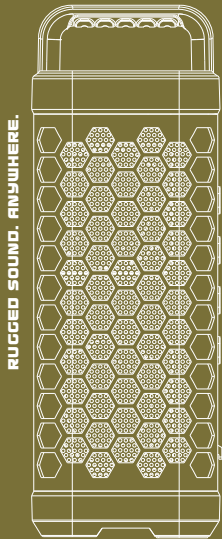

FCC ID:2AKZ8-LBS279

READ ALL INSTRUCTIONS BEFORE USE AND RETAIN FOR FUTURE REFERENCE

 PRODUCT OPERATION

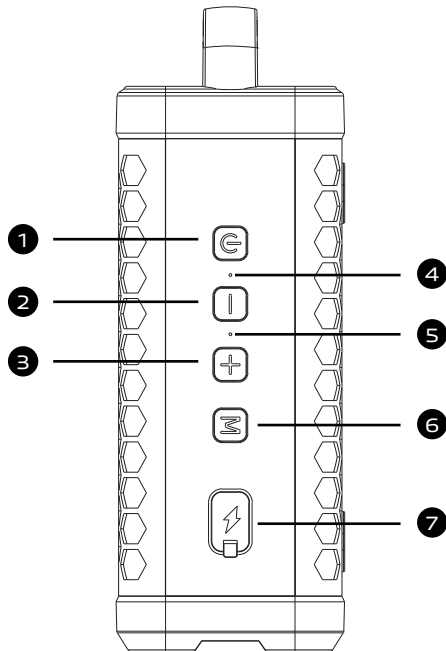

1. Power / Play / Pause

2. Volume - / Previous Track


3. Volume + / Next Track

4. Indicator Light
5. Microphone

6. TWS / Party Mode / LED On off / EQ

7. USB-C Charging Port

WHAT'S INCLUDED

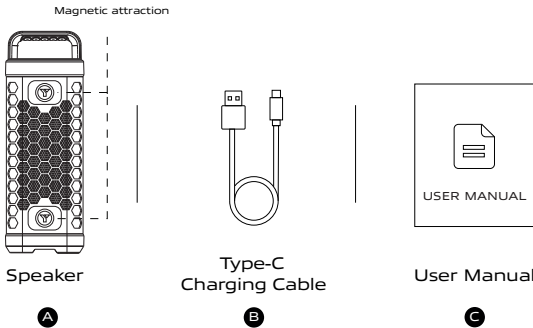

POWER ON/OFF

Press and hold the Power button for 3 seconds to turn the speaker on or off.

If a previously connected Bluetooth device is within range, the speaker will reconnect automatically.

If no connection is detected for 5 minutes, the speaker will automatically power off.

BLUETOOTH PAIRING

After powering on, The white indicator light is always on after startup. Open your device's Bluetooth settings and select "GRYT OUTPOST_BT" to pair.

Pairing Issues:

Press the "M" button once to switch to Bluetooth mode.

Remove the speaker from your device's Bluetooth list and reconnect.

Ensure the speaker is not connected to another device, then restart the speaker and try again.

BOOST / CLASSICAL EQ

EQ (Equalizer) adjusts the speaker's sound profile.

Press the "M" button three times to switch between Boost and Classical EQ modes.

Boost mode enhances bass and overall audio impact. Classical mode provides a more balanced listening experience.

LEDS ON/OFF

Press and hold the "M" button for 3 seconds to turn the LED light on or off.

Turning off the LED light may help extend battery life.

TWS MODE

TWS (True Wireless Stereo) allows two speakers to function as dedicated left and right audio channels for a stereo listening experience.

Power on both speakers and double-press the "M" button on each speaker to enter pairing mode.

Once paired successfully, one speaker will announce "Left Channel" and the other will announce "Right Channel."

To exit TWS mode, double-press the "M" button on either speaker.

Pairing Issues:

Before pairing, make sure the speaker is fully charged and neither speaker is connected to any other Bluetooth device.

If pairing fails, disable Bluetooth on nearby devices, restart both speakers, and try again.

PARTY MODE

Party Mode allows multiple compatible speakers to connect and play the same audio simultaneously.

Use one speaker as the master speaker and connect it to your phone via Bluetooth.

Press the "M" button on the master speaker to enter Party Mode.

Power on the second speaker and press the "M" button once to connect it to the master speaker.

To add additional speakers, repeat the same process for each speaker.

FCC CAUTION:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RADIATION EXPOSURE STATEMENT:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

80 mm

If Party Mode fails to activate, verify that the master speaker is still in Party Mode and that the secondary speaker is not connected to another device.

Notes:
When making calls in TWS/Party mode, only the primary speaker supports call functions.

When using multiple speakers, play/pause, track controls, and volume adjustments can only be controlled from the primary speaker. All secondary speakers will follow the primary speaker.

VOLUME / TRACK ADJUSTMENT BUTTONS
Press the "-" button once to go to the previous track. Press and hold to decrease the volume.

Press the "+" button once to go to the next track. Press and hold to increase the volume.

CHARGING THE SPEAKER
A low-battery voice prompt will play when power is low.

Charge the speaker using the included USB-C cable. The red indicator light will remain on while charging and will turn off once fully charged.

If charging takes an unusually long time, try using a higher-output USB power adapter.

Charge the speaker at least once every 1–2 months to help maintain battery performance and prevent low-power protection mode.

TROUBLESHOOTING

1. If charging takes an unusually long time, try using a higher-output USB power adapter.
2. Use a high-quality USB-C charging cable. Low-quality cables may reduce charging performance.
3. Lower volume levels can significantly extend playback time. Expected playback time is approximately 3.5 hours at 100% volume, 4–8 hours at 80% volume, and 8–10 hours at 50% volume.
4. Low-quality audio sources may cause distortion or buzzing. Reduce the volume if this occurs.
5. For TWS and Party Mode operation, keep your phone and speakers within 15 meters (49 feet) of each other. Electrical motors, Wi-Fi devices, t

1. other wireless equipment may cause interference.
2. Thin iron sheets or stainless steel surfaces may reduce magnetic holding strength. Mount the speaker on a thick iron surface, or secure it using compatible brackets or hangers (not included).
3. If a button does not respond, it may have been pressed too quickly. Wait at least 0.1 seconds between button presses.
4. Ensure the USB-C port cover is fully closed before exposing the speaker to water. Water ingress may cause product damage. Avoid prolonged exposure to seawater or heavy rain to help prevent corrosion.

Note:
Always keep the rubber cover closed during water exposure.

WARRANTY
Your GRYT speaker is backed by a 1-year limited warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

If a defect arises during the warranty period, the product will be repaired or replaced at the manufacturer's discretion. If repair is not possible, a replacement unit may be provided.

This warranty does not cover:

Damage caused by misuse, abuse, improper handling, or unauthorized repairs

Normal wear and tear

Water exposure beyo nd the product's IP67 rating

Products without valid proof of purchase

For warranty support, please contact: hello@shopjoyc.com

WARRANTY CLAIMS & SUPPORT

To request warranty service, please provide:

- Proof of purchase
- A brief description of the issue
- Photos or videos (if applicable) to help expedite resolution

Do not return accessories unless requested.
For customer support, please contact:
hello@shopjoyc.com

ADVENTURE SOUNDS BETTER
WITH GRYT



WWW.GRYTAUDIO.COM
■ 📱 📷 📺 f @GRYTAUDIO

OUTPOST | WATERPROOF SPEAKER

Sound: - - - - - DSP Enhanced

Party Mode: - - - - - Multi-Speaker Pairing

Bluetooth Version: - - - - - 5.4

Battery: - - - - - 18.5Wh

Charging Time: - - - - - 2.5 - 3 Hours

Play Time: - - - - - Up to 8 hours
(50% volume)

Bluetooth Range: - - - - - Up to 49 ft (No Obstacles)

Speaker Output: - - - - - 30W

Charge Port: - - - - - USB-C

Waterproof Rating: - - - - IP67

⚠ WARNING

Keep away from flames and sparks.
Do not overcharge the battery.
Contains a lithium-ion battery (18.5Wh).

THIS PRODUCT MAY EXPOSE YOU TO CHEMICALS
KNOWN TO THE STATE OF CALIFORNIA TO CAUSE
CANCER, BIRTH DEFECTS, OR OTHER
REPRODUCTIVE HARM.