

product manual

product name: Remote controller

Operating instructions:

- 1、 Starting motor power on, checks engine speed. After starting the motor to work for 1s, if starting failed, the throttle begins to sweeping in cycle.
- 2、 When the engine speed is bigger than 1200RPM, it starts successful, and keeps for 2s and then throttle is open fully.
3. When starting for 4s and engine speed is lower than 1200RPM, it says starting failed, restart after 3s. it restarts for 3 times, if it failed for 3 times, it will stop working. Each starting time and waiting time will be 0.5 s longer than last time.

The antenna gain is 2dBi

Note:

User information

Any modification or modifications without permitted may affect user's limitations to operate device.

The device is conventional radio frequency, if not installed and use as manual, it may cause harmful interference to radio communication. if this device does cause interference to radio or TV reception, it can confirm by off or on device, the user can correct interference by following one or more measures:

- add more distance between device and receiver
- consult dealer or ask experienced radio/TV technician for help.