


REMOTE CONTROL USER MANUAL

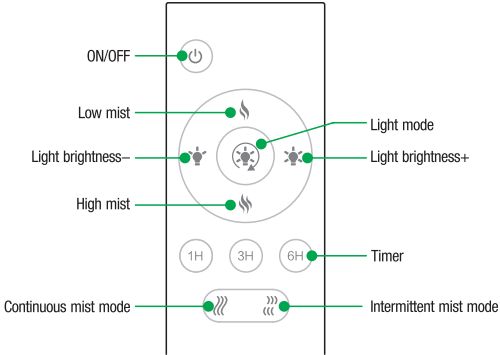

	ON/OFF
	Light mode: Rotate 7 different colors / Pause on any particular color. Long press to turn off the light. Light can work alone.
	7 levels of brightness to adjust(Only available under the 7 different colors rotation mode)
	Low/High mist
1H 3H 6H	Long press to cancel the timing mode with the sound "DD"
	Continuous/intermittent mist mode

Note: When the remote control fail to control the product or the signal is weak, the battery power might be low, please replace a new battery.

Datasheet

Size	L120 × W40 × H16mm	Signal transmission mode	RF
Battery	12V 23A	Max remote distance	8M

Please read the user manual carefully before using it and keep it for future inquiries.

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.