

Model : OZ-TP10	

80.0 mm

480.0 mm

160.0 mm

What's In The Box?

- Sound Stick Magnetic Speaker
- USB-C Charging Cord
- Pinned Sticker
- Instruction Manual

Get To Know Your Sound Stick

Subwoofer

On/Off

Volume

Play/Pause

Bluetooth Indicator

Battery Level

Subwoofer

Built-In Magnet

Charging Port

How To Use Your Sound Stick

1. Charge Sound Stick for two hours or until the four lights on the battery level indicator are on.

2. Press and hold the  button to turn unit on.

3. The speaker will enter into Bluetooth pairing mode with the indicator flashing.

4. Find "Pinned Golf Sound" in your Bluetooth devices list and select it to pair.

5. Once paired and connected, you'll hear an audible confirmation from the Sound Stick and the LED indicator will stay on. Your speaker is ready to use!

Dual Sound Stick Pairing

1. Turn on both Sound Sticks.

2. Press and hold the play/pause-button on one of the speakers for about 2 seconds until you hear a "beep" sound. The default is the primary speaker that you operated the Play/Pause-button of this speaker for pairing initially.

3. Release play/pause button. It can take a few more seconds before speakers connect to each other. Check the indicator lights to distinguish L/R channel: The white light on one speaker is flashing white for every 3 seconds that should be the left channel (the primary speaker); the white light on the other speaker is solid white that should be the right channel.

4. Go into the Bluetooth menu on your phone and pair the speakers with your phone by selecting "Pinned Golf Sound" (it will only display 1 speaker which is both combined in to one connection).

Features

15 Hour Battery Life

Built-In Magnet

5.3 Bluetooth

USB-C Charger

Dual Pairing

Audio Brilliance

Dual Driver Bass

150ft Range

IPX7 Waterproof

One Year Warranty

Tech Specs

- Dimensions | 192*68*67mm
- Weight | 1.32 lbs
- Bluetooth | V5.3
- Playing time | 15 hours
- Waterproof Rating | IPX7
- Battery | Rechargeable 1800mAh*2
- Charging | USB Type C
- TWS Connection | Dual Speaker Pairing

正面

Troubleshooting

- The Sound Stick does not turn on?
 - Please recharge your Sound Stick.
- The Sound Stick does not turn off or does not respond?
 - Please reset your Sound Stick. Simply press and hold the  button for six seconds to automatically reset the speaker.
- There is no sound?
 - Adjust the volume. Make sure that your phone is in range. Ensure there is no obstacles in the way that can block/disturb the signal.
- There is poor sound quality?
 - Move the Sound Stick closer to your phone.
- The Sound Stick turns off automatically?
 - Yes, after 10 minutes of no music playing, the Sound Stick will turn off.

One Year Limited Warranty

Your Pinned Golf Sound Stick Speaker is warrantied to be free of defects in materials and workmanship for one year after the date of purchase.

In the event of a defect under this warranty, we will, at our option, repair or replace the product, provided that you return the product using our prepaid postage.

This warranty does not cover damages caused by misuse, improper handling, installation, or maintenance provided by someone other than Pinned Golf. Please note, this warranty is not transferable.

Safety Warning

- Do not disassemble, repair or modify this product by unauthorized personnel.
- Please read the user manual before using this product and follow the instructions for correct operation. Improper use may cause damage.
- This product contains batteries, please do not use it in a flammable environment.
- Do not expose this product to excessive heat or cold, as this may cause battery damage, leakage, or explosion.
- Please ensure that the power adapter for this product matches the electrical outlet and use the manufacturer's recommended charging cable.
- Do not use this product near flammable materials to avoid fire hazard.
- This product uses a lithium based battery. Lithium batteries can overheat and cause damage if physically abused.
- If this product appears abnormal, such as overheating, emitting strange smells, smoking, etc., please stop using it immediately and contact us.

Legal Notice

By using this product, you agree that Pinned Golf LLC, will not be held legally responsible for any injury or damage to you, or any person or property caused by the user's improper operation and/or poor judgment while using this product.

Note: See Limited Warranty for other limitations to our liability.

FCC Warning

This device complies with part 15 of the FCC Rules . Operation is subject to the following two conditions:
(1) This device may not cause harmful interference , and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

反面