

Portable BT CD player

User Manual and Warranty Card


Quick Start Guide

1. Open the CD player cover and remove the protective cardboard from inside the player.
2. Place the disc onto the spindle with the label side facing up, then gently press it into place.
3. Close the cover and slide the Power ON/OFF & HOLD switch to ON.
4. The player will automatically read the disc. The display will show the loading progress, and playback will begin once the disc has been successfully read.
5. Adjust the volume to a comfortable listening level.
6. If required, slide the switch to HOLD to lock the buttons and prevent accidental operation.

Specifications

1. CD formats: CD / CD-R / CD-RW / MP3
2. Standard 3.5 mm audio output for external speakers, headphones, etc.
3. Playback modes: Repeat One, Repeat All, Shuffle Play, Normal
4. A-B repeat playback
5. Playback from a USB flash drive (FAT32)
6. Built-in 2000 mAh rechargeable battery
7. Charging input: 5 V / 2 A (USB Type-C port)
8. Output power: 2 W
9. Bluetooth transmission version: 5.3
10. Frequency range: 50 Hz-20 kHz
11. Signal-to-noise ratio: 70 dB
12. Dimensions: 135 × 135 × 22 mm
13. Net weight: 295 g

Introduction to Functions

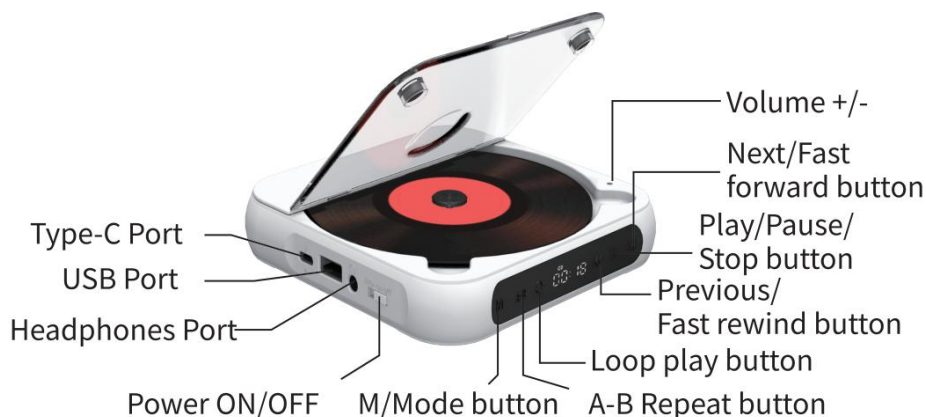

Button Functions

Power ON/OFF & HOLD Button

Slide the switch to ON to turn on the player, to OFF to turn it off, or to HOLD to lock all buttons and prevent accidental operation.

M/Mode Button

Press the M/Mode button to switch between CD and USB modes. Press and hold the M/Mode button to enter wireless transmission mode. The antenna icon will flash while searching for a Bluetooth device and remain steady once connected.

Play/Pause/Stop Button

During playback, press once to pause. Press again to resume playback. Press and hold the button to stop playback.

When both a CD and a USB flash drive are inserted, use the M/Mode button to switch between CD and USB playback.

Previous/Fast Rewind Button

Press once to skip to the previous track. Press and hold to rewind within the current track.

Next/Fast Forward Button

Press once to skip to the next track. Press and hold to fast-forward within the current track.

Volume Knob

Move the volume control upward to increase the volume by one level, or downward to decrease it by one level. The volume level can be adjusted from 0 to 20.

Note: When the player is connected to Bluetooth earphones or headphones, the player's volume control cannot be used to adjust the volume. Please adjust the volume directly using the controls on the connected Bluetooth earphones or headphones.

Repeat Playback

A-B Repeat

Press the A-B Repeat button once to set the starting point (A). “A-B” will flash on the display. Press the button again to set the ending point (B). “A-B” will remain displayed, and the section between points A and B will repeat continuously. Press the button a third time to cancel A-B Repeat and return to normal playback.

Loop Play

Press the Loop Play button once to repeat the current track. The repeat icon will flash quickly. Press the button again to repeat all tracks. The repeat icon will remain displayed. Press the button a third time to enter Shuffle Play mode. The icon will flash slowly.

In Box Content

1. CD player
2. USB charging cable
3. User manual and warranty card

Safety Precautions

1. Read this manual carefully before using the player and follow all operating instructions.
2. This player supports CD, CD-R and CD-RW discs, including compatible discs containing MP3 files. Other disc formats are not supported.
3. Do not use unsupported or non-standard discs. They may cause abnormal noise, playback issues or damage to the laser pickup. Some copy-protected or other non-standard discs may not play correctly.
4. Do not use cracked, severely scratched, dirty or damaged discs. Keep the signal surface free from fingerprints, dust and other contaminants. Do not use discs with loose labels, damaged

adhesive labels or exposed adhesive, as these may cause malfunction or damage to the player.

5. Do not drop, strike or subject the player to strong impacts.
6. Dispose of unwanted or damaged discs responsibly and in accordance with local regulations.

Troubleshooting

The player does not turn on

The battery may be depleted. Connect the player to a 5 V / 2 A power adapter and charge the battery. Then slide the Power ON/OFF & HOLD switch to ON.

The CD cannot be played

Check that the disc is inserted with the label facing up. Check for dirt or scratches. Make sure the disc type and file format are supported. Make sure the disc is inserted with the label side facing up.

Check the disc for dirt, damage, or scratches.

Make sure the disc type and file format are supported by the player.

The charging indicator flashes

The battery level is low and the player needs to be charged. The indicator light will show red while charging and green when fully charged.

The USB drive cannot be recognized

Make Make sure the USB drive is formatted as FAT32.

Some USB drives may not be compatible with the player. If the issue continues, try using a different USB drive.



FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.