 


USER MANUAL

NO. CV-E600

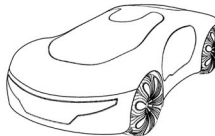

Simulate charging of charging pile, 4 dazzling light effect modes, dual spray function Type-C. 360° rotation, lateral drift, dynamic music, slow motion special effects

(1)

Thank you for using our company's toy products. In order to give you a better understanding of this product, please use them before use. Reading the following instructions thoroughly will bring you a different operating experience.

Attention: The remote control car product in this manual is for reference only. Please refer to the actual product for the product design!

Electrical Control Products

The product should be assembled/charged by adults before being played with by children. Please use the product under adult supervision.

● **Warning:** Do not disassemble or modify this product without authorization. Any modification may cause the product to fail to function properly. This manual is suitable for the introduction of a series of our company's products. The configuration of each product is different. For specific configurations, please refer to the packaging box.

The product body uses one rechargeable battery, and the voltage is detailed in the battery room battery diagram;

The remote control uses 2 1.5V AA non rechargeable batteries;

2. The removal and installation of batteries should be operated correctly according to the polarity and voltage inside the toy battery room;

3. Non rechargeable batteries are not rechargeable;

4. Rechargeable batteries must be charged under adult supervision;

5. Rechargeable batteries should be removed from toys before charging;

6. Different types of batteries or old and new batteries cannot be mixed;

Only batteries that are the same or equivalent to the recommended battery can be used;

8. When using up the battery, it should be removed from the toy; if not used for a long time, please remove the battery from the toy;

9. The power terminal shall not be short circuited;

10. Use a screwdriver to unscrew the screws on the battery compartment cover, install the battery according to the correct positive and negative polarity, and use screws Unscrew the screws on the battery compartment cover with a knife and remove the battery;

11. Maintenance and upkeep: This product is composed of plastic, hardware, and electronic components, and should not be immersed in water or stored for a long time

 
Place or use in a humid environment, regularly check for missing wires, plugs, casings, and other components. When defects are found, use should be stopped until they are repaired completely.

(2)

Product configuration (this product is divided into three different configurations)



How to install batteries



How to Charge

 


(3)

2.4G automatic frequency matching instructions

1. After installing the battery in the remote control, turn on the switch. The remote control indicator light will start flashing. Install the battery in the remote-controlled car and turn on its switch to enter the connection state. When the connection is successful, the remote control indicator light will turn off. Note: If the connection fails, repeat the above steps.
2. Each remote control can only be connected to one remote-controlled car. Once successfully connected, each car will not interfere with each other. Note: Multiple cars cannot be connected simultaneously.
3. If the remote control does not detect the 2.4G signal emitted by the powered-on remote-controlled car within one minute, the power indicator light will flash, and you need to restart the power switch to repair the frequency.
4. When needing to pair with another remote control or remote-controlled car of the same model, you must turn off the power of the remote-controlled car before re-pairing.

Introduction to the remote control function of the gamepad

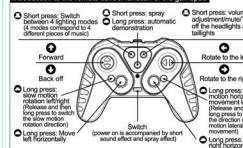

Introduction to remote control function of watch



(4)

Introduction to remote control car gameplay

 


(5)

4 light efficiency modes



WATCH REMOTE CONTROL OPERATION DEMONSTRATION DIAGRAM

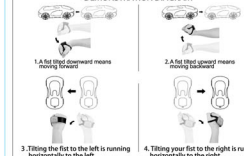

Safety usage tips

Regularly check toys, batteries, the wires of charging cables and plugs. If any of these components are damaged, stop using them until they are repaired or replaced.

Operation tips

- Please make sure that the power switch is in the "ON" position, when you operate. If the power switch is in "OFF", the remote control car is in the off state. When the power switch is in the "OFF" position, the remote control car is in the off state.
- When the battery power is consumed, the left and right steering is not sensitive, and the forward and backward will be slow. Take off the battery and change it.
- The effective control range of the remote-controlled car: When controlled by the watch remote, it is approximately 30 meters, and when controlled by the hand remote, it is about 50 meters. Beyond these distances, the remote-controlled car may stop or become uncontrollable.
- When the remote control car presses the spray button, the car will automatically spray.

(6)



General Fault Handling		
Fault Symptoms	Causes	Solutions
Vehicle Fails to Move	1. The remote control is not connected, or the remote-controlled car's switch is not turned on.	1. Turn on the remote-controlled car's switch and reconnect the remote control.
	2. The remote control or remote-controlled car does not have batteries installed correctly.	2. Install batteries correctly in the remote control or remote-controlled car.
	3. The rechargeable battery pack has insufficient power.	3. Charge the rechargeable battery pack.
Vehicle Uncontrollable or Short Remote Control Range	1. The remote control batteries or rechargeable battery pack have insufficient power.	1. Replace the remote control batteries with new ones or charge the rechargeable battery pack.
	2. There may be interference sources near the venue.	2. Change the venue.
Abnormality Protection	When the remote-controlled car's functions are hindered by external forces and cannot complete full movements, or when the circuit or battery is short-circuited.	Turn on the power switch again for the power-off protection of the remote-controlled car.

(7)

- To consumers**
1. When playing with remote control cars indoors, please be careful not to cause damage to furniture or glass.
 2. Please play outdoors in a safe place and do not play with remote-controlled cars on roads or in crowds to avoid danger. When playing with a remote-controlled car outdoors and hearing thunder, stop playing immediately.
 3. Do not drive the remote control car towards people.
 4. Do not litter or collide the remote control car.
 5. When placing the remote control car, please stay away from sources of fire and high temperatures.
 6. This car adopts complex electronic circuits and a large number of components. Please do not disassemble or modify the circuit board at will.
 7. When the remote control car is covered with soil and dust after playing, it should be gently wiped with a damp cloth.
 8. Do not put toys in water, as it can damage electronic components.
 9. The packaging box and instructions contain important information, please keep them properly.

- Maintenance matters**
1. Keep away from fire sources, avoid direct sunlight, high temperature and humidity, or keep in the car for a long time to avoid short circuits in the circuit to catch fire.
 2. When not playing, remove the batteries from the car and remote control, and put the remote control car and remote control back into the color box packaging to avoid damage or deformation during transportation or storage.
 3. The remote control car should be gently wiped with a damp cloth.
 4. Please remove the batteries from the car and remote control when not in use to avoid reducing battery life.

- Reminder**
- When the car is moving, please do not touch the wheels of the remote control car with your hands to avoid injury.
-
- Do not play on the roadside or in dangerous places to prevent accidents.
-
- Do not play with remote-controlled cars in sewage pits.
-

(8)

Federal Communications Commission (FCC) Statement. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received,

including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by

may void the FCC authorization to operate this device. Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF exposure statement:

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.