



Quick Instruction Guide

 
Please read these instructions carefully before using the device.

Step 1: Unpack MyKi Junior

Charge it in case of low battery. Use the power cable in the package.

Step 2: Install SIM card into the device (Nano SIM)

SIM card must be without PIN and active mobile data service.

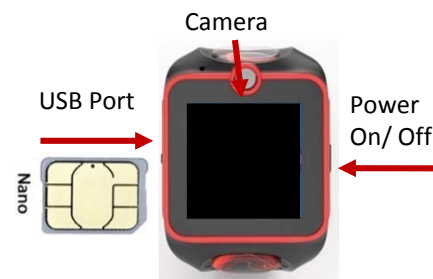

Step 3: Turn ON the MyKi Junior

Press the right button shortly and the display will light up.

Step 4: Install the MyKi Junior App on your phone.

Android QR

iOS - QR



Set up in 6 easy steps

Step 5: Create an account

Open the MyKi Junior app, press “Create account” button, and enter:

 
- Your email address
- Confirm your email address
- Password (*should contain six or more characters and will be used later on for log in*).
- Confirm Password
- Your name
- Your phone number

Read and Accept T&C

- Press: **REGISTER**


Step 6: Add the MyKi™ Junior watch to the account

- Turned ON MyKi Junior should show QR code on the screen
- On the MyKi Junior app press “Scan & Active” to scan QR code from your watch’s screen
- Enter a nickname to the Watch.
- Enter the watch’s SIM card phone number.

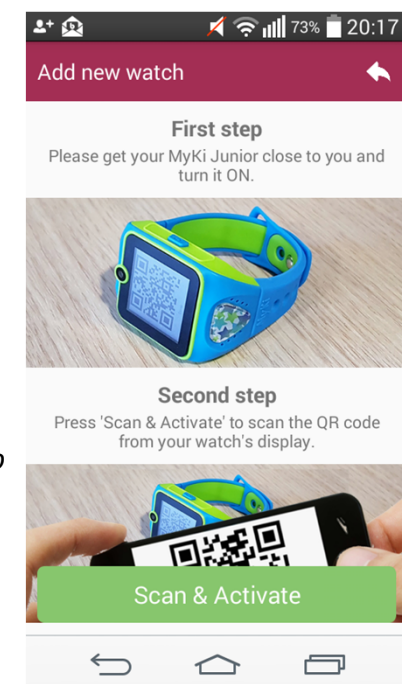



Descriptions of MyKi Junior watch

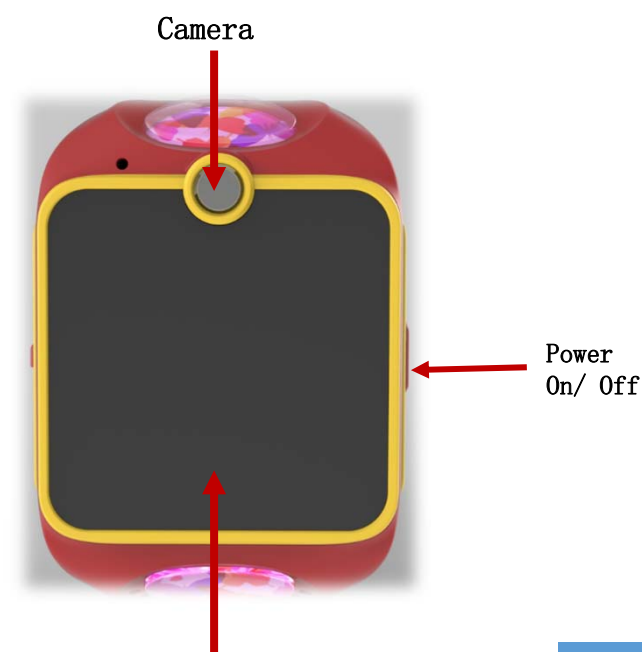 


MyKi Junior
Touch color screen

You can operate the device by touching and scrolling up and down, left and right to navigate to the other menus. Press an icon to select it.

Return to the Main Menu - to go back one step or to the main menu, press Power on/off button on the right side of the watch

 
Home screen

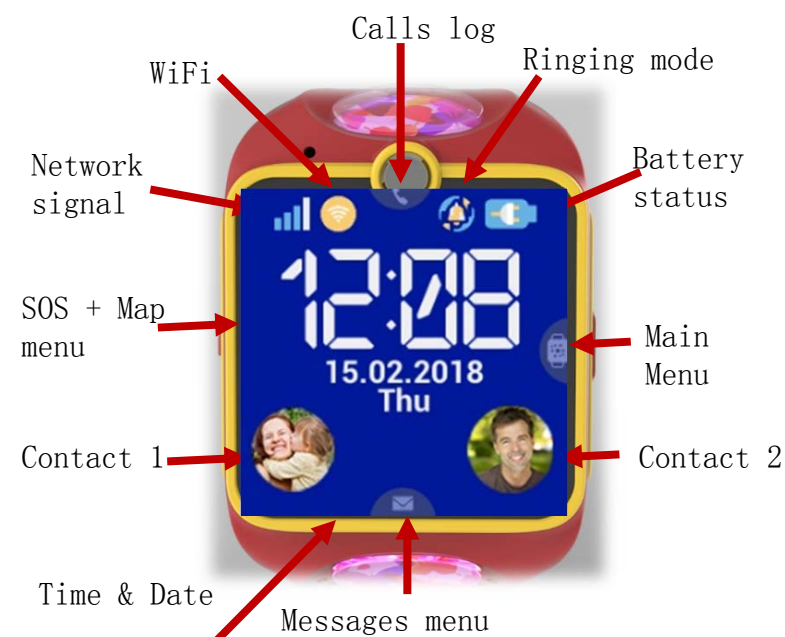

Home Screen

Time: Present current time and date in 3 different formats (define from the settings menu)	Contact 1: Initiate voice or video call or to send message to the 1 st Number	Contact 2: Initiate voice or video call or to send message to the 2 st Number
SOS + Map Menu: slide right - opens maps or initiate SOS call	Network signal: show 3G signal strength	WiFi: show WiFi signal strength
Battery status: present battery status	Messaging menu: scroll from down to up and you will get list of all incoming / ongoing messages	Main Menu: scroll from right to left in order to access the device main menu
Ringling mode: vibration, silent, ring	Calls log: list of incoming, outgoing and missed calls	

 1. Contacts

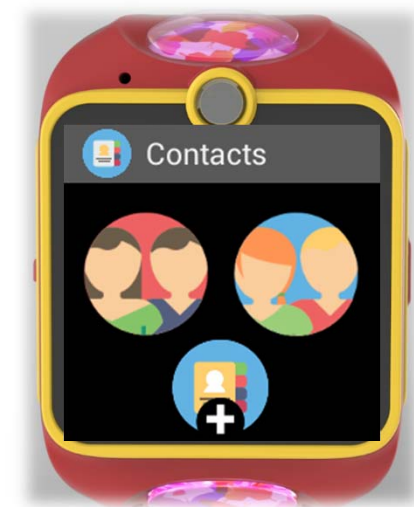

Contacts

Family: List of family numbers (set from the app)
Friends: List of friends (set from the app)
Add new contact: Watch or application



Descriptions of MyKi Junior watch

Main Menu

4. SOS + Map menu



SOS Screen

Pressing the SOS display area initiates immediately a call to the first entered in the application SOS number.

If no connection is established, the Watch will continue dialing the next defined SOS numbers until connection is established.

5. Add New contact



 
Add New Contact Screen

Press Add new contact

Kids can add other friends to their contact list by pairing their devices. Press the watch and will automatically search for and pair the two MyKi Junior devices together. Kids can start to call or message each other! The parents will always be notified through the App whenever your kids add a new friend.

.....

6. Text message

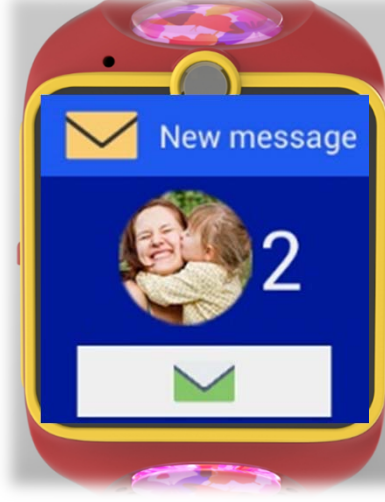

Text message

Here you can read the last received text message

Touch to play the received text message

7. Communication



Voice, picture, emoji message

You can see here voice, picture, emoji and text messages between parents and kids

Select one of the three buttons when you would like to send a Emoji, Picture or Voice message

8. Calls



Calls Screen

Available different applications as:

Voice call - Two-way communication with parents and friends

Video call - Two-way IP video communication with parents

Chat – voice, picture, emoji and text messages between parents and friends

Select one of the three buttons – Voice call, Video call or Chat

Incoming call – the call is accepted upon touch the icons



Descriptions of MyKi Junior watch

4. Applications Menu



Applications Screen

Alarm - to set alarms for different activities during the day – wakeup, going to school, going to bed. You can set alarms on the MyKi Junior App and tasks will be automatically synced to your child's watch.

Flashlight - to use the screen as a flashlight in the dark, press the icon Flashlight

Applications Screen

Calculator – press the icon to use a the Calculator for base mathematic calculations if they need.

Games and Entertainment - scrolling up to find 4 funny and educated games

5. Settings Menu



Watch face

Change the Watch face - Here you can choose from 3 different style for your MyKi Junior face scrolling left and right.

Theme – choose from 4 different color themes scrolling left and right

Display – here you can set Brightness and Screen timeout

Sound & Volume & Vibration

Sound - Here you can set different sounds for Voice call, Notification and Alarm scrolling left and right

Volume – Here you can set different volumes or to stop volumes for Ring, Music, Notification and Alarm scrolling left and right

Vibration – you can off / on the vibration mood for Ring, Notification and Alarm

Language

Language- Here you can change the watch language from Language menu

Scrolling left and right to find language that you want

Location Section

 
You can check the present location of your child's MyKi™ 3G-GPS watch at any time on the map or to make calls.

GPSS Signal - shows the strength of the mobile network coverage.

Battery - shows how much battery power the Watch has currently.

Speed Limit
Function "Speed limit" is managed through the MyKi Junior application

This button (blue) calls the Watch.

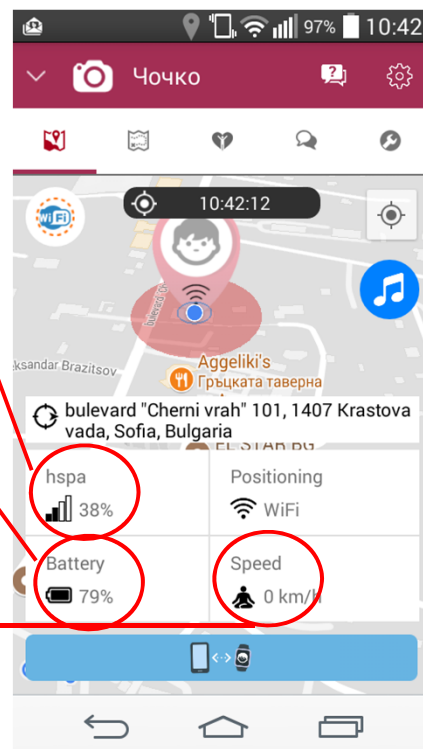

MyKi Junior APPLICATION

Communication functions

You can call make a voice and video call to your child. The child may reply with a voice message or a video call from the MyKi™ Junior 3G-GPS watch.

Available different applications as:

 
Voice call - Two-way communication with parents and friends
Video call - Two-way IP video communication with parents

Select one of the 3 buttons to this screen to start conversation with MyKi Junior:

MyKi Call Me – to respond to your child's calls

Video Call – to make a video call

Call MyKi – to make a voice call

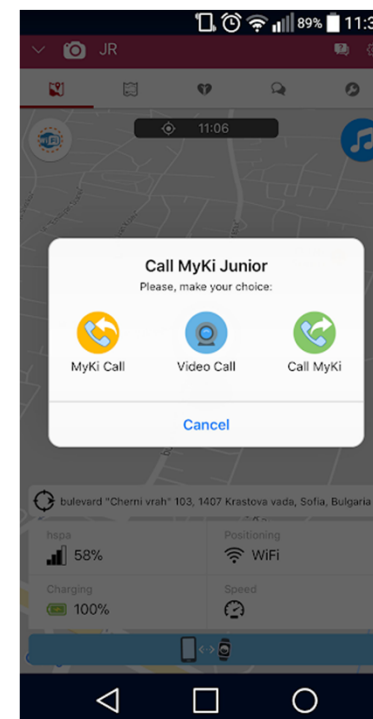


Location History Section

 indicates the particular locations registered today, or in the past 30 days, with timestamps. Indicates each registered location.

 If pressed, turns red and groups close locations into a single location. Playback of locations history. If pressed it doubles and triples the playback speed. If pressed one more time, playback returns to normal speed.

Safe zone - You can set two Safe Zones, in which you know your child is secure. When you switch on for the first time a Safe zone, you will see a map with a perimeter. Move the map under the circle to define the desired area. You can change (increase or decrease) the radius of the Safe zone.

 In addition you can add **Speed limit**. Thus you will be notified if your child leaves the Safe Zone and/or is moving too fast.

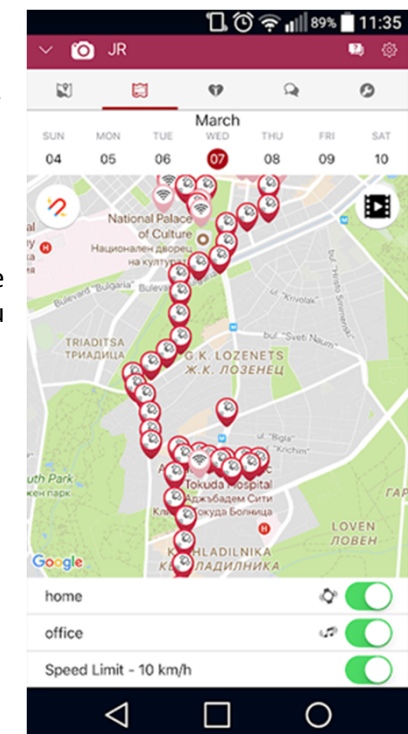

MyKi Junior APPLICATION

Health function

This function counts the steps of your child and based on standard measures, brings back full information for the number of steps (walking and running), passed meters and burned calories during the day.



Chat and Voice Messages Section

Start a chat by pressing one of 4 options in the under of the screen.

You can send a photo, or to write a message, or emoji, or to send voice message

 
For sending **emoji** hold and choose one of up to 12 characters.

You can send unlimited number of **text messages**. Enter the text and press the "Send."

For sending the **picture** press the icon And set the options - photo from your phone or take a new picture. Just simply tap it and your image will be sent.

For sending **voice message** hold, by which starts the recording of your message.

By releasing the button, the messages is sent to your child's Watch.

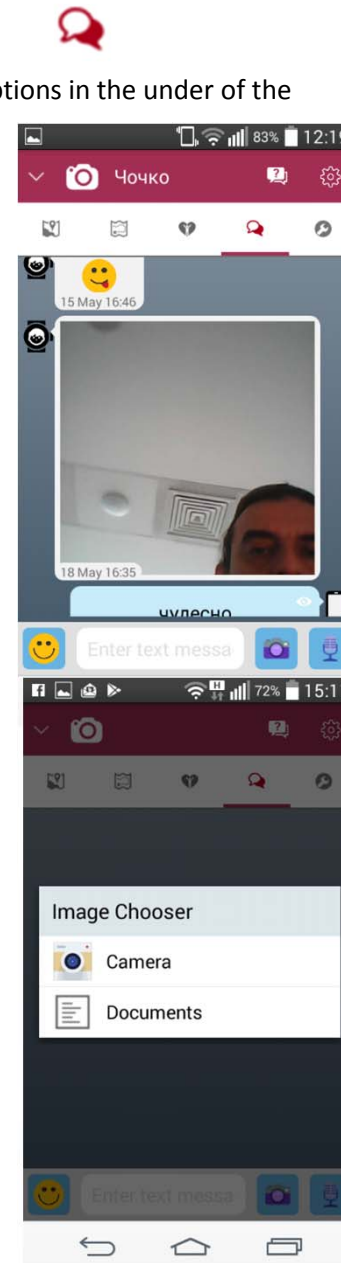

Settings Section

Customize the settings for MyKi Junior in the settings menu in the application.

My child – Create your child's profile and press Save.

 
Contacts – Create Family and Friends numbers. Contacts menu, there are two fields, in which you can insert numbers and arrange it – as a Family and Friends. Press the Insert the number and choose one of the 2 options. Do not forget to press "Save"!

Audio & Ringes –MyKi Junior has 3 audio profile – General, Vibration and Silent. Select from 5 ringtones or vibration mode based on your child's daily routine.

Do Not Disturb – If defined time periods are set and the Mode is activated, reject incoming calls.

Auto Power OFF– Set the time during that MyKi Junior will be powered off. You can switch it on by pressing its power button.

Low Power Mode – Reduce the watch's power consumption by increasing the location reporting time intervals and reducing the Safe Zone and Speed Limit functionalities

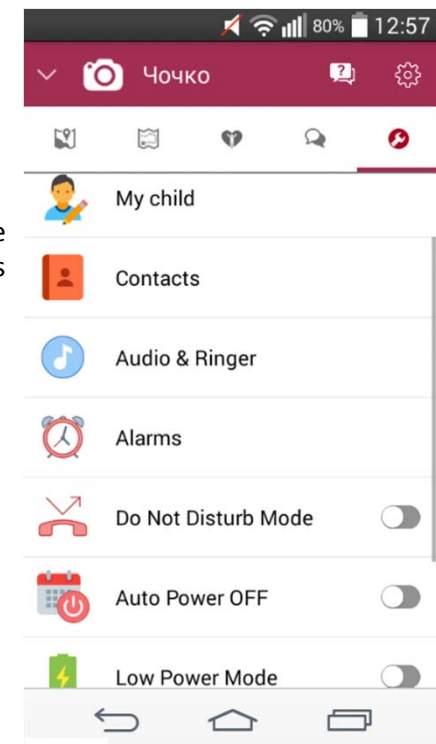

Watch Fce & Display- Personal customization option with 3 watch faces and 4 colourful home screen.

Select language - In this menu, you can see, select or change your preferred language for the MyKi Junior application



MyKi Junior Product Details

FREQUENTLY ASKED QUESTIONS

Specifications

Weight: with the battery
Power supply:
Frequency:

What's In The Box?

The box will include the following items:

- MyKi Junior
- USB Charging Cable
- Quick Start Guide

What kind of SIM card do I need?

You need to use a Nano sim card.

Is the MyKi™ Junior waterproof?

CAUTION! the MyKi™ Junior watch is NOT waterproof. In case of water exposure, turn the Watch off and let it dry on a towel at room temperature.
Wait at least 4 hours before turning it on again.

Can I monitor two or more watches from the MyKi Junior app?

Yes, if you register them through Settings > Account Settings > Add New Watch. You can switch between the watches through the arrow at the topleft on the app screen.



Address: 103 Cherni Vrah Blvd, Sofia 1407
Tel.: 02 988 74 35
E-mail: support@MyKi.Watch

The Declaration of Conformity is available at:
<https://MyKi.Watch/bg/declaration-of-conformity/>

Changes in the contact data are published by the Manufacturer at the official website of the Device: www.MyKi.Watch.

The User is obliged to stay informed for any amendments of these warranty terms before exercising his/her rights against the Manufacturer.

All rights to trademark MyKi®, and other intellectual rights associated with this devices belong to Allterco Robotics EOOD.



Emergency call

If any emergency arises, dial 112/911 (or other emergency call number) for emergency help.

Due to the nature of cellular networking, the success of emergency call is not guaranteed.

FCC Warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types MyKi Junior (FCC ID: 2ALAYJUNIOR) has also been tested against this SAR limit. The highest reported SAR values for head, body accessory are 0.84W/kg, 2.82 W/kg, The Max simultaneous SAR is 2.89W/kg. This device was tested were 10-mm from the front face of the device using head tissue (simulating use at the face), and on the wrist. To maintain compliance with FCC RF exposure requirements, user to maintain 10-mm separation when operating at the mouth , In addition, this product can only be worn on the wrist.