

Instruction Manual

ECU

1. Send low-frequency signals and Receive high-frequency signals, thereby enabling the functions of vehicle finder and seat activation.
2. Receive and process the high and low level signals of the vehicle body button and knob, thereby driving the vehicle drive module.
3. When the ECU detects that the master fob is close by, it can unlock the vehicle through the IMMO function.



WHETRON ELECTRONICS (SUZHOU) CO., LTD.

FCC Warning:

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.