


Instruction Manual

Key Fob

1. Pushing the “Bike Finder” button to Finder vehicle
2. Pushing the “Seat” button to open the seat



3. After the connector of the ECU is connected, when the battery of the key runs out of power, Placing the key near the ECU can unlock the vehicle (please refer to the position shown in the following picture)

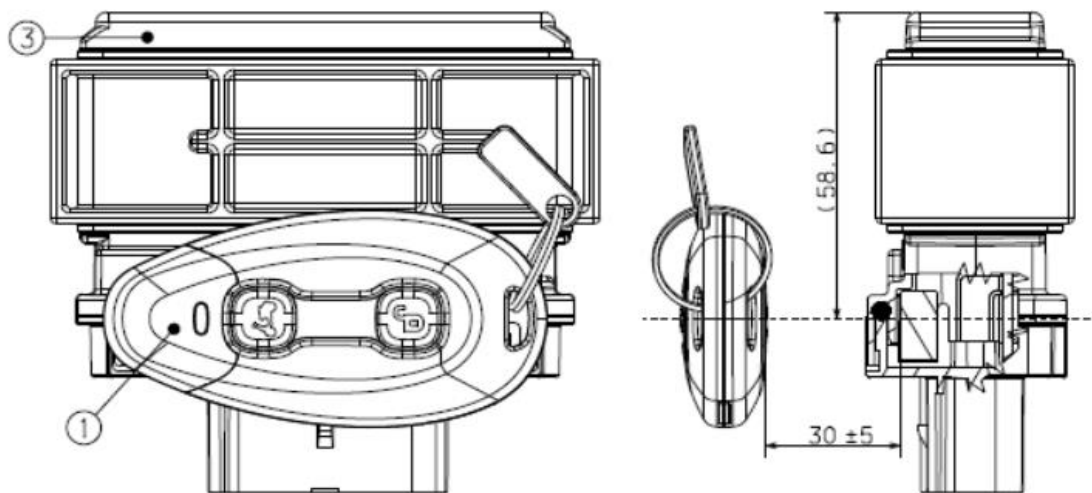


MAXIMUM PASSIVE AUTHENTICATION DISTANCE (FOB) : (30.0 ± 5.0)

Master Fob



1. After the connector of the ECU is connected,
2. When the battery of the key runs out of power, or The key is more than 2 meters away from the ECU.
3. Placing the master fob near the ECU can unlock the vehicle (please refer to the position shown in the following picture)

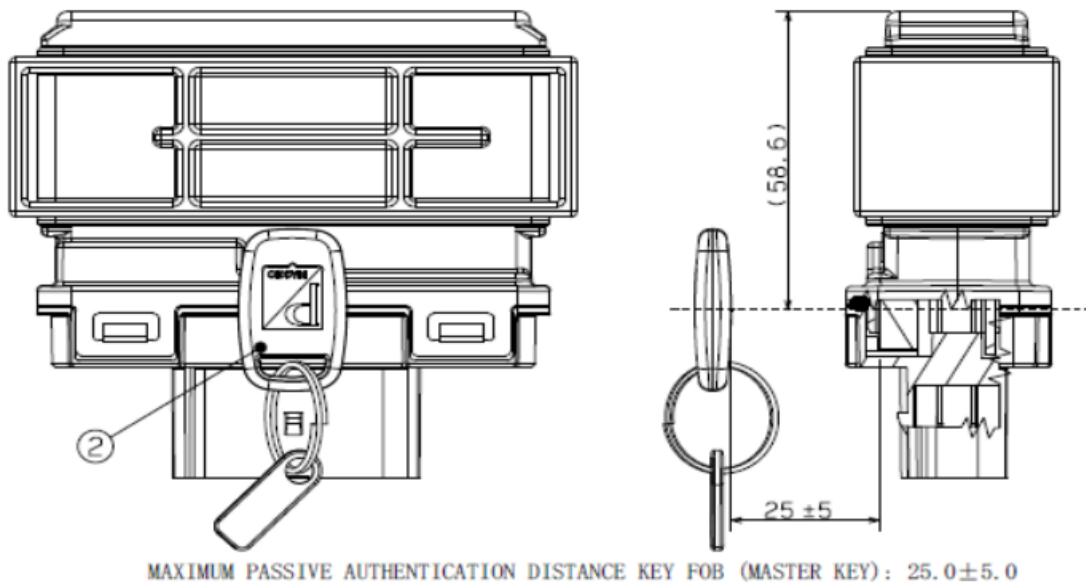

MAXIMUM PASSIVE AUTHENTICATION DISTANCE KEY FOB (MASTER KEY): 25.0 ± 5.0

Name: Whetron Electronics (Suzhou) Co., Ltd.

Address: No. 457 Xiangjiang Road, Suzhou New District, Suzhou 215162, P.R. China

FCC Warning:

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.