

ASWSPKCY User Manual

(Fold Inward) — — — — ▶

FRONT

(BACK COVER)

(FRONT COVER)

88.9 mm

88.9 mm

Compliance Information FCC Information This device complies with Part 15 of the FCC Rules. Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help. Radiation Exposure Information The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. WARNING Li-Ion Battery Inside This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F). Rating Label Definitions Direct current symbol. This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment. This symbol signifies that this is a wireless device powered by Bluetooth® technology. The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Southern Telecom is under license. This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency.	Warranty Information 90-Day Limited Warranty Territory: United States LIMITED WARRANTY TO ORIGINAL CONSUMER This product as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows: To obtain warranty service: • Visit our customer support portal: www.customersupport123.com and select "Support". • Select the brand, fill out the corresponding form (exchanges require dated proof of purchase from an authorized retailer) then submit your request. Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier. Warranty service not provided This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged. NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE. Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.	All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement. Designed in USA Made in China 01/2026	WIRELESS SPEAKER Rechargeable Popsicle Speaker Instruction Manual ASWSPKCY-TGT
--	--	--	--

BACK

Before You Begin... READ CAREFULLY AND SAVE THIS MANUAL FOR FUTURE REFERENCE ⚠ Caution To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies. • THIS DEVICE IS NOT A TOY, do NOT allow children or pets to use or play with this device. • Do not disassemble, modify, or repair the device. • Do not submerge in water. • Do not expose the unit to extreme temperatures (heat or cold), open flames, humid, or wet conditions. • Low power may cause poor Bluetooth® connection or sound distortion. • Do not allow the USB ports, power jack or other inputs of the device to be exposed to dust, or water, or come into contact with any conductive materials such as liquids, metallic powders, etc. IN THE BOX: • 1x WIRELESS SPEAKER • 1x Type-C USB POWER CABLE • 1x USER MANUAL	Location of Controls 1. Microphone 2. Mode Switch Button 3. Power Button 4. LED Indicator 5. Charging Port	Getting Started Power Button Functions: • Long Press: Turns the speaker ON or OFF. • Short Press (Media): Plays or resumes media playback. • Short Press (Phone Call): Answers an incoming phone call or ends an active phone call. • Long Press (Phone Call): Rejects an incoming phone call. Mode Button Functions: • Short Press: Switches between Speaker (Bluetooth) mode and FM Radio mode. • Double Press (FM Mode): Switches to the next available channel. • Long Press (FM Mode): Automatically searches and saves available FM channels. Charging To charge the speaker, use the included Type-C USB cable. The LED indicator will turn RED while charging and turn OFF when the speaker is fully charged. When the speaker is low on power, a tone will be heard, indicating that it needs to be recharged.	Bluetooth Pairing 1. Power On: Long press the [Power button] to power the speaker ON. A tone will be heard, and the speaker will automatically enter Bluetooth pairing mode. The LED indicator will flash Blue. 2. Pair Device: Set your mobile device to search for Bluetooth devices. Select ASWSPKCY from the list of found devices when it appears. 3. Connection Success: After a successful pairing, a tone will be heard, and the LED indicator will turn solid Blue. You should now be able to play music on the speaker. Notes on Bluetooth: When playing music, the LED indicator will slowly flash Blue. The speaker will automatically pair to previously connected devices that are within range. The speaker will automatically power off after 5 minutes if it is not paired with a device. FM Radio 1. Enter FM Mode: Long press the [Power button] to power on the speaker (default is speaker mode). Then, short press the [Mode button] to switch to FM mode. 2. Auto Search and Save: In FM mode, long press the [Mode button] to automatically search and save the FM channels. 3. Change Channel: In FM mode, double press the [Mode button] to change to the next channel. 4. Indicator: When in FM mode, the LED indicator will slowly flash Green.
--	---	---	---