

08/01/2025

FRONT COVER

INSIDE

Before You Begin...	Location of Controls	Getting Started
READ CAREFULLY AND KEEP THIS MANUAL ⚠ Caution To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer -approved chargers, accessories, and supplies. • THIS DEVICE IS NOT A TOY, keep away from children and pets. • Do not disassemble, modify, or repair the device. • Do not expose to extreme temperatures (heat or cold) or open flames. • Do not submerge in water. • Do not operate device inside packaging. • Take care when watering plants to not expose device to excess water. • Keep the LED light clear of dirt and debris. • Falls from heights can kill. For your own safety, it is advised to consult the services of a professional when fitting lights to roofs or at a height. In the Box • Shower Speaker • USB Charging Cable • User Manual	Location of Controls  TURNING ON/OFF Long Press the power button to turn on / off the speaker. NOTE: The speaker will automatically power off after 5 minutes if not paired with a device. PLAYING MUSIC Press the power button to pause / resume media. NOTE: While playing music, the LED indicator will slowly flash blue. CHARGING Use the included USB charging cable to charge the speaker. The LED light will turn RED while charging, and turn OFF when fully charged. When the speaker is low on power, a tone will be heard indicating that it needs to be recharged. BLUETOOTH PAIRING 1. Power the speaker ON. A tone will be heard and the speaker will enter Bluetooth pairing mode. The LED indicator will flash blue. 2. Set your mobile device to search for Bluetooth devices. When it appears, select HKPOMSHRSPK from the list of found devices. 3. After a successful pairing, a tone will be heard, and the LED indicator will turn solid blue. You should be able to play music on the speaker. NOTE: The speaker will automatically pair to previously connected devices that are within range. FM RADIO FUNCTION 1. Press the power button twice to switch between speaker mode and FM radio mode. 2. The LED indicator will slowly flash green when in FM radio mode. – While in FM radio mode, short press the play button to switch FM channel. – Press the power button three times to automatically search the FM channel.	Getting Started FCC Information This device complies with Part 15 of the FCC Rules. CAUTION: Any changes or modifications not expressly approved could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: – Reorient or relocate the receiving antenna. – Increase the separation between the equipment and receiver. – Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. – Consult the dealer or an experienced radio/TV technician for help. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. RADIATION EXPOSURE INFORMATION This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.