

140.00 mm

A line drawing of a white EMEET remote control. It features a large circular navigation pad in the center. Above the pad are buttons for power (1), volume up/down (2), channel up/down (3), and mute (4). Below the pad are buttons for TV (6), TV (7), and OK (8). To the right of the pad are buttons for channel up/down (9), channel up/down (10), and channel up/down (11). The EMEET logo is at the bottom.

- ## Italia

A diagram of the GMEET remote control with numbered callouts 1 through 11 pointing to various buttons. The buttons are: 1. Power button (top left), 2. Mute button (top right), 3. Channel up/down buttons (top left), 4. Source button (top left), 5. Volume up/down buttons (top right), 6. 1X button (middle left), 7. 7X button (middle center), 8. 3X button (middle right), 9. Playback buttons (bottom left), 10. Stop button (bottom center), 11. Play/Pause button (bottom right).

- Português

A diagram of the EMEET remote control with numbered callouts 1 through 11 pointing to various buttons. The buttons are: 1. Power button (top left), 2. Mute button (top right), 3. Source button (top left of center), 4. Play/Pause button (top center), 5. Stop button (top right of center), 6. Previous button (middle left), 7. Next button (middle right), 8. Play/Pause button (bottom left of center), 9. Stop button (bottom right of center), 10. Fast Forward button (bottom left), 11. Rewind button (bottom right). The EMEET logo is at the bottom.

- 日本語

A diagram of the EMEET remote control with numbered callouts 1 through 11 pointing to various buttons. The buttons are: 1. Power button (top left), 2. Mute button (top right), 3. Play/Pause button (top left), 4. Stop button (top center), 5. Previous button (middle left), 6. Next button (middle right), 7. Play/Pause button (center), 8. Volume Up button (bottom left), 9. Volume Down button (bottom center), 10. Channel Up button (bottom right), 11. Channel Down button (bottom left).

- 繁體中文

A diagram of the remote control with numbered callouts 1 through 11 pointing to various buttons:

- 1: Power button (top left)
- 2: Mute button (top right)
- 3: Channel up/down buttons (top left, below power)
- 4: Source/Input buttons (top left, below channel)
- 5: Volume up/down buttons (top right, below mute)
- 6: 1X button (middle left)
- 7: 7X button (middle center)
- 8: 3X button (middle right)
- 9: Playback buttons (bottom left, including play, pause, stop, and a button with a right arrow)
- 10: Fast forward and rewind buttons (bottom center)
- 11: Stop and play buttons (bottom right)

- 简体中文

España



A diagram showing a laptop connected to a device via a USB cable. The device is represented by a small rectangle with a USB symbol on it.



A line drawing of a remote control with the brand name 'EMEET' at the bottom. Numbered callouts point to the following buttons:

- 1: Power button (circle with a dot)
- 2: Mute button (speaker with a slash)
- 3: Channel Up button (circle with a plus sign)
- 4: Channel Down button (circle with a minus sign)
- 5: Volume Up button (triangle pointing up)
- 6: Volume Down button (triangle pointing down)
- 7: Large circular navigation pad
- 8: 1X button
- 9: 3X button
- 10: 7X button
- 11: 10X button

- English

A line drawing of a white, rectangular remote control with rounded corners. It features a large circular navigation pad in the center. Above the pad are four buttons: a power button (1), a TV button (3), a source button (4) with a multi-colored circle icon, and a mute button (2) with a speaker and slash icon. Below the pad are two rows of buttons. The first row includes a TX button (6), a 7X button (7), and an RX button (5). The second row includes a back button (8) with a left arrow, a play/pause button (9) with a right arrow, a stop button (10) with a square icon, and a fast forward button (11) with a double right arrow. The EMEET logo is at the bottom.

- Deutsch

A diagram of the EMEET remote control with numbered callouts 1 through 11 pointing to various buttons. The buttons include: 1. Power button (top left), 2. Source button (top left, below power), 3. Volume Up button (top right), 4. Volume Down button (top right, below volume up), 5. Play/Pause button (center top), 6. Stop button (center top, below play/pause), 7. Previous button (center left), 8. Next button (center right), 9. Home button (bottom left), 10. Back button (bottom left, below home), 11. Eject button (bottom right).

- Francés

A diagram of the EMEET remote control with numbered callouts 1 through 11 pointing to various buttons. The buttons are: 1. Power button (top left), 2. Mute button (top right), 3. Back button (top left of center), 4. Play/Pause button (top center), 5. Stop button (top right of center), 6. TX button (middle left), 7. RX button (middle right), 8. Volume Up/Down buttons (left side), 9. Channel Up/Down buttons (right side), 10. Source button (bottom left), 11. Input button (bottom right). The EMEET logo is at the bottom.

- España**