

WEKOME®
PORTABLE SPEAKER
D31 MIN | Yimy Brilliant Wireless Speaker



说明书 Instruction
Now! Drop the Beat.
360° Stereo, Cinematic Listening Experience

Dear Customers
Your purchase is appreciated.
Please read this manual carefully before using for correct operation and superior performance; please keep this manual properly.

Product model: D31 MIN
Wireless version: V5.0
Transmission distance: ≥10m
Frequency response: 60Hz~20KHz
Impedance: 4Ω
Rated power: 5W
Driver unit: 45MM
Battery capacity: 1200mAh
Input: DC5V, 1000mA
Playing time: 4-6h (10% volume, light-off mode)
Standby time: 305 day
Charging time: 2h
Product net weight: 2875g
Product size: 80*80*125mm
Product color: Black

D31 MIN

Yimy Brilliant Wireless Speaker



Functions

①Power button: Press and hold for 2S to power on/off; short press to play/pause/answer/hang up; double press to redial.
②Light switch: Press and hold for 2S to turn on/off the light (on by default); short press to switch 11 lighting effects. Power off with light mode memory.
③Previous track/Volume-: Short press to decrease volume; press and hold for previous track.
④Function mode: Short press to switch between TF/U disk/BT modes; press and hold to disconnect/reconnect; double press to enable TWS interconnection.
⑤Next track/Volume+: Short press to increase volume; press and hold for next track.

 


- ⑥ TF card slot
- ⑦ LED indicator
- Charging status: Red light stays on fully charged; Red light goes out Low battery; Flashing phone icon
- ⑧ AUX input port
- ⑨ Type-C charging port
- ⑩ U disk input port



Wireless pairing

Press and hold the power button for 2 seconds to power on with the light on. Turn on the phone's wireless function, search for "D31MIN", click Connect, and a connection prompt will appear upon successful connection. Power on and it will automatically reconnect to the previously connected wireless device that has not been cleared in the pairing list, or it will automatically enable a pairing state if the interconnection fails.



Instructions

- Turn on the music player on your device and short press the power button to start playback.
- Short press the "+" button to increase/decrease volume; press and hold for the new/previous track.
- Short press the light button to switch between 11 light modes; press and hold to turn off/on the light.
- Plug in the external audio cable(TF card/U disk) and it starts playing. It prioritizes insert and play mode. Short press the power button to play and pause.
- Short press the MODE button to switch among external source(TF card/U disk/BT modes; press and hold for wireless disconnection; double press for speaker interconnection.
- TWS interconnection: Power on two speakers at the same time, and double press the MODE button of either speaker to enter the TWS interconnection mode, enabling it as the main speaker (left channel), and the other sub speaker (right channel). And the functions and volume of both speakers are synchronized. The TWS function is available only in Bluetooth mode.

TF card mode

- Insert a TF card in the power-on state with a voice prompt "Music playback mode".
- The speaker will automatically play the music files in the TF card.
- Free control of play/pause, previous/next track, volume up/down during playback.

U disk mode

- Insert a U disk in the power-on state with a voice prompt "music playback mode".
- The speaker will automatically play the music files in the U disk.
- Free control of play/pause, previous/next track, volume up/down during playback.

Low battery

When the power level is lower than 3.4V, a low battery alarm will be heard, and if lower than 3.2V, it will automatically power off. Please charge it in time.

Product charging

Please use a charger of 5V 1000mA. The red light stays on when charging, and goes off after a full charge.

Peripheral interface

USB-A: U disk reader
TF: TF (MicroSD) memory and
Charging interface Type-C: USB-V 1000mA

Caution

1. Connect the power supply that meets the safety regulations.
2. Do not impact the product.
3. Do not use the product at high volume to protect your hearing.
4. Dispose of waste used packaging, batteries, and electronic products properly.
5. Do not disassemble, repair, or modify the product by yourself.
6. Do not place the product in direct light ray.
7. Keep the product away from heating containers and chemicals such as benzene and diluents.

Note: Do not expose the battery (battery pack or assembled battery) to the sun, fire or the high temperatures. Improper battery replacement will cause explosion hazard; use batteries that are the same or equivalent type.

Warranty

This product is covered under warranty for a period of twelve months from the date of sale limited to normal use and maintenance of the machine parts, materials and functions. Problems and failures verified upon further identification, will be provided free repair.

This Warranty Does Not Apply

- A. To a product that is out of warranty;
 - B. To damage caused by operating the product outside the permitted or intended uses described by WEC;
 - C. To a product that has been disassembled, repaired or refitted without the authorization of WEC;
 - D. If warranty card and proof of purchase cannot be presented;
 - E. To damage caused by external causes and natural disasters, including earthquake, fire, etc.
- Note:** The warranty does not include product transport costs and does not provide on-site maintenance services.

Warranty Feedback Form

Click Off!

- A. No sound
- B. Sound quality deteriorates
- C. Button mal-function
- D. Unable to pair other device
- E. Can not recharge
- F. Others

Date of purchase

Dealers of sale

When did the problem occur

User's Contact info

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.