


MEKAMON: QUICK START GUIDE
SIDE 1: INSTRUCTIONS V2.0

- WARM ORANGE
R236 G102 B59
C0 M71 Y79 K0
HEX#EC663B
COATED BLACK
C100 M79 Y44 K93
PMS Black 6 C
CHARCOAL
C40 M30 Y20 K66
PMS Cool Grey 10CP

QUICK START GUIDE

MEKAMON™

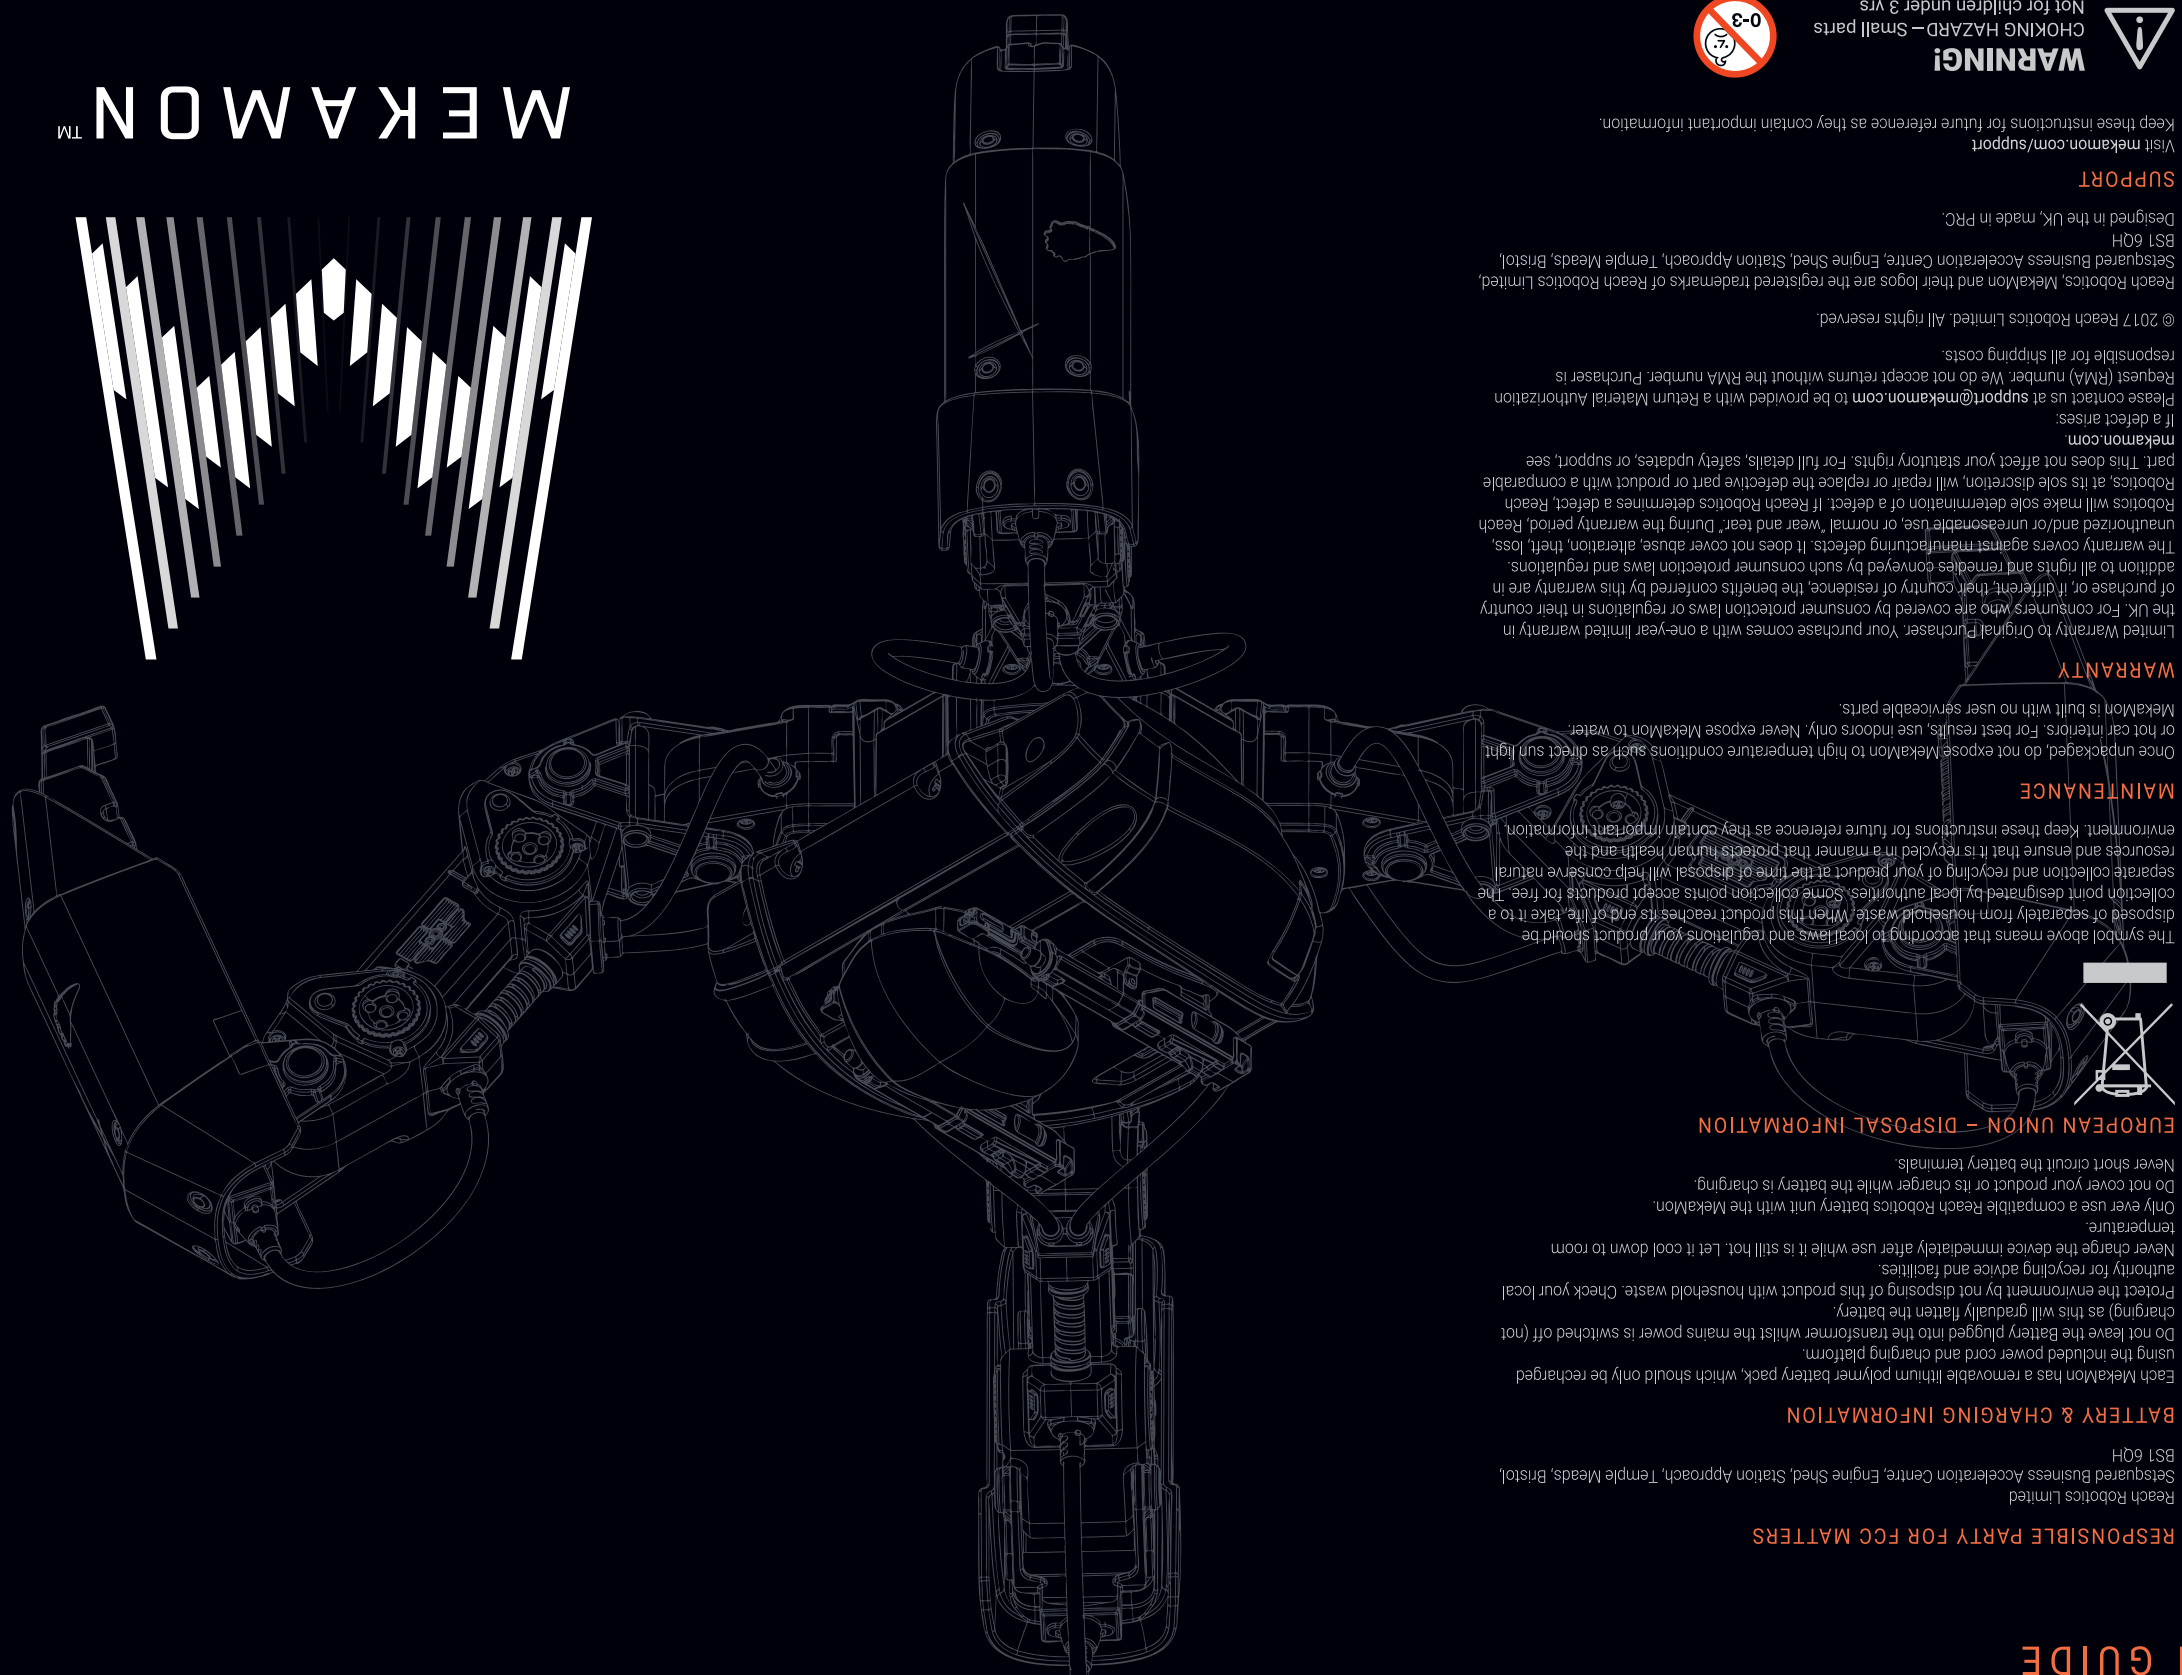

WARNING: Do not open or unscrew any part of Mekamon (including removal of the USB cover), except to remove the battery pack for charging, as this will invalidate your warranty.
FCC Compliance: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
RECHARGE DETAILS: Recharge Robotics Ltd. Model Numbers: RH-176200UK, RH-176200EU.
BATTERY CHARGING INFORMATION: Each Mekamon has a removable lithium polymer battery pack, which should only be recharged using the included power cord and charging platform.

PRODUCT INFORMATION GUIDE

SETTING UP YOUR MEKAMON™ ROBOT

Advance to the next level of battle. Where real world action meets virtual missions. Where cutting edge meets the front line.
Welcome to the future of gaming.

1 Attach the mains charging cable to the battery.
2 Connect the charger to the mains supply.
3 While the battery is charging, download the Mekamon™ app to your mobile device.
4 Attach the legs to the body, pushing firmly until an audible click is heard.
5 Insert the left and right Fury Cannons™ into their respective shoulder sockets.
6 Click a shield into place on each leg as shown.
7 When the battery is fully charged, the LED indicator will turn green.
8 Insert the battery into the body as shown.
9 Once the battery is inserted the Mekamon™ should activate.
10 Launch the app and follow the instructions to connect to your Mekamon™ robot via Bluetooth.


POWERING DOWN AND DISASSEMBLING YOUR MEKAMON™

To put the robot in suspend mode, hold the power button until the robot sits down.
To remove the battery, pull it from the body while squeezing the two release clips.
To remove a shield, push up from the base of the shield until it unclicks from the leg.
To remove a leg, press the leg release button on the underside of the robot and pull the leg from the body.
To remove the Fury Rifles™ pull them straight up out of the body.

MEKAMON: QUICK START GUIDE

SIDE 2: POSTER

V2.0

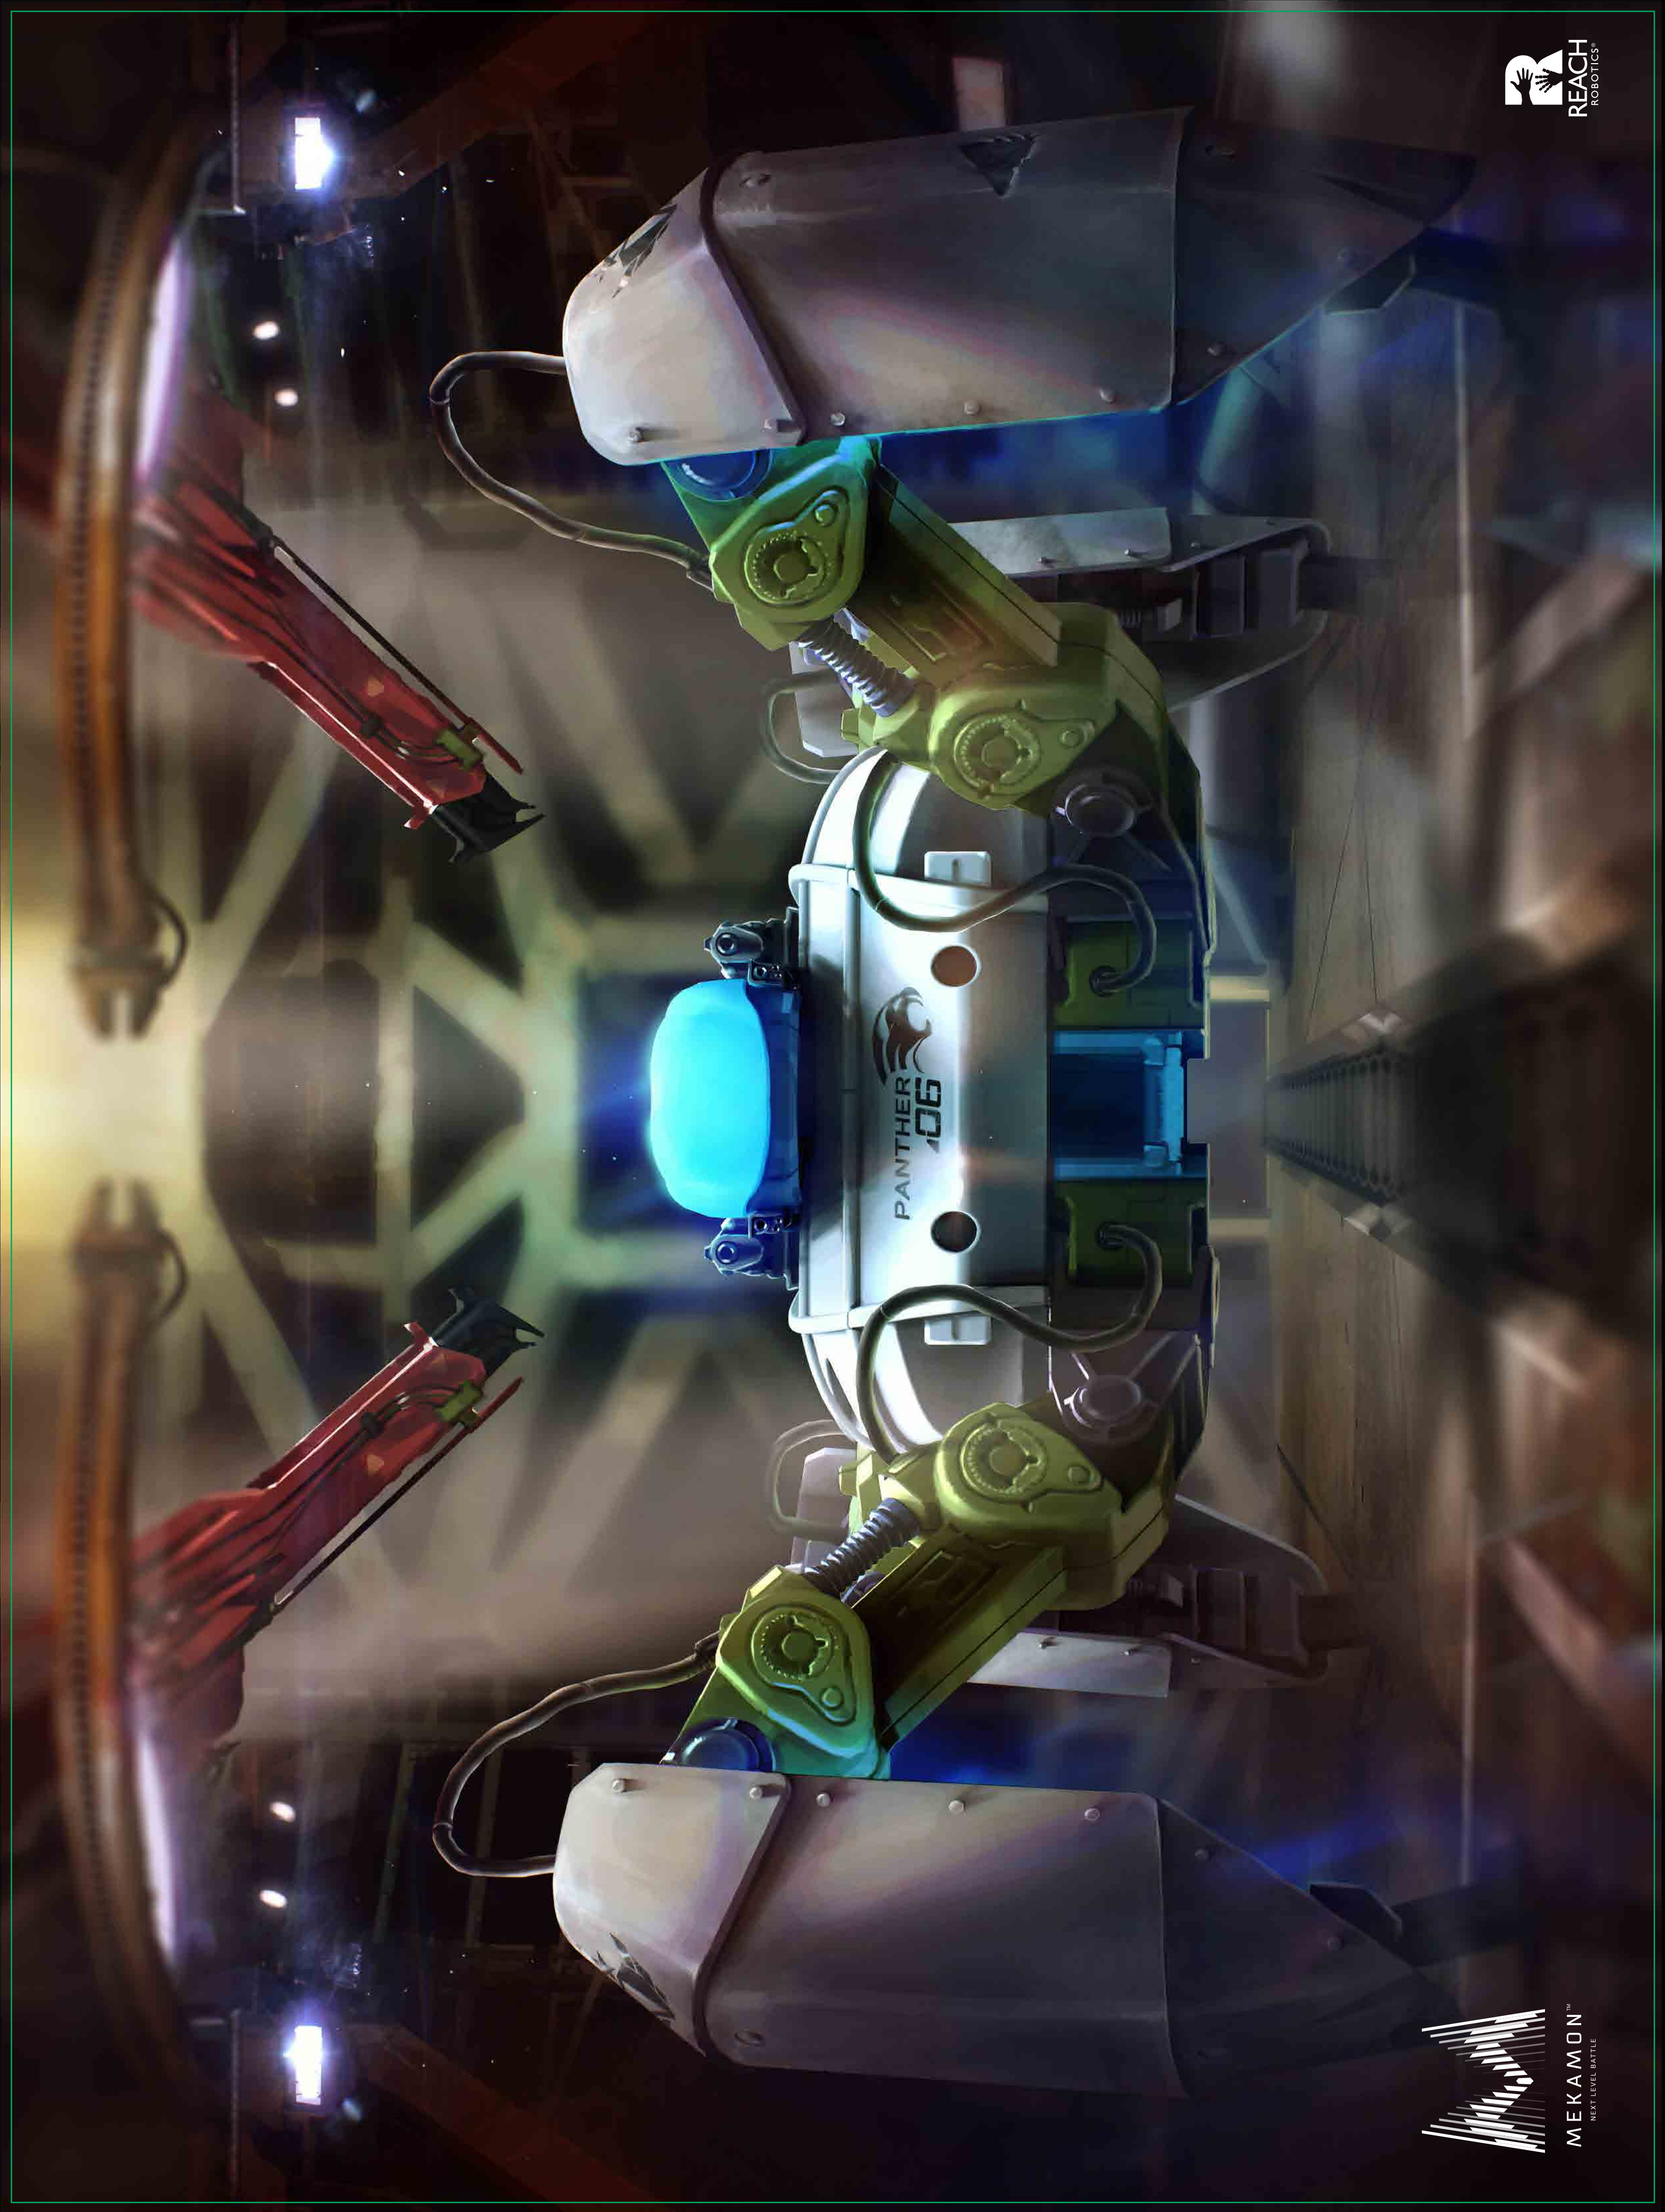

REACH
ROBOTICS

MEKAMON™
NEXT LEVEL BATTLE