



Safety instructions

Please read all safety information and operating instructions below before using the speaker to avoid injury and damage to your device.

WARNING: Failure to follow these safety instructions could result in fire, electric shock, or other injury or damage.
Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION: (Danger of explosion if the battery is incorrectly replaced). Repairs or battery removal must only be undertaken by an authorized specialist using the correct tools and equipment.

Warning

This speaker contains a lithium-ion battery, please ensure that you keep the battery charged to help extend its life.

We recommend fully charging the device before first use.

Avoid charging overnight, covering the device whilst charging or leaving the product unattended.

Ensure that the USB cable is fully removed from the device after charging is complete.

Only use the cable provided or certified cables to charge this product.

Do not strike the product with blunt or sharp objects.

To avoid damage do not throw or drop the power bank.

Use an adaptor with a 5.0V-5.5V to charge the product.

Correct voltage must be used to avoid damage to the speaker and associated equipment.

The manufacturers assume no responsibility for any damages resulting from improper operation of this product.

If the product power is drained, the speaker will require recharging.

Product must be stored in a dry place.

Do not use in the wet and avoid contact with dirt.

Do not throw the product into fire.

Do not allow children to play with this product or its accessories.

Do not disassemble or refit product, this could cause a fire or an explosion.

Do not use this product if any abnormalities occur, such as the product emitting odours, overheating, discolouring or form of the power bank warps.

Do not use extreme force when attaching/detaching cables to and from power bank Product may become hot after prolonged use.

Remove charging cable after use to prevent product power from draining.

This product has a built-in lithium battery, please use with care.

Accessories and adaptor must be used with this product only.

The supplier of this product retains the right to amend all information above.

Do not dispose in domestic waste, this product contains substances that could harm your health and/or the environment.

Charging electronic digital equipment


Please use the original cable of your electronic digital products for connection.

When the integrated USB cable is connected, your device will begin charging and the LED light will come on.

To utilise the wireless charging function, simply push the On button, and after the LED indicator light is on, place your mobile phone over the wireless charging symbol.

Unplug the charging cable after the digital product is fully charged.

Charge times varies by device.

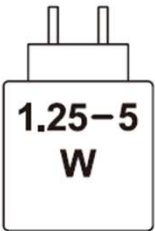

The power delivered by the charger must be between min 1.25 Watts required by the radio equipment, and max 5 Watts in order to achieve the maximum charging speed.

Controls



•Power on/Power off
(Press for 3 seconds)



•Short-press the button to
play / pause the music.



•Short-press the button to move to
the next song.
•Long-press the button to increase
the volume. (When maximum volume
is reached, you will hear a notification)



•Short-press the button to move
to the previous song.
•Long-press the button to decrease
the volume. (When minimum volume
is reached , you will hear a notification)



•Input port (Type C USB port)

Operation:

1. Press the power button  to power on the speaker.

Hold power button until speaker switches on.



2. Once the notification plays, the device is ready to be paired.

Turn on Bluetooth. Search for Grille Mini speaker. Connect.



3. When bluetooth is connected , you will hear a "connected" notification sound.

Connection is complete when you hear a beep.



Troubleshooting:

Fault	Solution
Unable to pair with other devices.	1.Check whether the speaker is still in the process of searching for a device. If not, try restarting the speaker. 2.If there are too many Bluetooth devices in the local area, there can be issues with the connection. 3.Make sure your bluetooth device is in " Pairing Mode".
The sound is low or distorted.	4.Check the Bluetooth device volume and then adjust it to an appropriate level. 5.Recharge the battery.
Music stops or lags	6.Check whether the speaker's effective transmission range is exceeded or if there is an obstacle between the speaker and Bluetooth devices.

Specification

Bluetooth:	v5.0
Material:	ABS
Distance:	10m
SNP:	≥96dB
Battery Type:	Polymer Li-Battery
Battery capacity:	300mAh
Input voltage:	DC 5V = 1.0A
Speaker:	40mm/4.0Ω/3W
Standby Time:	500 hours
Charging Time:	1-2 hours
Music Time:	3-4 hours
Product size:	70 x 70 x 37mm
FCC ID:	2ALSKCHMER2406

Hereby declare that item Grille Mini Speaker is in compliance with the essential requirements and other relevant conditions of Directive 2014/53/EU. The complete Declaration of Conformity can be found at www.techmerchandise.com.

Product Disposal

When this product reaches the end of its life, it must not be disposed of with general household waste. Care should be taken to dispose of in a suitable manner in accordance with your Local Authority Regulation.

FCC compliance statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

EU Economic Operator:

Brand Addition GmbH, Europastrasse 19a, 45888 Gelsenkirchen, DE

www.brandaddition.com/contact

Brand Addition Ltd., Manchester M17 1DD, UK

Brand Addition US, MO 63102 Saint Louis, USA.

Imported by: TM, UB8 2DB, United Kingdom

Made in China

Model number: 2406

PO number: 6613964

