



QUICK SETUP GUIDE

Wireless Sport Earbuds

NS-AHBTSPORT2

PACKAGE CONTENTS

- Wireless sport earbuds with earhooks
- USB charging cable
- Extra small and large ear tips
- *Quick Setup Guide*



Before using your new product, please read these instructions to prevent any damage.



V1
FINAL
FOR PRINT


FEATURES

- Ear clips for added security and more secure fit
- Up to six hours of music playback
- Sweatproof
- Microphone to make phone calls
- Compatible with most devices that have Bluetooth capability



CHANGING YOUR EARBUDS

- 1** Grip the earbud in one hand and the ear tip in the other, then twist and pull to remove the ear tip from the ear bud. Repeat for the other ear bud.
- 2** Select the correct size ear tips for your ears.
- 3** Still holding the ear bud in one hand, place the new ear tip over the ear bud and press together until joined. Repeat for the other ear bud.

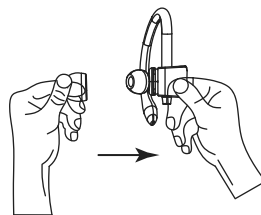

CHARGING YOUR EARBUDS

- The red indicator LED blinks twice fast every 20 seconds when the battery is low and you hear "battery low." To charge the battery, plug the microUSB charging cable into your computer and into the microUSB port on your earbuds. The red LED turns on to indicate that the battery is charging and turns off when fully charged.

Note: Earbuds will charge whether the power is on or off. However, when charging, it will stop playing music and power off.

USING YOUR EARBUDS

Turning your earbuds on and off

- To turn on your earbuds, press and hold the **MFB** button for two seconds. The LED blinks red for two seconds and you hear "power on."
- To turn off your earbuds, press and hold the **MFB** button for four seconds. The LED blinks red for two seconds and you hear "power off."

Final flat size: 15.35 × 4.65 in. (390 × 118 mm)
Final fold size: 3.07 × 4.65 in. (78 × 118 mm)

BASIC ACTIONS AND INDICATIONS

ACTION	OPERATION	LED INDICATION	SOUND
Charging		Red light is on	
Charging full		Lights are off	
Power on	Press and hold the MFB for two seconds	Red LED on two seconds	"power on"
Power off	Press and hold the MFB for four seconds	Red LED on two seconds	"power off"
Pairing mode	Press and hold the MFB button for more than five seconds in power off mode	Blue and red LED blinking alternately	"your device is connected"
Play/Pause	Press and release the MFB button	Blue LED blinking once every five seconds	
Volume Up/Down	Press and release the volume up or down button	Blue LED blinks once every five seconds	One beep when you reach maximum or minimum volume
Next Track/ Previous Track	Press and hold the volume up or down button for two seconds	Blue LED blinks once every five seconds	
Incoming call		Blue LED blinks twice every one second	Ring tone
Answer call	Press and release the MFB button when a call is incoming	Blue LED blinks once every five seconds	
Reject call	Press and hold the MFB button for two seconds when a call is coming in	Blue LED blinks once every five seconds	
Reset device list	Press and hold the MFB button more than eight seconds in power off mode	During the reset, the blue and red LEDs turn on at the same time. When the reset is complete, your earbuds enter pairing mode and the blue and red LED blink alternately.	
Disconnect the connected mobile phone	Press and hold the volume up and volume down buttons for more than two seconds. The connected mobile phone is disconnected and your earbuds enter pairing mode.	Red/blue LED fast flash alternately	"your device is disconnected"



PAIRING YOUR EARBUDS

Notes:

- Range is 33 feet (10 meters)
- Supports easy pairing

Pairing with a cell phone or MP3 player

- 1** With your earbuds turned off, press and hold the **MFB** button for five seconds. The blue and red LEDs blink alternately.
- 2** On your phone or MP3 player, select **NS-AHBTSPORT2** from the list of discovered devices.
- 3** If required, enter the password **0000** (four zeros) to pair your earbuds. For more information on pairing Bluetooth devices to your cell phone or MP3 player, see the device's documentation.

Note: After the earbuds have been successfully paired with the cell phone or MP3 player, the earbuds will automatically reconnect to the phone or MP3 player.

Pairing with a computer running Windows

Note: Before you pair the earbuds with the computer, make sure that the computer is equipped with Bluetooth. Refer to the computer's documentation or contact the computer manufacturer for more information. If your computer is not Bluetooth compatible, install a Bluetooth USB adapter (dongle).

- 1** Turn on Bluetooth on the computer. For instructions, see the computer's documentation or contact the computer manufacturer.
- 2** Double-click the **Bluetooth** icon in the system tray, then click **Add a device**.
- 3** With the earbuds turned off, press and hold the **MFB** button for five seconds. The LED blinks blue and red alternately. Pairing mode is activated.
- 4** Double-click the **NS-AHBTSPORT2** icon on the computer or highlight the icon, then click **Next**.
Note: If you are unable to locate the **NS-AHBTSPORT2** icon, click the **Search Again** button.
- 5** If required, enter **0000** (four zeros) in the **Bluetooth security code** field, then click **Next**.
- 6** After the earbuds have been paired, click **Close**.





Pairing with a Mac computer

Note: Before you pair the earbuds with the computer, make sure that the computer is Bluetooth compatible. Refer to the computer's documentation or contact the computer manufacturer for more information. If your computer is not Bluetooth compatible, install a Bluetooth USB adapter (dongle).

- 1 Turn on Bluetooth on the computer. For instructions, see the computer's documentation or contact the computer manufacturer.
- 2 Click the **Bluetooth status** menu.
- 3 Click **Set up Bluetooth Device**. The *Bluetooth Setup Assistant* opens.
- 4 Click **Continue**.
- 5 Select **Headset** as the device type, then click **Continue**.
- 6 With the earbuds turned off, press and hold the **MFB** button for five seconds. The LED blinks blue and red alternately. Pairing mode is activated.
- 7 Select **NS-AHBTSPORT2**, then click **Continue**. The computer gathers information.
- 8 Click **Continue**.
- 9 Enter **0000** (four zeros) into the **Passkey** field, then click **Continue**.
- 10 Click **Quit** to finish.

Note: To use the earbuds, they must be selected as the default input and output device on the computer.
- 11 Click **System Preferences**, then click **Sound**.
- 12 Under **Input**, select **NS-AHBTSPORT2**, then under **Output**, select **NS-AHBTSPORT2**.

Pairing a second device

- 1 Press and hold volume-/volume+ buttons for more than two seconds to unpair from the first device and enter pairing mode.
- 2 Pair the second device by following the instructions in *Pairing with a cell phone or MP3 player*.
- 3 To switch between paired devices, manually pause the current paired device, then manually play the second paired one.

RESETTING YOUR EARBUDS

- To reset your earbuds, with your earbuds turned off, press and hold the **MFB** button for eight seconds.

SPECIFICATIONS

Bluetooth version:	Bluetooth 4.1
Supported profiles:	A2DP, AVRCP, HFP, HSP
Frequency spectrum:	2.4 ~ 2.4835 GHz ISM Band
Working distance:	Up to 33 ft. (10 m)
Operating temperature:	Play music: 68 ~ 140° F (-20~ 60° C) Charging: 32 ~ 113° F (0~ 45° C)
Operating time:	Talk: 6 hours Music: 6 hours, playback music track
Standby time:	200 hours
Weight:	.68 oz (19.4 g)
Average charging time:	2 hours

TROUBLESHOOTING

PROBLEM	SOLUTION
No power	• Make sure that the earbuds' battery is charged. • Make sure that your earbuds are turned on.
No sound or low volume	• Shorten the distance between your earbuds and your Bluetooth device. • Make sure that your Bluetooth device is turned on, Bluetooth is turned on, and NS-AHBTSPORT2 is selected. • Turn up the volume on your earbuds and Bluetooth device. Make sure that your Bluetooth device is not muted. • Make sure that your earbuds are not paired to another Bluetooth device. • Make sure that your Bluetooth device is not paired to another Bluetooth device.
Cannot establish Bluetooth connection	• Make sure that your earbuds are in pairing mode. Press and hold the MFB button for five seconds to re-enter pairing mode. • Shorten the distance between your earbuds and your Bluetooth device. • Turn your devices off, then on. Re-pair your earbuds and your Bluetooth device. • Make sure that your earbuds are not paired to another Bluetooth device. • Make sure that your earbuds and Bluetooth device are both in pairing mode. • Make sure that your Bluetooth device supports Bluetooth v4.0. • Make sure that your Bluetooth device is not connected to any other device. • Make sure that you have selected NS-AHBTSPORT2 on your Bluetooth device.
My Bluetooth device keeps unpairing	• Shorten the distance between your earbuds and your Bluetooth device. • If the battery on your Bluetooth device is low, recharge the battery. • If the battery on your earbuds is low, recharge the battery.
NS-AHBTSPORT2 does not appear on my Bluetooth device	• Shorten the distance between your earbuds and your Bluetooth device. • Put your earbuds into pairing mode, then refresh your list of Bluetooth devices. For more information, see the documentation that came with your Bluetooth device.
Poor sound quality	• Shorten the distance between your earbuds and your Bluetooth device. • Try a different music source. • Pair your earbuds to a different device. • Try changing the volume on your music source.

LEGAL NOTICES

FCC statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, maybe cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RSS-Gen & RSS-247 Statement

This device complies with Industry Canada licence exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux

appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

RSS-102 Statement

This equipment complies with Industry Canada radiation exposure limits set forth for an uncontrolled environment.

Cet équipement est conforme à l'exposition aux rayonnements Industry Canada limites établies pour un environnement non contrôlé.

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

1-877-467-4289 (U.S. and Canada)

01-800-926-3000 (Mexico)

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2018 Best Buy. All rights reserved.
Made in China



300404130701D00

V1 ENGLISH 18-0016

