

148CM

210CM

[illegible]

INSTRUCTION MANUAL

GRANDMASTER BLASTER

50BX376K

How to Use:

- Pairing with Bluetooth**
 1. Turn on the power switch of the Grandmaster Blaster mode.
 2. Turn on Bluetooth on your mobile phone.
 3. Select the "Grandmaster Blaster" mode and connect it to play music.
 4. Select the "Grandmaster Blaster" mode and connect it to play music.
- TVS Function**

Turn on the TVS (TVS) function, double press the M button on the side of the speakers to connect to TVS connection. Then connect your mobile with any one of 2 speakers, the other will be connected to the same way.
- Voice prompt**

Press the prompt button to play voice prompts.
- FM Function**

Press the FM button to play music to switch to the radio mode.

 - 4.1 Connectivity (FM) - Confirm it as antenna.
 - 4.2 Connectivity (FM) - Confirm it as antenna.
 - 4.3 Double press the M button to turn automatically station searching.
 - 4.4 Double press the M button to turn manually station searching.

The radio signal and station switch (FM) is affected by the conditions in your area.
- Switching functions (Mode button)**

Bluetooth mode

FM mode

USB mode (Built-in card)

TF (removable) mode
- Charging light**

Long Press the button to turn on/off the LED light.
- Charging**

Charging indicator

Plug the power cord into the charging port and plug the other end into the power outlet. Plug the other end into the power outlet.