

PAIRING AND POWERING OFF EARBUDS

NOTES FOR PAIRING

- KEEP THE DISTANCE BETWEEN YOUR SMARTPHONE AND THE EARBUDS EARBUDS WITHIN 3 FEET (FOR PAIRING ONLY).
- THE EARBUDS MUST BE POWERED ON IN ORDER TO PAIR.
- BEFORE ATTEMPTING TO PAIR, MAKE SURE THAT YOUR SMARTPHONE OR TABLET'S BLUETOOTH FUNCTION IS ENABLED UNDER SETTINGS. SPECIFIC CHARGING PROCEDURES WILL BE DIFFERENT DEPENDING ON DIFFERENT BRANDS AND MODELS. FOR DETAILED INFORMATION ON PAIRING, PLEASE REFER TO YOUR DEVICE'S USER MANUAL.

STEP 1: PRESS AND HOLD THE MULTIFUNCTION BUTTONS ON EACH EARBUD FOR 3 SECONDS. YOU WILL SEE THE LED FLASH RED AND BLUE ON EACH SIDE, INDICATING THAT THE POWER IS ON. YOUR EARBUDS ARE NOW IN PAIRING MODE.

STEP 2: OPEN YOUR SMART DEVICE'S SETTINGS MENU AND ACTIVATE BLUETOOTH PAIRING. YOUR SMART DEVICE (PHONE, SMARTPHONE, ETC.) WILL PERFORM A SEARCH FOR LOCAL DEVICES. AFTER A FEW SECONDS YOU'LL SEE EARBUDS APPEAR ON THE LIST.

STEP 3: SELECT THIS OPTION. ONCE THIS HAPPENS, YOUR EARBUDS ARE READY TO USE.

*YOU MAY WISH TO ONLY USE ONE EARBUD (SINGLE MODE) INSTEAD OF USING THE PAIR TOGETHER (DUAL MODE) WHEN THIS IS THE CASE. SIMPLY TURN ON THE EARBUD YOU WISH TO USE AND FOLLOW THE SAME STEP WHILE KEEPING THE OTHER EARBUD TURNED OFF. YOU WILL HAVE THE SAME GENERAL FUNCTIONALITY.

AUTO-PAIRING

ONCE YOU HAVE SUCCESSFULLY PAIRED YOUR EARBUDS TO A BLUETOOTH-ENABLED DEVICE, THAT DEVICE WILL REMEMBER AND RECOGNIZE YOUR EARBUDS FOR AUTOMATIC RE-PAIRING. THIS MEANS THAT THE NEXT TIME YOU WISH TO USE YOUR EARBUDS WITH THAT SMART DEVICE, PAIRING WILL HAPPEN AUTOMATICALLY AND WITHOUT THE NEED FOR YOU TO REPEAT YOUR DEVICE'S BLUETOOTH DISPLAY SCREEN.

POWERING OFF EARBUDS

POWER OFF EACH INDIVIDUAL EARBUD: PRESS AND HOLD THE MULTI-FUNCTION BUTTON ON EITHER EARBUD FOR 6 SECONDS, BOTH EARBUDS WILL POWER OFF.

POWER OFF BOTH EARBUDS BY CHARGE CASE: DOCK BOTH EARBUDS INSIDE THE CHARGING CASE, NOW PRESS THE CHARGING CASE'S POWER BUTTON ONCE TO POWER OFF AND CHARGE BOTH EARBUDS.

READING THE LED INDICATOR

UNIT	LED INDICATION	MEANING
TW2	LED FLASHES RED AND BLUE HOLDING MY BUTTON FOR 3 SECONDS	THE EARBUDS HAVE NOT POWERED ON AND ARE IN PAIRING MODE.
	LED FLASHES RED WITH FLASHING MULTIFUNCTION BUTTON FOR 3 SECONDS	THE EARBUDS ARE POWERING OFF.
	LED FLASHES RED AND BLUE	THE UNIT HAS LOW POWER AND SHOULD BE RECHARGED.
	LED IS OFF	THE EARBUDS AND/OR CASE ARE CHARGING.
CHARGING CASE	LED DOES NOT DISPLAY ANY COLOR/LIGHT	THE EARBUDS AND CASE ARE FULLY CHARGED.
	1 OF 2 BLUE LEDS ARE ILLUMINATED	THE UNIT IS OPERATING WITH LOW BATTERY LIFE.
	BOTH BLUE LEDS ARE ILLUMINATED	THE UNIT IS OPERATING WITH A FULL BATTERY LIFE.

FUNCTIONS & ACTIONS

	FUNCTION	ACTION
BLUETOOTH PAIRING	PAUSE	UNPAIRS CURRENTLY PAIRED DEVICE. THE UNIT WILL BE RE-PAIRED.
	REPAIR LOCAL (DUAL MODE)	PRESS THE MULTIFUNCTION BUTTON TO PAIR AND REPAIR LOCAL.
	REPAIR LOCAL (SINGLE MODE)	PRESS THE MULTIFUNCTION BUTTON TO PAIR AND REPAIR LOCAL.
	REPAIR LOCAL (SINGLE MODE)	PRESS THE MULTIFUNCTION BUTTON TO PAIR AND REPAIR LOCAL.
	REPAIR LOCAL (SINGLE MODE)	PRESS THE MULTIFUNCTION BUTTON TO PAIR AND REPAIR LOCAL.
MUSIC & AUDIO	PLAY/PAUSE	PLAY/PAUSE THE MUSIC/VIDEO.
	VOLUME UP/DOWN	INCREASE/DECREASE THE VOLUME.
	VOLUME & PLAYLIST CONTROLS	SEE YOUR SMARTPHONE'S MUSIC APP FOR MORE DETAILS.



SAFETY PRECAUTIONS/WARNINGS

IF YOU HAVEN'T USED YOUR EARBUDS IN A WHILE OR PLAN TO GO LONG PERIODS OF TIME WITHOUT USING THEM, BE SURE TO CHARGE THE UNIT ONCE A MONTH TO PREVENT DAMAGE TO THE LITHIUM ION BATTERIES OVER THE TIME. DO NOT ATTEMPT TO PIERCE, STRIKE, OR APPLY STRONG PRESSURE WITH SHARP OR HEAVY OBJECTS. STRONG IMPACT OR SHOCKS COULD CAUSE IRREVERSIBLE DAMAGE TO THE UNIT.

AVOID PROXIMITY TO HIGH FREQUENCIES AND STRONG MAGNETIC DEVICES WHEN POSSIBLE. DROPPING OR MISHANDLING THE EARBUDS MAY CAUSE IRREPARABLE DAMAGE TO THE UNIT AND ITS BATTERIES. DO NOT EXPOSE TO OR SUBMERGE IN WATER.

KEEP EARBUDS AWAY FROM HEATING APPLIANCES AND SOURCES OF ELECTRICAL NOISE, SUCH AS FLUORESCENT LAMPS OR MOTORS. KEEP HANDS DRY AND CLEAN WHEN TOUCHING THE EARBUDS AND BUTTONS.

KEEP THE EARBUDS AWAY FROM SMALL CHILDREN AT ALL TIMES OR UNDER STRICT SUPERVISION BY AN ADULT AT ALL TIMES. THE UNIT CONTAINS SMALL PARTS AND MAY POSE A CHOKING HAZARD.

DO NOT EXPOSE THE EARBUDS OR ANY ELECTRICAL PARTS TO EXTREMELY HIGH OR EXTREMELY LOW TEMPERATURES OR HIGH PRESSURE. DO NOT EXPOSE THE EARBUDS OR CASE TO FIRE, DIRECT SUNLIGHT, DUST, HIGH LEVELS OF HUMIDITY, OR OTHER HOT LOCATIONS. THIS MAY CAUSE THE BATTERY TO GENERATE HEAT, CAUSE OR EXPLODE. USING THE EARBUDS OR CHARGING CASE IN THIS MANNER MAY ALSO RESULT IN A LOSS OF PERFORMANCE IN A SHORTENED LIFE EXPECTANCY.

DO NOT ATTEMPT TO DISASSEMBLE OR MODIFY THE EARBUDS EARBUDS OR CASE IN ANY WAY.

IMMEDIATELY DISCONTINUE USE IF THE UNIT HAS ANY VISIBLY EXPOSED PARTS OR APPEARS MALFUNCTIONAL IN ANY WAY.

IF THIS DOES OCCUR, ISOLATE THE EARBUDS IN A SAFE PLACE AND CONTACT THE GEN TEK CUSTOMER SUPPORT TEAM AT HELLO@AFRIND.COM.

Fe 11 CE

© 2024 GEN TEK INDUSTRIES INC. ALL RIGHTS RESERVED. GEN TEK IS A REGISTERED TRADEMARK OF GEN TEK INDUSTRIES INC. OTHER TRADEMARKS AND TRADE NAMES ARE THOSE OF THEIR RESPECTIVE OWNERS. MANUFACTURED AND SUPPORTED BY GEN TEK INDUSTRIES INC. 100 WEST 4TH STREET, 7TH FLOOR, NEW YORK, NY 10013. ALL RIGHTS RESERVED. GEN TEK INDUSTRIES INC. CONTENTS AND COLORS MAY VARY FROM ILLUSTRATED. THE BLUETOOTH WORD MARK AND LOGO ARE OWNED BY THE BLUETOOTH SIG INC. YOUR AIDS 12N. THIS IS NOT A TOY. (MADE IN CHINA)



EP-015



Includes: 1x Pair-TW2 • 1x Portable Charging Case • 1x Micro-USB Charging Cable

QUICKSTART GUIDE: MEET YOUR TW2 - WIRELESS EARBUDS



 
STEP 1 - POWER ON BOTH EARBUDS BY PRESSING THE POWER BUTTON ON THE CHARGE CASE OR PRESS AND HOLD THE MULTIFUNCTION BUTTON ON EACH EARBUD.



STEP 2 - ACTIVATE BLUETOOTH PAIRING IN YOUR SMARTPHONE'S SETTINGS MENU. YOU WILL SEE "TW2" OPTION APPEAR.



STEP 3 - SELECT "TW2" AND WAIT 3 SECONDS UNTIL YOU HEAR THE SOUND PROMPT. YOUR DEVICE AND TWO EARBUDS ARE NOW PAIRED.



• TO ONLY USE ONE EARBUD IN SINGLE MODE, ONLY TURN ON ONE OF THE EARBUDS AND COMPLETE PROCESS.

• THE LAST SUCCESSFULLY PAIRED DEVICE WILL CONNECT AUTOMATICALLY DURING THE NEXT PAIRING ATTEMPT.

MISSSED A STEP? BEFORE ATTEMPTING TO REPAIR, TRY THESE ALTERNATIVE STEPS:

A. POWER OFF BOTH EARBUDS BY PRESSING AND HOLDING THE MULTIFUNCTION BUTTON FOR 6 SECONDS OF EACH EARBUD. POWER OFF THE CHARGING CASE BY PRESSING AND HOLDING THE POWER BUTTON FOR 6 SECONDS.


B. TURN ON YOUR DEVICE'S BLUETOOTH FUNCTION. POWER OFF BOTH EARBUDS BY PRESSING AND HOLDING THE MULTIFUNCTION BUTTON ON EACH EARBUD FOR 6 SECONDS. TURN ON YOUR DEVICE'S BLUETOOTH FUNCTION. POWER OFF BOTH EARBUDS BY PRESSING AND HOLDING THE MULTIFUNCTION BUTTON ON EACH EARBUD FOR 6 SECONDS.

C. PRESS THE POWER BUTTON ON THE CHARGING CASE. THE EARBUDS WILL TURN ON AND PAIR TO EACH OTHER AUTOMATICALLY.

STILL HAVE PAIRING QUESTIONS? NEED HELP? CONTACT OUR SUPPORT TEAM AT: WWW.AFRIND.COM/SUPPORT | 1-646-351-5700 (MON-FRI, 9AM-6PM EST) | HELLO@AFRIND.COM | REGISTER YOUR TRUE WIRELESS EARPHONES: WWW.GENTEX.COM

TW2 ERGONOMIC IN-EAR DESIGN

 - MULTIFUNCTION BUTTON
- MICROPHONE
- CHARGING PORT

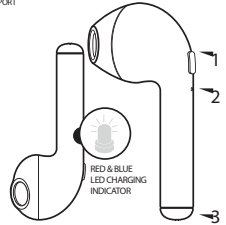


TECHNICAL SPEC

BLUETOOTH 5.0	Playtime: 3 Hours (based on 100% charge)	Standby Time: Up to 100 Hours	Charges Provided (Case/Power) Up to 4
Battery Type: Rechargeable Lithium-ion	Input: 5V/1A	Earbud/Battery Life: 40 (max) (Earbud)	Frequency Response: 20Hz-20KHz

*NOTE: USING YOUR EARBUDS AT LOWER VOLUMES WILL HELP PROLONG THE BATTERY LIFE BETWEEN CHARGES

 
400mAh CHARGING CASE

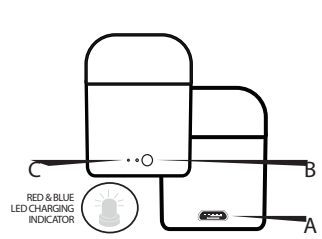


- MICRO-USB CHARGING PORT
- POWER BUTTON
- LED INDICATOR

Battery Type: Rechargeable Lithium-ion	Charges Provided (Case/Power) Up to 4	Charging Case/Battery Output: 5V/800mAh	Impedance: 32Ω
---	--	--	----------------

 CHARGING YOUR EARBUDS & CASE*

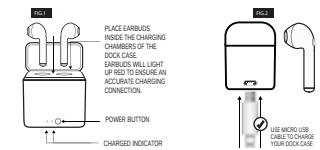

 NOTE: THE EARBUDS WILL REQUIRE UP TO 1 HOUR DOCKED IN THEIR CHARGING CASE TO RECHARGE THEIR BATTERIES WHEN FULLY POWERED. THE PORTABLE CASE WILL PROVIDE THE EARBUDS WITH UP TO 4 ADDITIONAL CHARGES.



1. INSERT THE EARBUDS INTO THEIR CORRESPONDING CHARGING PORTS IN THE CASE, RESPECTIVELY MARKED: L AND R (PAGE 1).
2. PRESS EACH EARBUD FIRMLY INTO ITS SLOT UNTIL YOU HEAR A "CLICK" TO INDICATE THAT IT IS SECURE. CLOSE THE CASE.
3. INSERT THE INCLUDED MICRO-USB CHARGING CABLE INTO THE BACK OF THE CHARGING CASE AND CONNECT TO A POWER SOURCE (SUCH AS A POWER BANK, AC WALL ADAPTER, ETC.) (PAGE 2).
4. YOU WILL SEE THE EARBUDS FLASH RED TO INDICATE THAT AUTOMATIC CHARGING HAS BEGUN. THE CASE'S EXTERIOR LED WILL GLOW A STEADY BLUE.
5. WHEN THEY HAVE FINISHED CHARGING, ALL LEDS WILL TURN OFF TO INDICATE THAT THE EARBUDS AND CASE ARE FULLY CHARGED.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.