


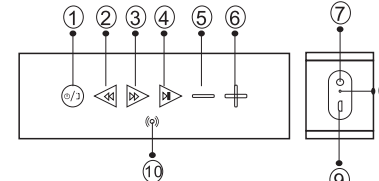

- ① Power Button
- Bluetooth Indicator
- Charging Indicator
- ② Previous Track
- ③ Next Track
- ④ Multi-function Button
- EQ Switch
- ⑤ Volume-
- ⑥ Volume+
- ⑦ 3.5mm AUX Port
- ⑧ Reset
- ⑨ Micro USB Charging Port
- ⑩ NFC



FUNCTION	OPERATION
Power on/off	Hold the Power Button for 2 seconds.
Answer a call/ Hang up	Tap the Power Button.
Reject a call/ Redial	Double click the Power Button.
Play/Pause	Tap the Multi-function Button
Previous track	Tap the Previous Track Button
Next track	Tap the Next Track Button
Volume up/ down	Tap the Volume+ / Volume-button.
Disconnect Bluetooth	Hold the Next Track for 2 seconds.
Voice dial (Siri) on iPhone	Double click Multi-Function Button
EQ (Switch two EQ settings)	EQ1: normal bass (will hear short "dudu" prompt sound) EQ2: heavy bass (will hear long "du" prompt sound) Hold the Multi-Function Button for over 2 seconds to switch to another EQ.

FUNCTION	OPERATION
Power on/off	Hold the Power Button for 2 seconds.
Answer a call/ Hang up	Tap the Power Button.
Reject a call/ Redial	Double click the Power Button.
Play/Pause	Tap the Multi-function Button
Previous track	Tap the Previous Track Button
Next track	Tap the Next Track Button
Volume up/ down	Tap the Volume+ / Volume-button.
Disconnect Bluetooth	Hold the Next Track for 2 seconds.
Voice dial (Siri) on iPhone	Double click Multi-Function Button
EQ (Switch two EQ settings)	EQ1: normal bass (will hear short "dudu" prompt sound) EQ2: heavy bass (will hear long "du" prompt sound) Hold the Multi-Function Button for over 2 seconds to switch to another EQ.

Bluetooth indicator flashes white	Pairing mode
Bluetooth indicator becomes solid white	Paired / connected in AUX mode
Charging Indicator On	Charging
Charging Indicator Off	Fully charged

Charging

1. Connect the charger to the USB port on the speaker.
2. Connect the USB on the other end of the charger to any USB charging adapter or active computer USB port.
3. Charging will start automatically with the charging indicator turning red.
4. The speaker is fully charged when the charging indicator turns off.

1. Please make sure the speaker is within 3 feet of your device, like a cell phone.
2. Press and hold the Power Button for 3 seconds until the white light flashes. You will also hear a prompt sound.
3. Turn on the Bluetooth function on your phone and search for nearby Bluetooth devices.
For iOS: Settings > General > Bluetooth > On
For Android: Settings > Bluetooth > On > Scan for devices
4. Find "MBOX" in the search results and tap on it to connect.
5. The Bluetooth indicator will turn solid white.

1. Press and hold the Power Button for 5 seconds until the white light flashes. You will also hear a prompt sound.
2. Enable your device's NFC function.
3. Put your device near the NFC chip location.
4. Click "Yes" on your device's screen to confirm Bluetooth connection.
5. When the Bluetooth speaker and your device are successfully paired, the white indicator will be solid.

reset the speaker, please use a 1.0mm pin or probe to press the reset button for 5 seconds.

Usage Tips

When not in use, please power off the speaker and store in a cool, dry place.

The operational range of the speaker may be influenced by obstructions, such as walls, pillars, etc. To ensure a stable connection, we recommend avoiding such obstructions whenever possible and/or shortening the distance during use.

To protect the long-term performance of the battery, please do not place the speaker in high temperatures above 40°F/60°C, such as in a hot vehicle or under direct sunlight.

Bluetooth Profile	A2DP,AVRCP,HSP,HFP
Audio Output	2X8W
Operating Range	10 meters/33 feet
Working Time	About 12 hours
Charging Power	DC 5V/1A
Charging Time	About 3~4hours
Weight	350g/12.3oz
Dimensions	16.6x6x4.7cm 6.5x2.36x1.85in

Bluetooth Profile	A2DP,AVRCP,HSP,HFP
Audio Output	2X8W
Operating Range	10 meters/33 feet
Working Time	About 12 hours
Charging Power	DC 5V/1A
Charging Time	About 3~4hours
Weight	350g/12.3oz
Dimensions	16.6x6x4.7cm 6.5x2.36x1.85in

- My speaker will not switch on.
- a. Please recharge it and make sure it is enough power.
- b. Plug the unit into a charger and see if the LED indicator becomes solid red.
- Why can't the speaker connect to my device?
- a. Check to ensure the Bluetooth function of your device is enabled.
- b. Make sure your device is within 10m/1m of the speaker.
- c. Try tapping on the previous paired device to see if they can be connected again.
- d. Delete the pairing record(s) on the speaker or your device. And, re-pair them.
- Can I use the speaker to play music while charging?

- a. protect the long-term performance of the battery, it is better to charge when the speaker is turned off, especially when the battery is low.
- b. Can I make or answer phone calls through the speaker?
- c. Yes. The speaker has a built-in microphone.
- d. Why can't I connect by NFC?
- e. a. Make sure that your device supports NFC functionality.
- f. b. Keep your mobile device close to the speaker. c. Keep your mobile device close to the speaker when attempting to connect.
- g. c. Disable the Bluetooth connection of the speaker to other devices.

warranty

Our guarantee that every product has been tested before shipping. Following the date of purchase, we offer a 30-day money-back guarantee and a 12 months warranty. For detailed information, please contact our customer service.

Contact Us

For any inquiries, issues or comments concerning our products, please send an email to the address below and we will respond as soon as possible.

E-mail: support@hussar.com

Website: www.hussar.com



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. **Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable

tection against harmful interference in a residential installation. This equipment generates radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.