


297*210mm

DEFIANT®

Item #: 1004379716 / 1004379901
1004380451 / 1004380571
Model #: 18FL0834

USE AND CARE GUIDE

RECHARGEABLE TOUCH LIGHT WITH BLUETOOTH SPEAKER

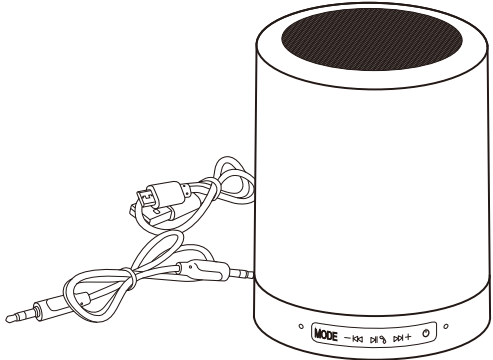

Bluetooth® BC

Rating: INPUT 5V 2A MAX
Questions, problems, missing parts?
Before returning to the store,
Call Defiant Customer Service
8 a.m. – 7 p.m., EST, Monday-Friday,
9 a.m. – 6 p.m., EST, Saturday
1-866-308-3976
HOMEDEPOT.COM

Safety Information

⚠

WARNING:

Read and follow all warnings and instructions in this manual to avoid personal injury or property damage.

1. Never place the flashlight face down when light is on or is still hot from recent use. Doing so could burn/ignite surfaces such as seats, carpeting ,etc. and cause major property damage. Always turn the flashlight off when not in use.

2. Always unplug the USB cable from the power source when not in use.

3. DO NOT place the light in water. Keep all components dry and out of water at all times. Dry location use only.

4. DO NOT allow children to handle or operate this light.

5. DO NOT use this product for other than its intended use.

6. DO NOT charge or operate in close proximity of combustible or flammable materials.

7. DO NOT charge battery in gas-heavy enclosures.

8. DO NOT attempt to charge or operate this light if USB, battery, bulb or any part of the flashlight is damages or corroded.

9. To prevent accidental electrical shock we recommend this product always be charged on a GFCI (Ground Fault Circuit Interrupter) outlet.

10. Only use charging devices that are provided with the LED flashlight or its replacements.

11. DO NOT disassemble or tamper with the battery.

12. DO NOT dispose of battery in fire as this may result in explosion.

Warranty

⚠

This product is guaranteed to be free of defects in materials and workmanship for 1 years from the date of purchase. If this product is defective, call 866-308-3976 for repair or replacement parts or return the product to the store from which it was purchased.

⚠

Guarantee does not include normal wear and tear, LED or batteries.

Pre-Operation

1. Package Contents

A

Rechargeable Touch Light with Bluetooth Speaker

1

B

USB Charging Cable

1

C

3.5 mm AUX Cable

1

2. Product Diagram

Touch Sensor

LED Indicator

Charging Port

3.5 mm AUX Input

Hook

Reset

Power ON/OFF

Press Once

Skip to the next track

Long Press

Increase the volume

Play/pause music

Answer/end phone calls

Press Once

Skip to the previous track

Long Press

Decrease the volume

MODE

Switch from AUX to Bluetooth

Operation

1. Operating the Light

⚠

WARNING:

Read and follow all safety warnings and instructions in the user manual before operating the light.

!

IMPORTANT:

Battery is ready to use when purchased. A fully charged battery will provide approximately 3 hours of continuous light.

□

Long-press the  to turn on modes of low light. Tap top to switch warm light among low/medium/high/OFF.

□

Hold top to activate colorful light, then tap top to switch among colorful lights (Red/Green/Blue/Yellow/Teal/Alternating Fading Colors/OFF.)

□

Hold top to turn off the light.

2. Playing Music

A. Bluetooth Mode

□

Long-press  to turn the power on.

□

Long-press the MODE button to activate Bluetooth mode. It will sound a prompt tone, and the Bluetooth LED indicator will flash.

□

Pair your device with the Bluetooth speaker via “T-Speaker” on your phone or devices.

□

Once successfully paired, you will hear a prompt tone. The LED indicator will show a solid light.

□

Press  once to play or pause music and answer calls.

□

Press  + or -  once to skip to the next / previous song. Long press to increase / decrease the volume.

□

Long-press the MODE button to turn off Bluetooth mode. The LED indicator will turn off.

B. AUX mode

□

Connect your device to the speaker via AUX cable.

□

It will sound a prompt tone once connected successfully.

□

You can then play the music by your devices ONLY.

C. Switch AUX mode to Bluetooth mode.

□

When in AUX mode, press MODE once to turn off AUX mode. Then long-press MODE to activate Bluetooth mode.

D. Switch Bluetooth mode to AUX mode.

□

When in Bluetooth mode, long press MODE to turn off Bluetooth mode. Press MODE once to activate AUX mode.

3. Recharging the battery

□

A warning tone will sound constantly to remind you it is in low-power status.

□

Insert the micro USB cable into the micro USB port. The LED indicator will turn red.

□

The LED indicator will turn off automatically when the light is fully charged.

Specifications

Production Information	Specifications	Production Information	Specifications
Input	DC 5 V 2 A MAX	Run Time for Light	2.5 hours
Battery	1800 aMh, 6.66 Wh	Bluetooth	2.1 Version
Charge Time	Approx 4.5 hours	Bluetooth Max Output Power	4.0 dBm
Bluetooth work distance	10 m	Frequency Band	2400 MHz - 2483.5 MHz

Care and Maintenance

□

Always keep the battery fully charged when not in use.

□

For best results, fully charge the battery after each use. This will prolong the overall life of the battery.

Troubleshooting

□

If the light is dim, make sure the battery is well-charged.

□

If the battery charging indicator does not turn on, make sure the cable is correctly connected.

Notes

□

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

□

Please note that changes or modifications of this product is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

□

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
– Reorient or relocate the receiving antenna.
– Increase the separation between the equipment and receiver.
– Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
– Consult the dealer or an experienced radio/TV technician for help.