



**Fold**

[illegible]

## iPro Quick Start

### Google's Find Hub

Thanks for purchasing iPro! Let's get it connected to the Find Hub app.

- 1**

Power on: Press and hold the button for 5 seconds, the device will beep and turn on. (To confirm your device is powered on: Double-click the device button, the device will make a sound.)

Open the Find Hub app on your Android™ device. A pop-up showing iPro will appear. Select "Connect", "Agree" and "Continue".
- 2**

Set a custom name for your device. Your device is now connected.
- 3**

Fully charge the iPro battery using a wireless charging pad. iPro will last about 8 months on a single charge.

See inside for helpful tips & tricks →

**Follow the tips below for the best iPro experience.**

- Charge your iPro every 5 months to get the best finding experience.
- Use the iPro with a leather or fabric wallet and place in the outermost pocket.
- Share your iPro with family inside the Find Hub app, so they can help you find your wallet.
- Still having trouble? Reach out to our support team at [orders@mykeysmart.com](mailto:orders@mykeysmart.com).

**Operating Instructions**

- Power On: Press and hold the button for 5 seconds, the device will send a prompt tone, and the device has been turned on.
- Disable: When the device is powered on, press the button 5 times in 2 seconds, the device will send a prompt sound, and the device will enter the shutdown sleep mode.
- To Enable Identification: Locate the ON/OFF button on the iPro. Quickly press the button six times within 2 seconds.

**Locate your iPro**

1. Open Find Hub app and select the iPro under the "My Devices" list.
2. Tap on your iPro.
3. Tap "Play Sound" to trigger the iPro locator sound.
4. Tap "Stop Sound" to stop the sound once your iPro is found.

**Removing iPro from Google's Find Hub.**

- To remove your iPro from the Find Hub app, select the gear icon to navigate to Device Details.
- At the bottom of the screen, select "Remove from Find Hub".

**How to Perform a Factory Reset**

- After the device is turned on, click the device button 4 times in a row, and the device will sound a prompt sound. When you hear the device tone, continue to press and hold the button for about 8 seconds until the device sounds again, release the button, and at this point, the factory reset is complete.

**Legal**

Google, Android and Find Hub are trademarks of Google LLC. This product has been certified by Google to meet Find Hub network accessory specifications. Google is not responsible for the operation of this product. Google is also not responsible for ensuring that the product complies with any applicable safety standards or other requirements.

**KeySmart iPro**

KS431-V4

Curv Group, LLC

860 Bonnie Ln, Elk Grove Village, IL 60007, USA

**Use And Care**

KeySmart iPro is water-resistant but not waterproof. We encourage you to bring your KeySmart iPro along on most of your wild adventures, but deep-sea explorations (and the like) are not recommended. It is not recommended that you expose the KeySmart iPro to extreme hot or cold temperatures.

## Printed Instruction Manual

DATE:  
**2026-05-14**

REV

**X1**

PAGE

**1**