

Haylou-T17 True Wireless Earbuds User Manual

 Overview How to Wear Please adjust earbud to fit yourself best. How to Charge Put earbuds into carry case to charge. LED on earbud will breathe white when charging and turn off once toping up. You may charge the case via USB cable or choose wireless charging. LED always solid red when you charge the case and turns white once it is topped up. Low battery warning: LED on case will blink red promptly when battery level is under 20%. | Features - Bluetooth 5.0 TWS earbuds & Pick-up in use - App/MAC - Four way mic with noise canceling & call - Infrared waving detection - Vibration feedback sensor offering precise control - 30 hours of standby - Wireless charging - Low battery warning & Stable connection - Exclusive APP with opening led to connect and pairing animation Power-on Open lid to power on. Power-off - Put earbuds back into case to power off. - Auto power off with no connection beyond 5 minutes. | How to Connect **1. Auto pairing** Take out both earbuds from the case. On phone, search for Haylou T17_Kit, and tap to connect. Notice: removing you to connect to the other earbud will jump out on phone and tap to connect. If 30 hours of standby, please push earbuds back into case and try again. After connection, earbuds will auto-connect to the last device upon powering on again (Bluetooth function has to be activated). Note: Earbuds have been initialized upon shipping out. Power-on Open lid to power on. Power-off Put earbuds back into case to power off. Auto power off with no connection beyond 5 minutes. | - How to Link with APP Please use QR Code on package or below to download and install Haylou APP. - Or you may also download and install it in APP market. - For first time linking, please open lid and keep earbuds inside the case while Bluetooth function is on. - In Haylou APP, tap Adding Device and follow the instructions to link. Notes: - Whenever instructions in APP diverge from the above steps, the former prevails. - Keep batteries of earbuds and case enough to use and do not turn off Bluetooth function. - For any connectivity issues, please repeat the above step 1 and 4. If the issue is not fixed, please set earbuds to factory. - No pairing limitation for iOS system currently. || Functions - Take off/put on earbuds when playing, pause/resume playing music - Double click left earbud Skip track backward (playing music) - Double click right earbud Skip track forward (playing music) - Double click either earbud Answer/end call - Triple click either earbud Summon voice assistant (standby) | Factory Setting - Charge the earbuds and open the lid on case - Tap Touch button on case 4 times and LED will blink red and white for 10s then close the lid. - Remove connectivity records on phone. - Power on earbuds and re-connect. One of the Earbuds Mute It's unusual indeed, please set earbuds to factory, remove connectivity record on phone and re-connect. Other Charging Problems - White LED turns off after 30s, it means your earbuds have been fully charged. - My earbuds don't let me charge: Check battery status of the case. - LED does not turn on when I charge the case. The case has been fully charged so light goes not turn on. | What's in the Box Earbuds, 1 pair (medium size earbuds have been put into earbuds, charging case, USB cable (charging cable, user manual). Basic Parameters(earbuds) Operation range: 100m (open space with no obstacle) Battery capacity: 40mAh (single earbud) Charging time: approx. 20hr Talk time: approx. 2hr Standby time: approx. 140hr Input parameter: 5V 100mA Battery type: Li-ion Bluetooth version: v2.0 Basic Parameter(charging case) Input parameter: 5V 1000mA Output parameter: 5V 500mA Charging time: approx. 2.5hr Standby time: approx. 4 months Battery capacity: 600mAh Battery type: Li-ion | Caveats Warning - Do not disassemble, repair or modify the product for any reason, as this may cause fire or even completely destroy the product. - Do not expose the product to environments where the temperature is too low or too high (below 0°C or above 43°C). - Keep the indicators away from the eyes of children and animals while using the earphones. - Do not use this product during thunderstorms. Thunderstorms may cause the product to malfunction and increase the risk of electric shocks. - Do not wipe and clean the earphones or their case with alcohol or other volatile liquids. - Avoid any contact with liquids. Note - Please read this instruction manual carefully before using the product and please properly storage. - When using for the first time, please fully charge this product. - Please charge the product, in case it has not been used over two weeks. - Please use certified charger. - Do not wear earphones for a long time to protect your hearing. - Do not wear earphones in any situations with potential risks as wearing them may reduce your perception to the outside world. | Daily maintenance Please do not share with earbuds. Do not wear them in any dry, do not leave them in washing machine or other extreme situations. Clean them with dry cloth. | Warranty Card Warranty Period: 24 months after you purchase this item, (or you may require your local shopkeeper more details.) Free Service: Supporting any defects caused by quality issues occur within the warranty period, please contact this warranty card and purchase receipts to your distributor for free exchange service. | | | |----------------|--------------------| | Model Number | Date of Purchasing | | User's Name | User's Name | | User's Phone | User's Phone | | User's Address | User's Address | | Shop's Name | Shop's Name | | Shop's Address | Shop's Address | | Comments | | Free exchange service will not be accessed under following circumstances: 1. Damages caused unauthorized disassembly. 2. Defects or physical damages caused by heating or dropping etc. | - Damages by act of God. - Supporting your item in various damages or defects except the above circumstances, please contact us or your distributor for free repairing. Notes: 1. This warranty card is not a receipt and does not constitute a contract. It is only a document for reference. The actual warranty period and scope of warranty shall be determined by the actual purchase date and the actual purchase receipt. The actual warranty period and scope of warranty shall be determined by the actual purchase date and the actual purchase receipt. 2. This warranty card is not a receipt and does not constitute a contract. It is only a document for reference. The actual warranty period | | |

名称	公差: mm
外箱	±5.0
彩盒	±0.5
标签	±0.5
说明书	±1.0
热缩膜	宽:±3,高:±15
防爆袋	宽:±3,高:±15

资料确认表

料号	L30.001.000093BY	软件		法务	
名称		电子		市场	
材质工艺		结构		包装	
软件料号		声学			
物料承认书编号		品牌			