 



ULTRASONIC BLUETOOTH® DIFFUSER

INSTRUCTION GUIDE

NT Ultrasonic bluetooth diffuser
NT60236DIF

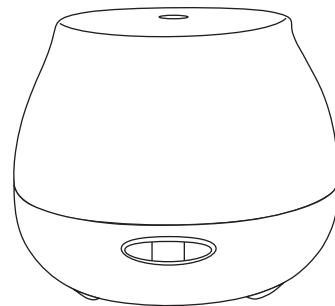

 DIFFUSER STRUCTURE & PARTS

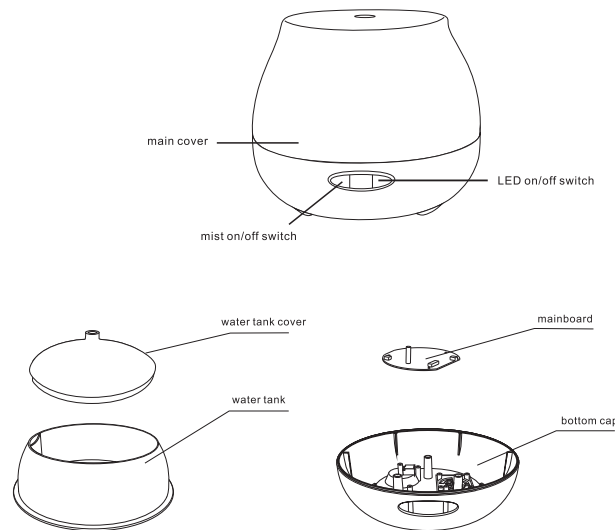

HOW TO USE

1. First, make sure diffuser is unplugged. Place diffuser on hard flat, even surface. Open your diffuser by gently pulling up the frosted glass cover and gently place on flat surface. **DO NOT FORCE DIFFUSER OPEN.** (As in picture 1)
2. Connect the AC adapter to the DC socket on the bottom of the base. The AC adapter should be placed on a stable flat surface. (As in picture 2)
3. Then, slowly fill the bottom half of the diffuser with 380 mL warm (not hot) distilled or tap water. Do not use well water. Do not fill water when the diffuser is in operation. Caution, do not overflow or spill. (As in picture 3)
4. Carefully add your essential oil(s) directly into water tank (about 5-10 drops). (As in picture 4). Re-attach top half of diffuser by gently pushing down.
5. Re-attach the main frosted glass cover.
MUST BE PROPERLY FASTENED IN THE RIGHT POSITION BEFORE USE. (As in picture 5)
6. Connect the plug of the AC adapter to the power supply socket.
7. To turn on press down on the power button. Press 1 time, mist continuously stays on the low setting for 19 hours. Press 2 times, mist continuously stays on medium setting for 13 hours. Press 3 times for mist intermittently works for 38 hours (on/off per 10 seconds). Press 4 times for timer setting, diffuser shuts off after 4 hours of medium setting use.
8. Press the Light button to change the LED mood (bright/dim/intermittent). The Safety Auto shut-off unit automatically shuts off when water runs out. To turn off, press the mist button until it turns OFF.

WARNING

Do not fill water over 380 mL at any time. Leave the power off when there is no water in tank and keep unplugged when not in use. Keep on a flat surface away from electronics and clean often. Do not touch the Ultrasonic vibration plate. Never move diffuser when in use or touch with wet hands. Make sure cord is clear from pathways and do not pull plug. Keep away from children and pets.

BLUETOOTH® INSTRUCTIONS

Plug in the diffuser to activate the Bluetooth® connection. Initiate the Bluetooth® function in your device settings, search and match your Bluetooth® device and choose "Nature's Truth". After connecting to the Bluetooth® speaker successfully, the song you select will play on the speaker.

ATTENTION AND NOTES

- This diffuser operates maximum up to 19 hours continuously.
- It is normal that the mist produced varies in intensity.
- The types of water used, the temperatures and wind direction will affect the mist produced.
- The aroma diffuser cannot operate without water.
- Use only 100% pure essential oils. It's possible to damage the diffuser if the oil used contains synthetic chemicals.

ATTENTION TO LEAKAGE


If the diffuser overturns when in use, please handle as follows:

1. Turn off the power supply and open the main cover.
2. Drain off any water still left in the water tank. Let dry for 24 hours before using again.

MAINTENANCE METHOD

General maintenance is needed once every 5-6 uses or 3-5 days of usage. The maintenance done must be according to the following procedures

1. Turn the power supply off and remove the main cover.
2. When there is water left in the water tank, tilt the diffuser towards the drainage side to drain out the water.
3. Clean all parts with a damp, soft cloth that has been soaked in warm water with some dish soap added. Use cotton swab to clean any stains present on the corners of the water tank.
4. Do not use any alcohol or white vinegar for cleaning. It may damage the diffuser.

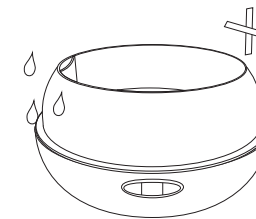

SAFETY PRECAUTION

1. Do not disassemble or repair the diffuser yourself. Contact your supplier if a malfunction occurs.
2. Do not cut or twist wire cables and avoid placing heavy weights on the diffuser or placing it in a hot environment.
3. Do not use the diffuser if the AC adaptor malfunctions or the socket is loose.
4. In case of an abnormal situation such as smoke, peculiar odors, noisy or extreme heat present during operation, disconnect immediately and contact your supplier.
5. For indoor use only. Avoid using in wet places such as bathrooms or near sinks.
6. For hygiene reasons, always drain away the remaining water in the tank. Wipe clean before filling with fresh, clean water. Essential oil used may cause discoloration, wipe away immediately if spilled.
7. Refill water tank with a cup. Do not fill directly under the water tap.
8. Face diffuser away from furniture, fabric or any walls.
9. Do not use the diffuser directly under the sun, near air-conditioner, fan or heater.
10. Always place the diffuser on a flat and stable surface. Do not place on carpet or cushion.
11. Do not use directly in front of other electrical appliances such as a TV or a computer.
12. Do not cover the diffuser when in operation.
13. The diffuser can only be used continuously for a maximum of 19 hours on low and 13 hours on medium. Allow for a minimum of 1 hour rest between each use.
14. Use only clean and fresh water such as tap water or purified water.
15. Do not move or shift the diffuser when in operation.
16. Do not touch the diffuser when your hand is wet.
17. Keep away from children and pets.
18. Only adults with knowledge of the product are suitable to use the diffuser.

TROUBLESHOOTING

When the diffuser does not work properly, please refer to the following:

Possible causes of faults and remedies to be taken before contacting your supplier for services	
Cannot turn on or turn off instantly after pressing the switch	Check the water level in the water tank. · Fill the water tank if no water or water level is too low. Check that the AC adaptor is connected properly. · Disconnect and reconnect the DC plug, then turn on the power supply.
No mist or not enough mist is produced	Check the water level in the water tank. · Fill water if level is too low or pour away some water if the level exceeds 100 mL. Check if the oscillator is stained or too dirty. · Clean the tank and the oscillator plate. Check if there is dust accumulated in the air vent below the base. · If the air vent below the base is covered with dust, the air flow will be weak. Without enough flow, the mist cannot be produced.
Water leakage	Check if the main cover is properly fastened. · Reinstall the main cover. Check the environment temperature. · If the temperature is too high or too low, water droplets may be formed near the outlet of the mist.

SPECIFICATION:

Size: 175x144mm
Weight: 1,019 g
Power Supply: AC 100-240V 50/60HZ (Output):DC 24V
Supply Cable: Length 150cm
Rated Power: 13W
Water Tank Capacity: 380 mL
LED: 6 sets
Body Material: PP
Accessories: 1 x AC/DC Adaptor, 1 x measuring cup, and 1 x Instructions Manual
Ultra Sonic frequency: 2.4 M Hz
Model: F105B

PRODUCT WARRANTY		
This product comes with warranty for a period of 12 months from the date of purchase. If any defect due to faulty material or workmanship occurs within the warranty period, it will be repaired or replaced. Please keep this manual as it will not be replaced if misplaced.		
Warranty Certificate		
Date of purchase:		
Name:	Address:	Tel:
Stamp of the shop	Terms & Conditions:	
DISCLAIMER: We hereby declare that: This product has been inspected and passed quality assurance test. In the event of malfunction and repairing is needed, the customer information given here must be correct and valid to avoid any unwanted delays in processing. All customer information given will not be disclosed to a third party, except in the event of legal requirements or court's orders.	For services or repairs, please bring along this warranty certificate and receipt of purchase with this unit to the shop/supplier were it was purchased. However, please note that this warranty does not cover the following: 1. If the purchase date has been more than 1 year ago. Customers cannot produce the warranty certificate or purchase receipt. No purchase date indicated or shop stamp is not present. 2. If the purchase date was altered deliberately. 3. Due to natural disaster such as war, earthquake, storm or flood. 4. Due to mishandling. 5. Due to normal wear and tear. 6. Due to incorrect use or not according to the instruction manual. 7. Due to incorrect use of oil (not pure essential oil). 8. If alteration or repairs have been carried out by oneself or not by the authorized shop/supplier.	

18.213 INFORMATION TO THE USER

Information on the following matters shall be provided to the user in the instruction manual or on the packaging if an instruction manual is not provided for any type of ISM equipment:

- (a) The interference potential of the device of system.
- (b) Maintenance of the system.
- (c) Simple measure that can be taken by the user to correct interference.
- (d) Manufacturers of RF lighting devices must provide an advisory statement, either on the product packaging or with other user documentation, similar to the following:

This product may cause interference to radio equipment and should not be installed near maritime safety communication equipment or other critical navigation or communication equipment operating between 0.45-30 MHz. Variations of this language are permitted font or text style.

FCC Part 15.19 WARNING STATEMENT

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

FCC Part 15.21 WARNING STATEMENT

NOTE: THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

FCC Part 15.105 WARNING STATEMENT

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.