



Crocodile




01




02



03

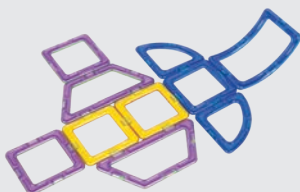

04

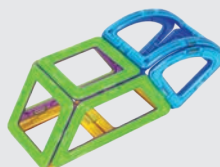

Composition

X7
 X2
 X1
 X2
 X1
 X2
 X1
 X1
 X1



FUNNY
WHEEL
SET

VEHICLE
SET
LINE

Fox




01




02



03

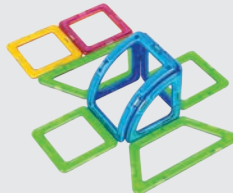

04

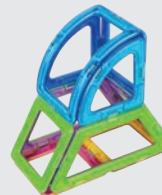


Composition



14

 
15



Frog



01

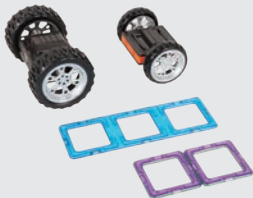


02



03




04

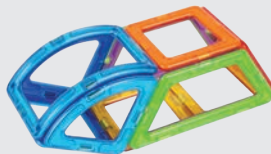

Composition

 □ X7 ▤ X2 □ X1 ▤ X2 ▤ X1 ● X2 ■ X1 ■ X1 ■ X1



FUNNY
WHEEL
SET

VEHICLE
SET
LINE

Lizard




01




02



03

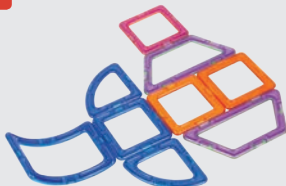

04

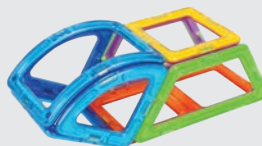


Composition


□ X 5 ▤ X 2 ▢ X 1 ▴ X 2 ⚙ X 2 ⚙ X 1 🔌 X 1

16

 17




Mouse

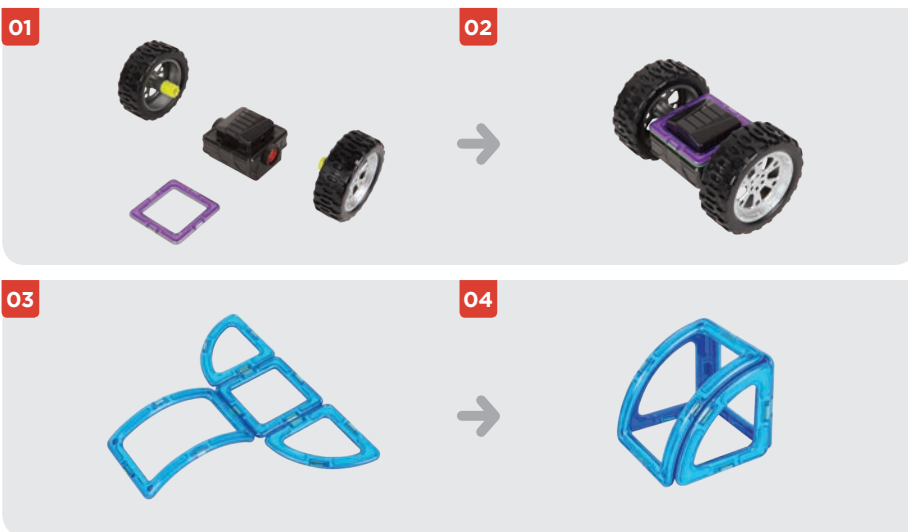

Composition




 

FUNNY
WHEEL
SET

VEHICLE
SET
LINE

Helicopter

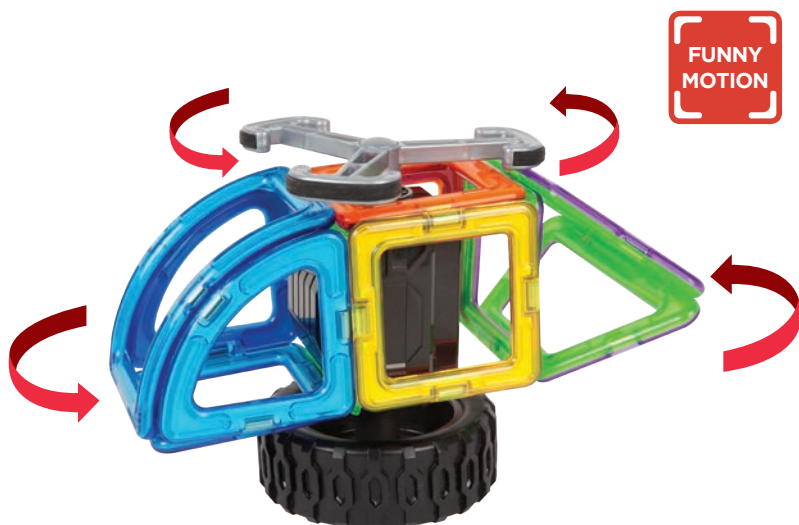

01



02



03



04

 


Composition



18

19




Cobra




01



02

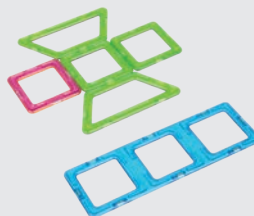

03

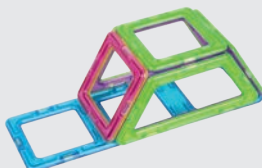

04



Composition


□ X 6 ▤ X 2 □ X 1 ▤ X 2 ▤ X 1 ◉ X 1 ◼ X 1 ◼ X 1



FUNNY
WHEEL
SET

VEHICLE
SET
LINE

Robot

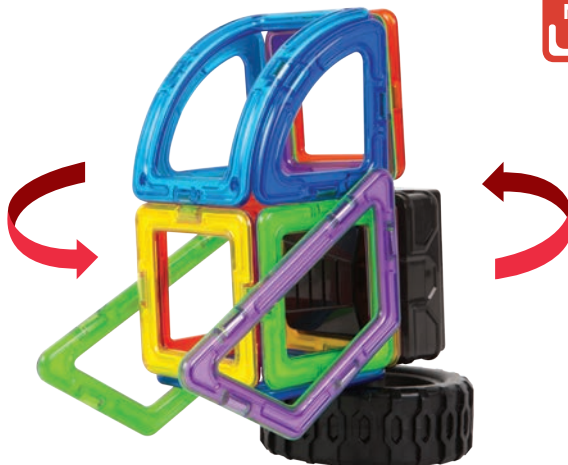


01



02



03

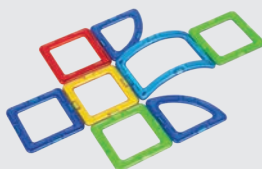

04



Composition

 X 7  X 2  X 1  X 2  X 1  X 1  X 1



Roller




01




02



03

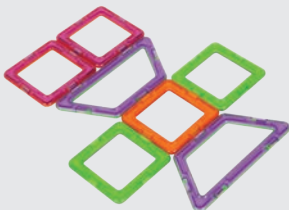


04

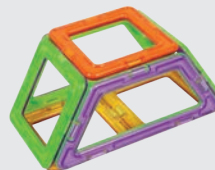

Composition

 Yellow square X7 Blue triangle X2 Green square X1 Orange triangle X2 Purple square X1 Black wheel X1 Black motor X1 Black sensor X1



FUNNY WHEEL SET

 
VEHICLE SET LINE

08 How to use Funny Wheel Set

► Try changing the wheel.

Try changing the wheels on models you created. Change the Big Wheel to the Propeller Wheel, and the Propeller Wheel to the Big Wheel. You can create more fun models.





► Game

Have fun playing target practice with your favorite Magformers. Place the Big Wheel on top to aim at a Magformers piece, and press the reverse button on the R/C Remote Control. The Big Wheel will fly towards the piece. You can play a fun game with your friends to see who hits the piece more.

Reverse Button



01




02

 


03



04

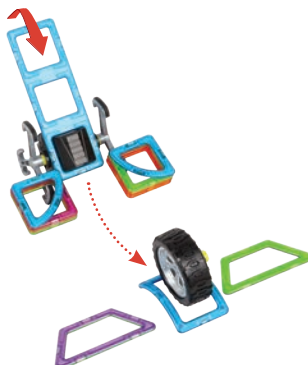



► Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

► "This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device."

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations. CAN ICES-3(B)/NMB-3(B)

How to remove and insert replaceable batteries.

- Remove screws and place batteries in the correct position as displayed inside.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

US Patent No. 7,154,363,B2

©2016 Magformers INC. All rights reserved.

MAGFORMERS® has been a registered trademark of Gymworld Inc., Magformers Inc. and the president of the corporation since 2009. When quoting MAGFORMERS®, the trademark of Gymworld Inc., Magformers Inc. and the president of the corporation must be declared.

MAGFORMERS INC.

2-4F, 210, Dosan-daero, Gangnam-gu, Seoul, Korea
Tel : 82-2-6714-2240 | Fax : 82-2-6714-2298

www.magformersworld.com | E-Mail : info@magformersworld.com

This book is a work protected by copyright, thus, any unauthorized copying or reproduction of content is strictly prohibited. In order to use any or all content, you must receive the consent of Gymworld Inc., Magformers Inc. and the president of the corporation, the copyright holder and owner of its publication rights.

