

YEZZ 4E



ZE

EN User Manual

 
INTRODUCING YOUR MOBILE PHONE

Learn about your mobile phone's layout, keys, display and icons.


v.2017.02.07

Phone layout

From the front view of your phone you will observe the following elements:

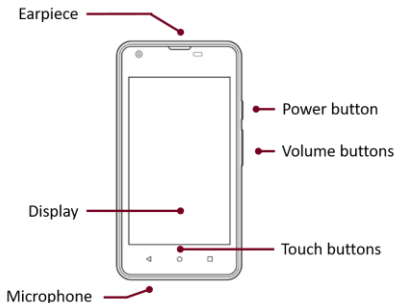

 From the back view of your phone you will observe the following elements:

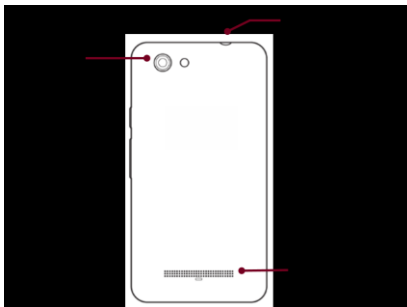

Keys

The following table offers you a quick description about the phone's keys:

Key	Function
Power button	Allow you to turn on/off the device and to lock the screen.

Volume	Allow you to adjust the volume of ringing and notifications. Also allows you to adjust the volume of multimedia content playback.
Back	Allow you to return to the previous menu or screen. Also allow you to close some applications.
Home	It takes you directly to the home screen, leaving any application open.
Menu	Allow you to access to the functions menu of the application or screen you are.

Screen

The screen of your mobile phone is designed as follows:



Icons

Learn about the icons that are displayed on the top of the screen, indicating the status of the phone:

	Signal strength		Wi-Fi connection
	Voice mail		EDGE connected
	USB connected		HSPA connected
	Battery meter		New message
	Vibration profile		New email
	Roaming indicator		Alarm active
	Headset connected		Silent profile

PREPARING YOUR MOBILE PHONE

Get started setting up your mobile phone for its first use.

Install the SIM card and battery

When you subscribe to a cellular service, you will receive a Subscriber Identity Module (SIM) card, with subscription details, such as your personal identification number (PIN) and optional services.

 
To install the SIM card and battery,

1. Remove the battery cover.




2. Insert the SIM card.

Your phone has 2 SIM card slots to allow you use 2 SIM cards and switch between them.

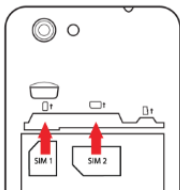

- Place the SIM card in the phone with the gold-colored contacts facing down.
- Without inserting a SIM card, you can use your phone's non-network services and some menus.

 3. Insert the battery.

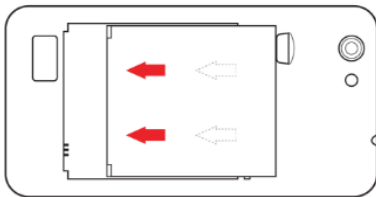

4. Replace the battery cover.

Insert a memory card (optional)

 
To store additional multimedia files, you must insert a memory card.

- Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.

1. Remove the battery cover.



2. Insert a memory holder with the label side facing up.

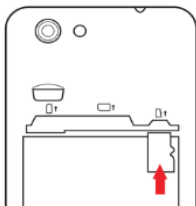

USING BASIC FUNCTIONS

Learn how to perform basic operations of your mobile phone.

Turn your phone on and off

To turn your phone on,

1. Long press the power button.
2. Type in your PIN number and press OK (if it is needed).

To shut down your phone, go to step 1 above.

Access menus and applications

To get access to the Menu and Applications,

1. At the home screen, touch the button  on the screen to pop up the list of Installed Applications in your phone.
2. Slide your finger to the right or left to access other pages of apps.
3. Touch any icon to enter to the application.
4. To exit the application, press Back or Home at the bottom of the screen.

Use basic call functions

Learn to make or answer calls in this section.

Make a call:

1. At the home screen or applications menu, touch the Phone icon



2. Dial the area code and phone number.

3. Touch  to start the call.

4. To end a call, touch .

To answer a call:

1. When you receive a call, slide the phone icon to the right to answer it or slide it to the left to reject it .

2. To end the call, touch .

Send and view messages

In this section, learn how to send and receive:

- Text Messages (SMS).
- Multimedia Message (MMS).

Steps to send Text and Multimedia Messages:

1. Touch  Messages at the application list, then touch  on the corner.

2. Type in the phone number or contact name on the field or touch



to access to Contacts.

3. Type in your message.

To send as text message go to step 5.

To attach a multimedia object (audio, image, etc.) continue to step 4.

4. Touch  on the top right corner, select the attach type then choose the item.

5. Touch  to send the message.

Add contacts

Learn the basics of using the phonebook feature.

Add a new contact:

1. In the application list touch Contacts , then touch  on the bottom to add a new contact.

2. Fill the contact information (Name, Last name and phone number). You can add more fields such as, email, address.

3. Touch  on the top of the screen to save.

Search for a contact

1. In the application list touch  Contacts.
2. Slide your finger from bottom to top to scroll the list or touch the search button  and type in the first letters of the name or last name.
3. To see the contact details touch the name or the picture of the contact.

If you want to call a contact touch the phone number.

Listen to music

Learn how to listen to music via the music player or FM radio.

Listen to the FM radio:

1. Plug in the earphones in your phone.
2. In the application list touch  FM Radio.
3. Use the tool bar at the bottom to change of station.

Listen to music files:

First, copy the music files into your phone internal memory or a MicroSD card.

1. In the application list, touch  Music.
2. Select an order at the top of the screen and touch the song that you want to listen to.

3. You can Pause, Loop, or change of song using the tool bar at the bottom.

Browse the web

Learn how to access to your favorites Web Sites.

1. In the application list, touch  Browser.
2. Touch the address bar and type in the address of the web site you want to go.

USING THE CAMERA

Learn the basics to capture and view photos.

Capture pictures

1. In the applications list, touch  Camera.
2. Adjusts the lens at the photo target and make the desired adjustments by touching the settings button .
3. Touch the shot button  on the screen to capture the picture. It will be saved automatically.

See the captured pictures

In the applications list, touch  Gallery and then select the Camera folder  3 to access and visualize all the pictures captured by your phone.

CONNECTING TO INTERNET

Learn the basics to configure your phone and connect to Internet.

Add a new connection

1. In the applications list, touch  Settings to access to the device configuration.
2. Touch the option "More...", then touch Mobile networks and touch Access Point Names. Now select the SIM Card that you want to configure.
3. Touch the Menu key and select New APN then, type in the parameters according with your Carrier.

The basic parameters are:

- Name
- APN
- Username
- Password

Some carriers use Proxy Servers, refer to your carrier configuration for more information.

4. When you finish typing in the parameters needed, touch Menu then Save.

If you have multiples APN Configurations for the same SIM card, choose which one you want to use touching the radio button  at

the right side of the name.

To add another connection, repeat from step 3.

Switch between carriers (SIM cards)

If you use multiple SIM cards and want to switch to another one, follow these steps:

1. In the applications list, touch  Settings to access to the device configuration.
2. Touch  SIM cards .
3. Choose the option Data connection and select the SIM Card that you want to use.

USING THE WI-FI

Learn to use the phone's wireless capabilities to connect to any wireless local area network compatible.

Connect to a wireless network

1. In the applications list, touch  Settings to access to the device configuration.
2. Touch the Wi-Fi option  Wi-Fi .
3. To turn the On the Wi-Fi touching the button  on the right top corner.
4. Choose a wireless network and enter the security password if it is needed.

Disconnect from a wireless network

1. In the applications list, touch  Settings to access to the device configuration.
2. Touch the Wi-Fi option  Wi-Fi .
3. To turn the Wi-Fi off touch the button  on the right top corner.

View the technical details of a wireless network

1. In the applications list, touch  Settings to access to the device configuration.
2. Touch the Wi-Fi option  Wi-Fi .
3. Touch the active wireless network to see details such as Link Speed, Signal strength and more.

SECURITY INFORMATION

Please remember to obey relevant rules and regulations whenever use your phone. This will prevent bad effect from you and the environment.

v.2017.02.07

General security

	When driving, riding your bike or walking, do not use headphones or earphones. Your attention could be diverted, which may cause an accident and be against the law in certain geographical areas. For safety precautions do not use your phone while driving, always stay aware of your surroundings. Follow all safety instructions and regulations relating to the use of your device when you are driving a vehicle.
	Don't use at petrol stations.
	Keep your phone at least 15 mm away from your ear or body while making calls.

	Your phone may produce a bright or flashing light.
	Small parts may cause a choking.
	Don't dispose of your phone in fire.
	To avoid any hearing damage, do not listen to high volume levels for an extended. Excessive sound pressure from earphones and headphones can cause hearing loss.
	Avoid contact with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.
	Avoid extreme temperatures.
	Switch off when asked to in hospitals and medical facilities.

	Avoid contact with liquids. Keep your phone dry.
	Switch off when told to in aircrafts and airports.
	Don't take your phone apart.
	Switch off when near explosive materials or liquids.
	Only use approved accessories.
	Don't rely on your phone for emergency communications.

Look at the adapter regularly, specifically at the plug and the layer to detect any damages. If the adapter is damaged, you can't use it until it's fixed.

Plug in the adapter to a power outlet which is easily accessible. Always unplug the adapter after using it.

Use only the adapter provided with the device.



Warning electrical hazard

To avoid serious injury, do not touch the plug of the charger!

Disconnect the charger when you do not use it.

To disconnect a charger or an accessory, pull the plug, not the power cable.

The power module is the element that allows you to disconnect the product.

The power plug must stay easily accessible.

Do not expose your device to direct sunlight, like on your car's dashboard, for example.

In case of overheating do not use the device.

Be careful when using the device while walking.

Do not subject the device to severe impact or drop it from high position, it could cause damages or malfunctions.

Do not disassemble, modify or fix the device by yourself.

To clean the device use a clean and soft rag.
Do not use any chemical product or detergent.

Please take time to read this important section.

FCC Caution

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, tests for each phone are performed in positions and locations as required by the FCC.

For body worn operation, this 4E has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 10mm from the body

Non-compliance with the above restrictions may result in violation of RF exposure guidelines