

Label Location:**Host label:**

Stick it in the limit slot at the bottom of the host.

Warning label:

It is attached to the bottom of the host, close to the side of the universal wheel,
opposite to the side brush