

PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE

- Remove the device from the box.
- Remove any packaging from the product.
- Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

- Power Bank Speaker
- USB rechargeable cable
- Instruction Manual

- Charge any mobile device on-the-go with built-in charger
- Wirelessly stream music from up to 30-33 feet away
- Connects via Bluetooth to most smartphones, tablets, computers and other Bluetooth enabled devices
- Perfect for travel use, outdoors or anywhere you go
- Built-in microphone for hands-free-calls
- USB rechargeable battery
- Battery Level Indicators - Short press the Power ON/OFF Button to see

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

- Only use attachments/accessories specified by the manufacturer.
- Only use with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Buttons	Function	Operation
1	Speaker	Sound output
2	Charging Port (Micro USB)	DC Charging Port – To charge the speaker
3	USB Charging Port	Use this USB Charging Port to charge your smart phones and other mobile devices
4	Power ON/OFF Button	Turn On/Off the speaker
5		Short press will return to the previous track, or long press will decrease the volume level
6		Short press will skip to the next track, or long press will increase the volume level
7	Play / Pause button Phone button	Short press will pause or restart the music. Call Answer / Call End / Reject Call button.
8	LED Light Indicator	Indicates the Charging or Bluetooth Status
9	Built-In Mic	For Hands-Free Conversation

- Before Turning ON the device, please ensure that the unit is fully charged.
- Press the On/Off button to turn ON/OFF the speaker.

- Turn On the device. You would hear a beep tone indicating that you are now in Bluetooth Pairing Mode and Blue LED Light keeps flashing.
- Activate the Bluetooth function on your Bluetooth Device (Mobile Phone or Tablet). Please refer to manufacturer's instructions for instructions on enabling Bluetooth on your device.
- Once you have activated Bluetooth on your device, select the device "**D&B Speaker**" from the list of available Bluetooth devices.

- Please ensure that you are paired with the Bluetooth Speaker to use the below functions.

Function	Operation	Button
Answer Incoming Call	Incoming Call	Short press the 'Phone button' to answer an incoming call
Reject incoming call	Incoming Call	Short touch the 'Phone button' twice.
End Call	Incoming Call	After your phone conversation, short press the 'Phone button'
Volume Increase	During a call	Long press on the  button will increase the volume
Volume Decrease	During a call	Long press on the  button will decrease the volume
Redial last number	Standby mode and connected to a device	Short touch the 'Phone button' twice.

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Volume Increase	Playing music	Long press on the  button will increase the volume (Short press to skip to next track)
Volume Decrease	Playing music	Long press on the  button will decrease the volume (Short press to skip to previous track)
Pause	Playing music	Short press on the 'Play / Pause' button will pause the music.
Play	Pausing	Short press on the 'Play / Pause' button will resume the music

Use the USB Charging port located at the back of the speaker to charge your external devices like smart phones etc. Using this saves you from having an extra charger to keep your devices powered.

The device has built-in rechargeable battery. When the battery is drained out, device would turn OFF automatically. You would have to recharge the battery.

Plug the included USB cable into the charging port.

Plug the other end into a USB port on your computer or other devices made for USB charging. The Blue LED Light will flash indicating that the device is being charged.

It takes 5 to 6 hours to fully charge the device. Once the device is fully charged, all 4 LED Lights would stay on.

Bluetooth® Version: 4.2
Wireless Distance: 30 to 33 feet
Talking time: up to 8 hours
Speaker: 3 Watts
Unit size: 4.4x4.4x10.3 CM
Unit weight: 145g
Power Input: DC 5V
Built-in Rechargeable Battery: 2600mAh
Built-in 3.7V rechargeable Li-ion battery
Charging Time: 5 to 6 Hours
USB Charging Port – 5V / 1A (Max) Output
(Note: Battery life, Working time & charging time may vary based on usage & types of devices used.)

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

90mm

69.5mm