
Raven Installation Instructions

DRAFT!!!


Date: December 15, 2017

Originator: Shing Ho

Installing Raven in your car

NOTE: If you have a leather/suede dashboard, we recommend you mount Raven on your windshield to prevent damage to your dashboard when removing the mount.

1. There are two ways to mount Raven in your car
 - a. On your dashboard
 - b. On your windshield (in this case Raven would be upside down)
2. Before mounting, do a "dry test fit" first, so that you find the ideal location for your Raven ensuring that it is not obstructing your view. Peel off the plastic and stick the mount on.

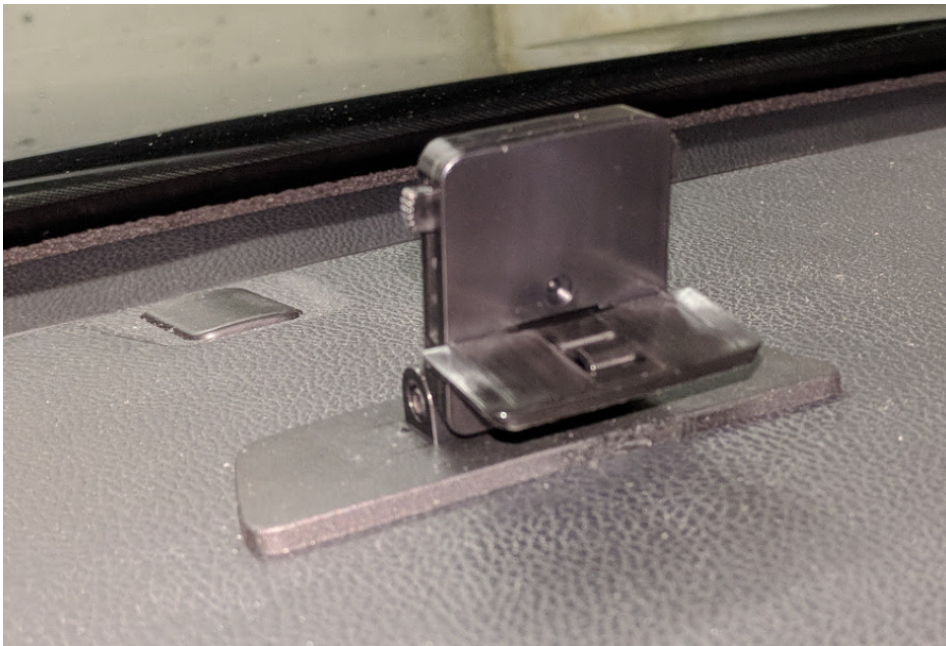

3. Once you find a good location for Raven, run the supplied OBD cable securing it with clips.
4. Locate the OBD2 port and plug the Raven cable into the OBD2 port



5. Plug the other end of the cable into Raven.



Install Raven onto the mount



Regulatory and Safety

Safety Instructions

- Do not immerse the unit in water. Do not operate unit near water.
- Do not block ventilation openings.
- Clean only with a dry cloth.
- unit operating temperature -20°C to +45°C (-4°F to 113°F). Ambient temperature outside of operating temperature range may cause unit to power down until operating temperature range has been reached.
- Only the supplied power cable is to be used with unit.
- Under no circumstances should the unit be opened or modified in any manner.

FCC

This unit complies with FCC part 15 subpart C. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

ICES

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.