


INSTRUCTION MANUAL 使用說明 / 使用说明

momax Pinpop² Lite Find my Locator Find my 全球定位器

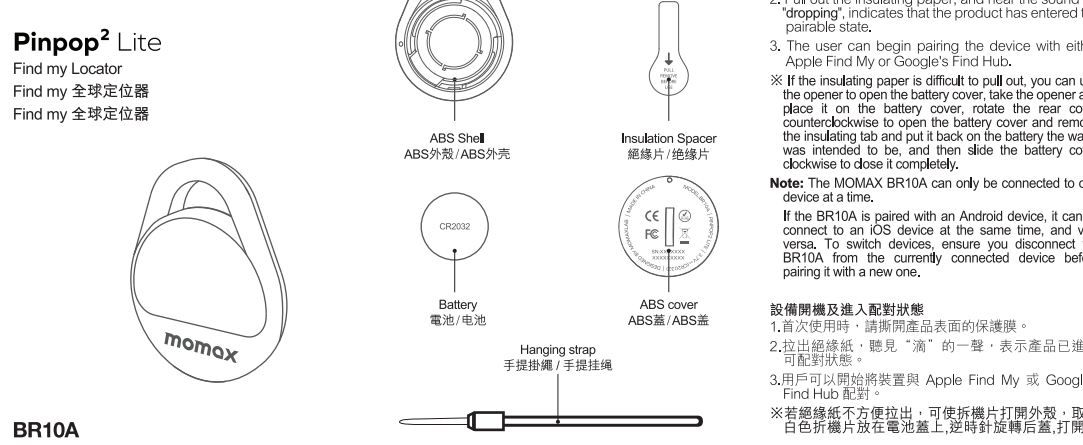

BR10A



INSTRUCTION FOR USE 操作/操作

The device is powered on and enters the pairing state

1. When using it for the first time, please tear off the protective film on the surface of the product.

2. Put out the insulating paper, and hear the sound of "dropping", indicates that the product has entered the pairable state.

3. The user can begin pairing the device with either Apple Find My or Google's Find My.

※If the insulating paper is difficult to pull out, you can use the opener to open the battery cover, take the opener and place it on the battery cover, rotate the rear cover counterclockwise to open the battery cover and remove the insulating tab and put it back on the battery the way it was intended to be, and then slide the battery cover clockwise to close it completely.

Note: The MOMAX BR10A can only be connected to one device at a time.

If the BR10A is paired with an Android device, it cannot be connected to an iOS device at the same time, and vice versa. To switch devices, ensure you disconnect the BR10A from the currently connected device before pairing it with a new one.

設備開啟及進入配對狀態

1. 首次使用時，請撕開產品表面的保護膜。

2. 拉出絕緣紙，聽見「滴」的一聲，表示產品已進入可配對狀態。

3. 用戶可以開始將裝置與 Apple Find My 或 Google's Find My 配對。

※若絕緣紙不方便拉出，可使用拆機片打開外蓋，取出白色折機片放在電池蓋上，逆時針旋轉後蓋，打開電池蓋。

更換電池

1. 取出包裝附贈的三角形「拆機片」。

2. 找到產品背面指示凹槽。

3. 拿著拆機片對準產品背面開槽，逆時針旋轉打開後蓋。

4. 取出電池，更換上準備好的新電池「CR2032 3V」。

INSTRUCTION FOR USE – [Apple Find My] 操作說明: [Apple 尋找] / 操作說明: [Apple 查找]

Find and bind your product

Please make sure that you have an iPhone, iPad, or iPod touch with iOS 14.5 or iPadOS 14.5 or later and two-factor authentication enabled.

1. Turn on [Bluetooth] on your Apple device, and go to [Settings] > [Privacy] > [Location Services]. Turn on [Location Services] and swipe down and tap on [Find My].

2. Go to the main screen of the Apple device, click the [Find My] app, and then select the [Items] tab.

3. Click [Add], and then click [Add Other Item].

4. Find the item name "MOMAX BR10A", click [Connect], fill in the "Name" item "custom product name", and click [Continue].

5. Choose an email address, click [Agree], and then tap [Next].

6. Please check that the email address and mobile phone number are correct, then tap [Next].

尋找指定產品

1. 在蘋果設備上打開 [尋找]，並且前往 [設置] - [隱私] - 開啟 [定位服務] 並向下拉開定位服務。

2. 在蘋果設備主畫面開啟 [尋找]，並點選 [新增其他物品]。

3. 點選 [新增]，點選 [新增其他物品]。

4. 找到物品名為「MOMAX BR10A」，點選 [連接]。

5. 填寫物品名稱，自定義物品名稱，點選 [繼續]。

6. 選擇電子郵件地址，點選 [同意]，點選 [完成]。

SETUP THE LOST MODE

1. When the base station is a certain distance away from the console, you need to turn on the lost mode to mark the item as lost. Tap Item at the bottom of the screen, then tap the name of the missing item. Under Lost Mode, tap Enable.

2. Follow the on-screen instructions and enter a phone number where you can be contacted, or if you want to receive notifications when the tracker comes within range of your device or can be detected by the [Find My] network, please turn on [Notify when found] under [Notifications].

尋找指定產品

1. 在蘋果設備上打開 [尋找]，並且前往 [設置] - [隱私] - 開啟 [定位服務] 並向下拉開定位服務。

2. 在蘋果設備主畫面開啟 [尋找]，並點選 [新增其他物品]。

3. 點選 [新增]，點選 [新增其他物品]。

4. 找到物品名為「MOMAX BR10A」，點選 [連接]。

5. 填寫物品名稱，自定義物品名稱，點選 [繼續]。

6. 選擇電子郵件地址，點選 [同意]，點選 [完成]。

INSTRUCTION FOR USE – [Google's Find My] 操作說明: [Google 尋找] / 操作說明: [Google 查找]

Find and bind your product

Please make sure that you have an iPhone, iPad, or iPod touch with iOS 14.5 or iPadOS 14.5 or later and two-factor authentication enabled.

1. Turn on [Bluetooth] on your Apple device, and go to [Settings] > [Privacy] > [Location Services]. Turn on [Location Services] and swipe down and tap on [Find My].

2. Go to the main screen of the Apple device, click the [Find My] app, and then select the [Items] tab.

3. Click [Add], and then click [Add Other Item].

4. Find the item name "MOMAX BR10A", click [Connect], fill in the "Name" item "custom product name", and click [Continue].

5. Choose an email address, click [Agree], and then tap [Next].

6. Please check that the email address and mobile phone number are correct, then tap [Next].

尋找指定產品

1. 在蘋果設備上打開 [尋找]，並且前往 [設置] - [隱私] - 開啟 [定位服務] 並向下拉開定位服務。

2. 在蘋果設備主畫面開啟 [尋找]，並點選 [新增其他物品]。

3. 點選 [新增]，點選 [新增其他物品]。

4. 找到物品名為「MOMAX BR10A」，點選 [連接]。

5. 填寫物品名稱，自定義物品名稱，點選 [繼續]。

6. 選擇電子郵件地址，點選 [同意]，點選 [完成]。

INSTRUCTION FOR USE – [Google's Find My] 操作說明: [Google 尋找] / 操作說明: [Google 查找]

Find and bind your product

Please make sure that you have an iPhone, iPad, or iPod touch with iOS 14.5 or iPadOS 14.5 or later and two-factor authentication enabled.

1. Turn on [Bluetooth] on your Apple device, and go to [Settings] > [Privacy] > [Location Services]. Turn on [Location Services] and swipe down and tap on [Find My].

2. Go to the main screen of the Apple device, click the [Find My] app, and then select the [Items] tab.

3. Click [Add], and then click [Add Other Item].

4. Find the item name "MOMAX BR10A", click [Connect], fill in the "Name" item "custom product name", and click [Continue].

5. Choose an email address, click [Agree], and then tap [Next].

6. Please check that the email address and mobile phone number are correct, then tap [Next].

尋找指定產品

1. 在蘋果設備上打開 [尋找]，並且前往 [設置] - [隱私] - 開啟 [定位服務] 並向下拉開定位服務。

2. 在蘋果設備主畫面開啟 [尋找]，並點選 [新增其他物品]。

3. 點選 [新增]，點選 [新增其他物品]。

4. 找到物品名為「MOMAX BR10A」，點選 [連接]。

5. 填寫物品名稱，自定義物品名稱，點選 [繼續]。

6. 選擇電子郵件地址，點選 [同意]，點選 [完成]。

INSTRUCTION FOR USE – [Google's Find My] 操作說明: [Google 尋找] / 操作說明: [Google 查找]

Find and bind your product

Please make sure that you have an iPhone, iPad, or iPod touch with iOS 14.5 or iPadOS 14.5 or later and two-factor authentication enabled.

1. Turn on [Bluetooth] on your Apple device, and go to [Settings] > [Privacy] > [Location Services]. Turn on [Location Services] and swipe down and tap on [Find My].

2. Go to the main screen of the Apple device, click the [Find My] app, and then select the [Items] tab.

3. Click [Add], and then click [Add Other Item].

4. Find the item name "MOMAX BR10A", click [Connect], fill in the "Name" item "custom product name", and click [Continue].

5. Choose an email address, click [Agree], and then tap [Next].

6. Please check that the email address and mobile phone number are correct, then tap [Next].

尋找指定產品

1. 在蘋果設備上打開 [尋找]，並且前往 [設置] - [隱私] - 開啟 [定位服務] 並向下拉開定位服務。

2. 在蘋果設備主畫面開啟 [尋找]，並點選 [新增其他物品]。

3. 點選 [新增]，點選 [新增其他物品]。

4. 找到物品名為「MOMAX BR10A」，點選 [連接]。

5. 填寫物品名稱，自定義物品名稱，點選 [繼續]。

6. 選擇電子郵件地址，點選 [同意]，點選 [完成]。

INSTRUCTION FOR USE – [Google's Find My] 操作說明: [Google 尋找] / 操作說明: [Google 查找]

Find and bind your product

Please make sure that you have an iPhone, iPad, or iPod touch with iOS 14.5 or iPadOS 14.5 or later and two-factor authentication enabled.

1. Turn on [Bluetooth] on your Apple device, and go to [Settings] > [Privacy] > [Location Services]. Turn on [Location Services] and swipe down and tap on [Find My].

2. Go to the main screen of the Apple device, click the [Find My] app, and then select the [Items] tab.

3. Click [Add], and then click [Add Other Item].

4. Find the item name "MOMAX BR10A", click [Connect], fill in the "Name" item "custom product name", and click [Continue].

5. Choose an email address, click [Agree], and then tap [Next].

6. Please check that the email address and mobile phone number are correct, then tap [Next].

尋找指定產品

1. 在蘋果設備上打開 [尋找]，並且前往 [設置] - [隱私] - 開啟 [定位服務] 並向下拉開定位服務。

2. 在蘋果設備主畫面開啟 [尋找]，並點選 [新增其他物品]。

3. 點選 [新增]，點選 [新增其他物品]。

4. 找到物品名為「MOMAX BR10A」，點選 [連接]。

5. 填寫物品名稱，自定義物品名稱，點選 [繼續]。

6. 選擇電子郵件地址，點選 [同意]，點選 [完成]。

5. 按照之前的指示確保 BR10A 已開啟並處於配對模式。在您的手機上啟用 [掃描附近裝置]。當 BR10A 顯示在「附近的可用裝置」列表中時，請點擊它。

6. 將 BR10A 靠近您的設備並等待配對。接受連接請求後，按照應用程式中的螢幕提示進行設置和使用定位。

注意：您的 BR10A 現在已成功連接到您的 Android 裝置。

Android 裝置 - 連接 MOMAX BR10A 手動設置

按照以下步驟將 BR10A 連接到 Android 裝置：

1. 請在您的 Android 裝置上啟用藍牙。

2. 從 Google Play 商店下載「Google 的「尋找中心」」應用程式並登錄。

3. 打開手機的「設置」，然後選擇「Google」。

4. 在您的手機上啟用「掃描附近裝置」。當 BR10A 顯示在「附近的可用裝置」列表中時，請點擊它。

5. 按照之前的指示確保 BR10A 已開啟並處於配對模式。在您的手機上啟用「掃描附近裝置」。當 BR10A 顯示在「附近的可用裝置」列表中時，請點擊它。

6. 將 BR10A 靠近您的設備並等待配對。接受連接請求後，按照應用程式中的螢幕提示進行設置和使用定位。

7. 恭喜！您的 BR10A 現在已成功連接到您的 Android 裝置。

注意：如果 BR10A 未出現在設備列表中，請按照提供的指示重置 BR10A。

Android Devices – Using the "Google's Find My Hub" App & locating your BR10A

1. Locate Tracking: Check the map to see the location of your BR10A, along with the last seen time and place. Tap the refresh icon to update the information.

2. Play Sound: Use the ping feature to play a sound on the locator, making it easy to find when it's within the wireless connection range. The notification sound will play for up to 1 minute unless stopped.

3. Mark as Lost: Mark the locator as "Lost" to receive notifications if the Find Hub Network locates it. You can also add your contact information in case someone finds the locator.

4. Share Device: Share the locator with other accounts so they can also track its location.

5. Get Directions: Open your preferred navigation app to get directions to the locator's last known location.

6. Settings: Tap the "Settings" icon to access and modify options such as the locator's name, shared devices, and removing the locator from others.

Android 裝置 - 使用「Google 的「尋找中心」」App 定位您的 BR10A

1. 定位追蹤：檢查地圖以查看您的 BR10A 位置，以及最後一次出現的時間和地點。點擊刷新圖標以更新信息。

2. 播放聲音：使用鈴鈴功能播放定位器上的聲音，便於在無線連接範圍內輕鬆找到它。通知聲音將播放最多 1 分鐘，除非手動停止。

3. 標記為遺失：將定位器標記為「遺失」，以便在「尋找中心」網絡上定位它時收到通知。您还可以添加您的聯絡信息，以便其他人找到該定位器，可以聯繫。

4. 共享設備：將定位器分享給其他帳戶，以便他們也可以追蹤您的 BR10A。

5. 取得路線：打開您喜愛的導航應用程式，以獲取定位器最後已知位置的方向。

6. 設置：點擊「設置」圖標以訪問和修改選項，例如定位器的名稱、共享設備和移除設備。

How to disable a MOMAX BR10A Pinpop² Lite

The Momax BR10A can be turned off to prevent it from sharing its location. Once disabled, it will no longer report to Google's Find Hub Network, and the owner will no longer receive location updates.

1. Open the Find My app on your Android device. If you get a notification that a Momax BR10A has been detected nearby and you aren't familiar with it, you can make the device invisible to the Find My app by tapping the "Make Invisible" button. Once you find the item, the steps below to disable it. The owner will cease to receive location updates, and it will no longer trigger alerts for unknown trackers.

HOW TO DISABLE A MOMAX BR10A Find My Locator

1. Open the battery compartment of the MOMAX BR10A back.

2. Remove the battery.

3. The MOMAX BR10A is now completely powered off and cannot share its location.

HOW TO RE-ENABLE MOMAX BR10A Find My Locator

1. Reinsert the battery to power the MOMAX BR10A back on.

2. After turning it on, you will hear a confirmation sound.

3. The MOMAX BR10A will begin sharing its location with the connected app again.

如何禁用 MOMAX BR10A 尋找我的定位器

1. 打開 MOMAX BR10A 的電池蓋。

2. 取出電池。

3. MOMAX BR10A 現在完全關閉，無法共享其位置。

如何重新啟用 MOMAX BR10A 尋找我的定位器

1. 重新插入電池以重新啟動 MOMAX BR10A。

2. 打開 MOMAX BR10A 後，您將聽到確認聲音。

3. MOMAX BR10A 將再次開始與連接的應用程式共享其位置。

如何禁用 MOMAX BR10A Pinpop² Lite

MOMAX BR10A 可以被关闭以防止其共享位置。禁用後，它將不再向 Google 的尋找中心網絡報告位置，擁有者將不再收到位置更新。

1. 重新插入電池以重新啟動 MOMAX BR10A。

2. 打開 MOMAX BR10A 後，您將聽到確認聲音。

3. MOMAX BR10A 將再次開始與連接的應用程式共享其位置。

如何重新啟用 MOMAX BR10A 尋找我的定位器

1. 重新插入電池以重新啟動 MOMAX BR10A。

2. 打開 MOMAX BR10A 後，您將聽到確認聲音。

3. MOMAX BR10A 將再次開始與連接的應用程式共享其位置。

Legal Information

Works with Apple Find My

Google and Android are trademarks of Google LLC. Google's Find My Device helps you find your belongings quickly and safely – even if your devices are offline. Plus, seamlessly and securely share your location with friends and family for peace of mind.

Works with Android Find Hub

Google and Android are trademarks of Google LLC. Google's Find My Device helps you find your belongings quickly and safely – even if your devices are offline. Plus, seamlessly and securely share your location with friends and family for peace of mind.

CONTAINS:

1. Pinpop² Lite Find my 全球定位器

2. Adhesive sticker x 10pcs

3. Hanging strap

4. Opener

5. Instruction manual and warranty card

包裝內容：

1. Pinpop² Lite Find my 全球定位器

2. 產品標貼紙 x 10pcs

3. 手提掛繩

4. 拆機片

5. 使用說明書及保證卡

SPECIFICATION 產品規格 / 产品规格

MODEL: BR10A

Battery : CR2032

Waterproof : IPX5

Material : ABS

Size : 40.5x32x9mm

Weight : 8g±2g

Compatibility : Apple Find My Compatible with Apple Find My App Android Find My Device Compatible with Google Find Hub

型號: BR10A

電池: CR2032

防水等級: IPX5

材質: ABS

尺寸: 40.5x32x9mm

重量: 8g±2g

兼容性: 兼容蘋果尋找網絡 兼容 Google 尋找中心

WARNING

1. Do not dismantle or modify the product.

2. Do not store the product in wet conditions.

3. Do not keep or use the product near heat sources; it may cause fire or burn.

4. Do not let water or any other liquid flows into the inside part of the product, which may cause damage to the product.

5. Avoid direct sunlight. Keep away from heat source; it may cause fire or burn.

6. Avoid high processor load in long running loops or while charging.

7. Ensure good ventilation while using.

8. In case of overheating, stop using the product.

DISPOSAL OF ELECTRONIC PRODUCTS

1. Do not place the product as household waste.

2. Please dispose of discarded electronic products properly according to local regulations.

3. MOMAX encourages you to participate in electronics recycling programs.

WARRANTY CONDITIONS

1. For any defect, in the judgment of our technician, caused under normal use, we are responsible for repairing free of charges 12 months commencing from the date of purchase at the discretion of our company.

2. A valid warranty card and original purchase invoice must be presented upon request of warranty service.

3. This warranty card shall not apply to the product if:

(a) It has been explicitly modified or repaired in any way by persons other than technicians of this company.

(b) It has been damaged through misuse, malicious acts, negligence, inflow of any liquid, or.

(c) Lesser damages are caused by force majeure or natural disasters.

4. No alteration to this warranty card will be allowed;

警告

1. 請勿自行拆開或改裝本產品。

2. 請勿將產品存放在潮濕環境中。

3. 請勿將產品靠近熱源或於潮濕環境中，導致本產品損壞。

4. 請勿讓水或其他液體流入本產品內部，導致本產品損壞。

5. 避免陽光直接照射。

6. 請勿通風良好的地方使用。

7. 請於通風良好的地方使用。

8. 如出現過熱，請停止使用。

如何處理廢棄電子產品

1. 請勿將電子產品當成家庭廢棄物丟棄。

2. 請依當地的法規正確處理廢棄的電子產品。

3. MOMAX 鼓勵您積極參與電子產品回收計劃。

保養條款

1. 由購買日期起 12 個月內，如產品有損壞或故障，經本公司技術人員證實為正常使用之情況下發生，本公司將提供免費維修服務。

2. 維修時必須出示本保證卡及購買商標之發票正本，如無此類文件，本公司將不提供維修服務。

3. 維修時必須出示本保證卡及購買商標之發票正本，如無此類文件，本公司將不提供維修服務。

4. 本公司技術人員證實為正常使用之情況下發生，本公司將提供免費維修服務。

5. 維修時必須出示本保證卡及購買商標之發票正本，如無此類文件，本公司將不提供維修服務。

WARNING

1. Do not dismantle or modify the product.

2. Do not store the product in wet conditions.

3. Do not keep or use the product near heat sources; it may cause fire or burn.

4. Do not let water or any other liquid flows into the inside part of the product, which may cause damage to the product.

5. Avoid direct sunlight. Keep away from heat source; it may cause fire or burn.

6. Avoid high processor load in long running loops or while charging.

7. Ensure good ventilation while using.

8. In case of overheating, stop using the product.

DISPOSAL OF ELECTRONIC PRODUCTS

1. Do not place the product as household waste.

2. Please dispose of discarded electronic products properly according to local regulations.

3. MOMAX encourages you to participate in electronics recycling programs.

WARRANTY CONDITIONS

1. For any defect, in the judgment of our technician, caused under normal use, we are responsible for repairing free of charges 12 months commencing from the date of purchase at the discretion of our company.

2. A valid warranty card and original purchase invoice must be presented upon request of warranty service.

3. This warranty card shall not apply to the product if:

(a) It has been explicitly modified or repaired in any way by persons other than technicians of this company.

(b) It has been damaged through misuse, malicious acts, negligence, inflow of any liquid, or.

(c) Lesser damages are caused by force majeure or natural disasters.

4. No alteration to this warranty card will be allowed;

警告

1. 請勿自行拆開或改裝本產品。

2. 請勿將產品存放在潮濕環境中。

3. 請勿將產品靠近熱源或於潮濕環境中，導致本產品損壞。

4. 請勿讓水或其他液體流入本產品內部，導致本產品損壞。

5. 避免陽光直接照射。

6. 請勿通風良好的地方使用。

7. 請於通風良好的地方使用。

8. 如出現過熱，請停止使用。

如何處理廢棄電子產品

1. 請勿將電子產品當成家庭廢棄物丟棄。

2. 請依當地的法規正確處理廢棄的電子產品。

3. MOMAX 鼓勵您積極參與電子產品回收計劃。

保養條款

1. 由購買日期起 12 個月內，如產品有損壞或故障，經本公司技術人員證實為正常使用之情況下發生，本公司將提供免費維修服務。

2. 維修時必須出示本保證卡及購買商標之發票正本，如無此類文件，本公司將不提供維修服務。

3. 維修時必須出示本保證卡及購買商標之發票正本，如無此類文件，本公司將不提供維修服務。

4. 本公司技術人員證實為正常使用之情況下發生，本公司將提供免費維修服務。

5. 維修時必須出示本保證卡及購買商標之發票正本，如無此類文件，本公司將不提供維修服務。

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.