

INSTRUCTION MANUAL


使用说明 / 使用说明

momax

Pinpop Lite
Find My GPS

BR10


Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPods, Mac, macOS and watchOS are trademarks of Apple Inc. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

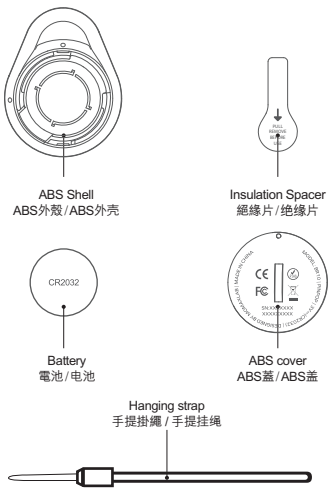

4. 取出電池，更換上準備好的新電池“CR2032 3V”，并裝上電池。裝上電池后聽見產品發出“滴”聲，代表電池更換成功，然後將下蓋放置在產品旋轉槽處，用拆機片順時針旋轉后蓋，使其保持關閉狀態。
- **除拆機片外，美工刀、小螺絲刀等都不建議作為輔助工具，以免損壞產品外觀或外觀。

更換電池

1. 取出包裝附贈的三角形“白色拆機片”。
2. 找到產品背面指示凹槽。
3. 拿著白色拆機片放置在產品背面開槽處，逆時針旋轉打開后蓋。
4. 取出電池，更換上準備好的新電池“CR2032 3V”并裝上電池。裝上電池后聽見產品發出“滴”聲，代表電池更換成功，然後將下蓋放置在產品旋轉槽處，用拆機片順時針旋轉后蓋，使其保持關閉狀態。
- **除拆機片外，美工刀、小螺絲刀等都不建議作為輔助工具，以免損壞產品外觀或外觀。

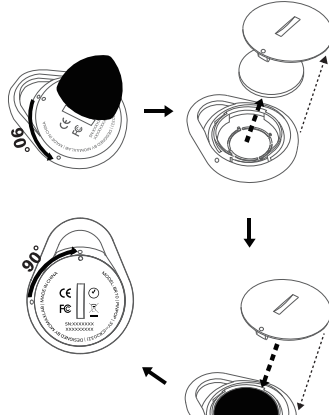

INSTRUCTION FOR USE

操作/操作

The device is powered on and enters the pairing state

1. When using it for the first time, please tear off the protective film on the surface of the product

2. Pull out the insulating paper, and hear the sound of “dropping”, indicates that the product has entered the pairable state.

** If the insulating paper is difficult to pull out, you can use the white disassembling piece to open the case, remove the white disassembling piece and place it on the battery cover, rotate the rear cover counterclockwise to open the battery cover and remove the insulating tab and put it back on the battery the way it was intended to be, and then slide the battery cover clockwise to close it completely.

設備開機及進入配對狀態

1. 首次使用時，請撕開產品表面的保護膜。

2. 拉出絕緣紙，聽見“滴”的一聲，表示產品已進入可配對狀態。

**若絕緣紙不方便拉出，可使白色拆機片打開外殼，取出白色拆機片放在電池蓋上逆時針旋轉后蓋，打開電池地取下絕緣片并原路裝回電池，然後順時針滑動電池蓋，將其完全扣合上蓋。

設備開機及進入配對狀態

1. 首次使用時，請撕開產品表面的保護膜。
2. 拉出絕緣紙，聽見“滴”的一聲，表示產品已進可配對狀態。

**若絕緣紙不方便拉出，可使白色拆機片打開外殼，取出白色拆機片放在電池蓋上逆時針旋轉后蓋，打開電池地取下絕緣片并原路裝回電池，然後順時針滑動電池蓋，將其完全扣合上蓋。

Find and bind your product

**Please make sure that you have an iPhone, iPad, or iPod touch with iOS 14.5 or iPadOS 14.5 or later and two-factor authentication enabled.

1. Turn on **【Bluetooth】** on your Apple device, and go to **【Settings】** - **【Privacy & Security】** - Turn on **【Location Services】** and swipe down and tap **【FindMy】** to allow access to the location and turn on **【Precise Location】**.
2. Goes back to main screen of the apple device, click the **【FindMy】** app, and then select the **【Item】** tab.
3. Click **【+】**, and then click **【Add Other Items】**.
4. Find the item name “MOMAX BR10”, click **【Connect】**, fill in the “Name Item” custom product name, and click **【Continue】** “Choose an emoji”, click to continue to show “This item is linked to your Apple ID”, please check that the email address and mobile phone number are correct, then tap **【Agree】**, and then tap **【Finish】** to add successfully.

查找并綁定產品

**請確保有iOS 14.5或iPadOS 14.5或以上版本，并已啟用雙重認證的iPhone、iPad或iPod touch。

1. 在蘋果設備上打開 **【藍牙】**，并且前往 **【設置】** - **【私隱】** - 開啟 **【定位服務】** 向下滑動并點一下 **【查找】**，允許取用位置就開啟 **【精確位置】**。

2. 蘋果設備處於桌面狀態，點擊 **【查找】** 應用程序，然後選擇 **【物品】** 分頁。

3. 點擊 **【+】**，再點擊 **【添加其他物品】**。

4. 找到物品名為“MOMAX BR10”后點擊 **【連接】**，填寫產品名稱，自定義產品名稱，點擊 **【繼續】**，填寫表情符號，點擊繼續顯示“此物品已連接到您的Apple ID”，請核對電子郵箱和移動電話號碼是否正確，隨即點擊 **【同意】**，點擊 **【完成】** 添加成功。

查找并綁定產品

**請確保有iOS 14.5或iPadOS 14.5或以上版本，并已啟用雙重認證的iPhone、iPad或iPod touch。

1. 在苹果设备上打开 **【蓝牙】**，并且前往 **【设置】** - **【隐私】** - 开启 **【定位服务】** 向下滑动并点一下 **【查找】**，允许取用位置就开启 **【精确位置】**。
2. 苹果设备处于桌面状态，点击 **【查找】** 应用程序，然后选择 **【物品】** 分页。
3. 点击 **【+】**，再点击 **【添加其他物品】**。
4. 找到物品名为“MOMAX BR10”后点击 **【连接】**，填写产品名称，自定义产品名称，点击 **【继续】**，填写表情符号，点击继续显示“此物品已连接到您的Apple ID”，请核对你电子邮箱和移动电话号码是否正确，随即点击 **【同意】**，点击 **【完成】** 添加成功。

SPECIFICATION

產品規格 / 产品规格

MODEL: BR10	
Battery	: CR2032
Bluetooth version	: BLE 5.3
Material	: ABS
Size	: 40.5x32x9mm
Weigh	: 8g ±2g
Compatibility	: Compatible with Apple device only; iPhone and iPod touch models with iOS 14.5 or later; iPad models with iPadOS 14.5 or later; iMac and MacBook with macOS 12.5 or later

CONTAINS:

1. Pinpop Lite Find My Locator
2. Adhesive sticker x 10pcs
3. Opener
4. Hanging strap
5. Instruction manual and warranty card

SETUP THE LOST MODE

1. When the base station is a certain distance away from the console, you need to turn on the lost mode to mark the item as lost. Tap Item at the bottom of the screen, then tap the name of the missing item. Under Lost Mode, Tap Enable.

2. Follow the on-screen instructions and enter a phone number where you can be contacted, or if you want to enter an email address instead, tap Use email address. Then press Enable.
- Note: Please make sure to allow notifications from the Find My app first.

開啟【遺失模式】

1. 當定位器離開主機一定的距離時，要將物品標記為遺失，你需開啟遺失模式。點擊屏幕底部的 **【物品】**，然後點一下遺失物品名稱。在 **【遺失模式】** 下方，點一下 **【啟用】**。

2. 依照螢幕上的指示操作，輸入可以與你聯絡的電話號碼，若要改為輸入電子郵件地址，請點一下 **【使用電子郵件地址】**。然後按下 **【啟用】**。
- 注：請先確定允許 **【查找】** App 的通知。

在地圖查看定位器位置

1. 打開 **【查找】** 應用程序，然後點按 **【物品】** 分頁。在 **【物品】** 清單中選擇您要定位的定位器。如果定位器位於你裝置的覆蓋範圍或最近偵測到定位器的 **【查找】** 網絡範圍內，你便可在地圖看到，其名稱下方會顯示更新的位置時間。

在地圖查看定位器位置

1. 打開 **【查找】** 應用程序，然後點按 **【物品】** 分頁。在 **【物品】** 清單中選擇您要定位的定位器。如果定位器位於你裝置的覆蓋範圍或最近偵測到定位器的 **【查找】** 網絡範圍內，你便可在地圖看到，其名稱下方會顯示更新的位置時間。

View locator location on the map

1. Open the Find My app, then click the Items tab. Select the locator you want to locate in the Items list. If the locator is within the coverage area of your device or the Find My network where the locator was recently detected, you can see it on the map. Below its name, you'll see the location and time of the update.

2. If the base station is not within range of your device or any device on the Find My network, you can see its last known location and time. If you want to receive notifications when the tracker comes within range of your device or can be detected by the [Find My] network, please turn on [Notify when found] under [Notifications].

在地圖查看定位器位置

1. 打開 **【查找】** 應用程序，然後點按 **【物品】** 分頁。在 **【物品】** 清單中選擇您要定位的定位器。如果定位器位於你裝置的覆蓋範圍或最近偵測到定位器的 **【查找】** 網絡範圍內，你便可在地圖看到，其名稱下方會顯示更新的位置時間。

2. 如果定位器不在你裝置或 **【查找】** 網絡的任何裝置的覆蓋範圍內，你可看到其最后已知位置和时间。如果你希望收到通知，當追蹤器進入你裝置的範圍或可由 **【查找】** 網絡偵測到時接收通知，請開啟 **【通知】** 下的 **【找到時通知】**。

在地圖查看定位器位置

1. 打開 **【查找】** 應用程序，然後點按 **【物品】** 分頁。在 **【物品】** 清單中選擇您要定位的定位器。如果定位器位於你裝置的覆蓋範圍或最近偵測到定位器的 **【查找】** 網絡範圍內，你便可在地圖看到，其名稱下方會顯示更新的位置時間。

位置位於你裝置的覆蓋範圍或最近偵測到定位器的 **【查找】** 範圍內，你便可在地圖看到。其名稱下方會顯示更新的位置時間。

2. 如果定位器不在你裝置或 **【查找】** 網絡的任何裝置的覆蓋範圍內，你可看到其最后已知位置和时间。如果你希望收到通知，當追蹤器進入你裝置的範圍或可由 **【查找】** 網絡偵測到時接收通知，請開啟 **【通知】** 下的 **【找到時通知】**。

PLAY A SOUND

1. Open the **【FindMy】** app, select the **【Item】** tab, click the product you need to use, the mobile phone interface will display the **【Play Sound】** button, click the **【Play Sound】** button, and then you will hear a piece of music, indicating that the product can be used normally.

When the device and the product are out of the distance, the **【Find My】 app cannot connect to the product and the product cannot play sound normally.

播放聲音

- 打開 **【查找】** 應用程序，選取 **【物品】** 分頁，點擊您要使用的產品，手機界面顯示 **【播放聲音】** 的按鈕，點擊 **【播放聲音】** 按鈕，隨即聽見一段音樂，表示產品可以正常使用。

當設備與產品超出使用距離后，【查找】** 應用程序

無法連接到產品并且產品無法正常播放聲音。

播放聲音

- 打開 **【查找】** 應用程序，選取 **【物品】** 分頁，點擊您要使用的產品，手機界面顯示 **【播放聲音】** 的按鈕，點擊 **【播放聲音】** 按鈕，隨即聽見一段音樂，表示產品可以正常使用。

當設備與產品超出使用距離后，【查找】** 應用程序

Prevent unautho rized tracking

1. If any of the locators and other Find My network accessory products leave their owners and move with you for a period of time, you can send a notification to your Apple through the Find My app device, and be able to observe the walking path as you move and in time.
2. These features are designed to prevent people from trying to track you without your knowledge, so if you feel your safety is at risk, contact your local law enforcement officer.

**This product has a function to prevent unauthorized tracking, and should not be used to track others, nor should it be used to track property that does not belong to you. In many countries and regions around the world, it is an offence to use these products to track someone without their consent.

防止擅自追蹤

1. 如果任何定位器或其他 **【查找】** 網絡配件產品離開了其擁有者，并隨你移動一段時間，你可以透過 **【查找】** 應用程序通知到您的Apple設備，並能夠觀察到隨您移動的行走路徑及時間。
2. 這些功能為特製制作，旨在防止他人在你不知道的情況下試圖追蹤您，如果您感到安全受到威脅，請聯絡當地執法人員。

**本產品加入了防止他人擅自追蹤的功能，不應用來追蹤他人，亦不應用來追蹤不屬於您的財物。在全球很多國家和地區，未經他人同意使用這些產品追蹤別人屬犯案。

防止擅自追蹤

1. 如果任何定位器或其他 **【查找】** 網絡配件產品離開了其擁有者，并隨你移動一段時間，你可以透過 **【查找】** 應用程序通知到您的Apple設備，並能夠觀察到隨您移動的行走路徑及時間。
2. 這些功能為特製制作，旨在防止他人在你不知道的情況下試圖追蹤您，如果您感到安全受到威脅，請聯絡當地執法人員。

**本產品加入了防止他人擅自追蹤的功能，不應用來追蹤他人，亦不應用來追蹤不屬於您的財物。在全球很多國家和地區，未經他人同意使用這些產品追蹤別人屬犯案。

REPLACE THE BATTERY

1. Take out the white triangle “white disassembling piece” that comes with the package.
2. Locate the slots on the back of the product.
3. Take the white disassembling piece and place it the slot on the back of the product, rotate the counter clockwise to open the back cover.
4. Remove the battery, replace it with the prepared new battery “CR2032 3V” and install the battery, after installing the battery, you can hear the product emit a “drop” sound, which means that the battery has been successfully replaced, and then place the lower cover in the rotating groove of the product, and rotate the back cover with the disassembling piece clockwise, so that it remains closed. Then place the lower cover at the rotating slot of the product and turn it clockwise with the disassembling piece to keep it closed.

**Except for the disassembly tool, any knife and screwdriver are not recommended as auxiliary tools to avoid damaging the product shell or appearance.

更換電池

1. 取出包裝附贈的三角形“白色拆機片”。
2. 找到產品背面指示凹槽。
3. 拿著白色拆機片對準產品背面開槽處，逆時針旋轉打開后蓋。

www.momax.net

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, which provides for the protection of radio reception in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions may cause harmful interference to radio or television reception which can be determined by turning the more of the following measures:
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in a portable exposure condition without restriction.

FCC ID: 2ANBQ-BR10B



momax

WARRANTY/保用證/保用证

Model/型號/型号:

Date of Purchase/購買日期/购买日期:

Remarks/備註/备注:

Customer Service/客戶服務中心/客户服务中心

Hong Kong and Macau:
Unit A, 4/F, Cheung Lung Ind. Bldg.,
Lai Chi Kok, Kowloon, Hong Kong⑩ Cheung Yue Street,
Hotline: 852-2402 3186 E-Mail: info@momax.net

香港及澳門:

香港九龍荔枝角長義街10號昌隆大廈4樓A室
服務熱線: 852-2402 3186 電郵: info@momax.net

中国内地:

摩米士科技(深圳)有限公司
廣東省深圳市龙岗區坂田街道南頭社區雪蘭路2016号或
字隆布吉廠房A四層
郵箱: 518000 全國服務熱線: 86-400-886-0010
電郵: info@momax.net.cn

Copyright© 2024 MOMAX Technology Ltd. All rights reserved.
MOMAX is registered trademark of MOMAX Technology Ltd.
All other trademarks are the property of their respective owners.
版權所有 ©2024 MOMAX Technology Ltd.，保留所有權利。
MOMAX 係 MOMAX Technology Ltd 的註冊商標。
所有其他商標均為其各自擁有者的財產。
版權所有 ©2024 MOMAX Technology Ltd.，保留所有權利。
MOMAX 係 MOMAX Technology Ltd 的註冊商標。所有其他商標均為其各自擁有者的財產。