

INSTRUCTION MANUAL

使用說明 / 使用說明


momax

1-VIBE GO

Magnetic Bluetooth speaker

磁吸藍牙音箱

磁吸藍牙音箱

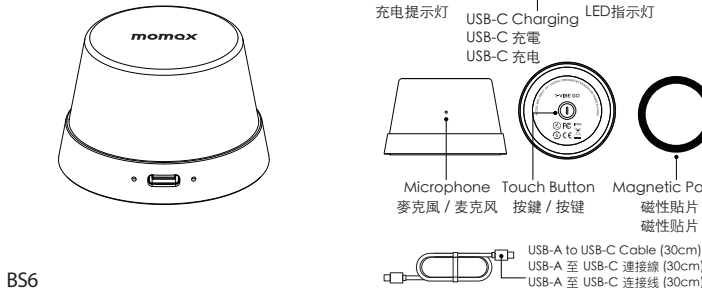

BS6

INSTRUCTION FOR USE

操作/操作

Function	Key Operation	Function Details Function description in detail
Power on	Long press the bottom button for 2 seconds	When manually long pressing the bottom button for 2 seconds, Power on with a prompt tone.
Power off	Long press the bottom button for 2 seconds	When manually long pressing the bottom button for 2 seconds, power off. And there is a prompt tone.
BT Search Pairing	Default to BT mode when powered on	When powered on, the blue light flashes, entering pairing mode. And there is a prompt tone. It will automatically search for your device, and once your device finds the Bluetooth name of this unit, you can directly press to pair and connect.
Pairing Successful	When in BT mode after powering on	Simultaneously search and pair, pairing OK. There is a prompt tone.
After BT pairing is successful	Long press the bottom button for 2 seconds	Long press the bottom button for 2 seconds. Power on with a prompt tone. Bluetooth automatically pairs successfully, and there is a prompt tone.

TWS Dual-speaker mode	Double-click the bottom button of the speaker	After powering on two speakers, connect one of them to the phone's Bluetooth, and do not connect the other to any device. Then, double-click the buttons on both speakers respectively. The working indicator light will alternately flash blue and white. Once pairing is complete, the speaker with the blue indicator light on is the left channel speaker, and the one with the white indicator light on is the right channel speaker. The next time you power on, the two speakers will automatically reconnect to TWS and the phone. A prompt tone will indicate successful reconnection to the phone; a "TWS Teaming" prompt tone will indicate successful TWS reconnection.
Play/Pause Music	Short Press the Bottom Button	When music is playing, short press the bottom button to pause the music. When music is paused, short press the bottom button to play the music.

In Call	NA	NA
Answer Incoming Call	Short Press the Bottom Button	When there is an incoming call, short press the bottom button to answer the call.
Reject Incoming Call	Long Press the Bottom Button	When there is an incoming call, long press the bottom button to reject the call.
End Call	Short Press the Bottom Button	When in call, short press the bottom button to end the call, and the music will automatically play.
Clear Connector Restore Factory Settings	Triple Press the Bottom Button	Triple-clicking the bottom button will clear and disconnect Bluetooth and TWS connections, restoring factory settings (i.e., resetting volume to default, TWS initialization), and the speaker will enter pairing mode. And there is a prompt tone.
Charging	Insert 5V Charger	When charging, the red light stays on. The device can also be powered on in this state.
Fully Charged	When powered on or in standby mode	When the built-in battery of the main unit is fully charged, the green light next to the Type-C port stays on.

功能	按鍵操作	功能詳細
開機	長按底部按鍵2秒	當手動長按底部按鍵2秒，開機併伴有提示音。
關機	長按底部按鍵2秒	當手動長按底部按鍵2秒，開機併伴有提示音。
BT搜索配对	開機狀態下默認在BT時	當開機後藍燈閃亮，此時進入配对狀態，併有提示音，此時會自動搜索附近的設備，設備自動搜到本機藍牙名，直接可點按配对相連。
配对成功	當開機BT狀態下	同時搜索後配对，配对OK，有提示音。
BT配对成功後（開機自動回連）	長按底部按鍵2秒	長按底部按鍵2秒，開機併伴有提示音。"Power on" 藍牙自動配对成功，有 "connected" 的提示音。

Low Battery Alarm	In Power-On State	
		When the speaker is in the power on state and the battery is low, there is a "Low battery!" prompt tone every 2 minutes. When the battery level drops to the limit of 3.3V, the red light flashes. When the battery level drops to 3.0V, it will automatically shut down.

功能	按鍵操作	功能詳細
播放/暫停音樂	短按底部按鍵	當在音樂播放狀態時，短按底部按鍵，暫停音樂。當在音樂暫停狀態時，短按底部按鍵，播放音樂。
通話中	NA	NA
來電接聽	短按底部按鍵	當有來電呼入時，短按底部按鍵可以接聽來電。
來電拒接	長按底部按鍵	當有來電呼入時，長按底部按鍵可以拒接來電。
結束通話	短按底部按鍵	當在通話狀態下，短按底部按鍵可結束通話，音樂自動播放。
清除連接恢復出廠設置	3擊底部按鍵	三連擊底部按鍵會清除併斷開藍牙和TWS連接，恢復出廠設置。

功能	按鍵操作	功能詳細
開機	長按底部按鍵2秒	當手動長按底部按鍵2秒，開機併伴有提示音。"Power on" 藍牙自動配对成功，有 "connected" 的提示音。
關機	長按底部按鍵2秒	當手動長按底部按鍵2秒，開機併伴有提示音。
BT搜索配对	開機狀態下默認在BT時	當開機後藍燈閃亮，此時進入配对狀態，併有提示音，此時會自動搜索附近的設備，設備自動搜到本機藍牙名，直接可點按配对相連。
配对成功	當開機BT狀態下	同時搜索後配对，配对OK，有提示音。
BT配对成功後（開機自動回連）	長按底部按鍵2秒	長按底部按鍵2秒，開機併伴有提示音。"Power on" 藍牙自動配对成功，有 "connected" 的提示音。

BT配对成功後（開機自動回連）	長按底部按鍵2秒	長按底部按鍵2秒，開機併伴有提示音 "Power on"，藍牙自動配对成功。有 "connected" 的提示音。
充電中	插入5V充電器	當在充電狀態時，紅燈常亮。此狀態時也可以開機。
充電電	開機或待機時	當主機內置電池充滿電後，Type_c插口旁邊的綠燈常亮。
低電報警	在開機狀態	當音箱在開機狀態下，電量不足時，有 "Low Battery!" 提示音，每2分鐘提示一次，當電量低至極限3.3V時紅燈閃爍，低至3.0V時自動關機。

功能	按鍵操作	功能詳細
開機	長按底部按鍵2秒	當手動長按底部按鍵2秒，開機併伴有提示音 "Power on"。
關機	長按底部按鍵2秒	當手動長按底部按鍵2秒，開機併伴有提示音。
BT搜索配对	開機狀態下默認在BT時	當開機後藍燈閃亮，此時進入配对狀態，併有提示音，此時會自動搜索附近的設備，設備自動搜到本機藍牙名，直接可點按配对相連。
配对成功	當開機BT狀態下	同時搜索後配对，配对OK，有提示音。
BT配对成功後（開機自動回連）	長按底部按鍵2秒	長按底部按鍵2秒，開機併伴有提示音。"Power on" 藍牙自動配对成功，有 "connected" 的提示音。

Reject Incoming Call	Default LED Light Always On
水電接聽/來電接聽	默認LED燈常亮/默認LED燈常亮
Clear Connection Restore Factory Settings	The working indicator light flashes blue
清除連接恢復出廠設置	工作指示燈閃爍藍色/工作指示燈閃爍藍色
Charging	The orange light next to the Type-C port stays on, and the power-on status light is not affected.
充電中	Type_c插口旁邊的橙色燈常亮，開機狀態下不受影響。
Fully Charged	The green light next to the Type-C port stays on, and the power-on status light is not affected.
充電電	Type_c插口旁邊的綠燈常亮，開機狀態下不受影響。
Low Battery Alarm	When the battery level drops to the limit of 3.3V, the orange light flashes.
低電報警/低電報警	當電量低至極限3.3V時橙色燈閃爍，當電量低至極限3.0V時紅燈閃爍。


www.momax.net

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver.

Magnetic sheet* installation steps

引磁片*安裝步驟 / 引磁片*安裝步驟

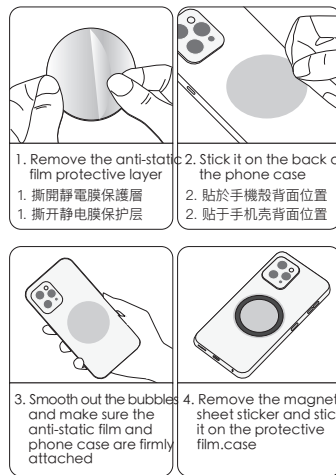

3. 撫平氣泡，確認靜電膜與手機殼有效貼合	4. 撕開引磁片貼紙貼至保護膜上
3. 撫平氣泡，確認靜電膜與手機殼有效貼合	4. 撕開引磁片貼紙貼至保護膜上

*Phone models support magnetic wireless charging natively may not require such Magnetic sheet. *Because the corresponding wireless charging position of each mobile phone model that supports wireless charging (non-native magnetic charging support) may be different, please consult the corresponding mobile phone brand to obtain such information.

*Original support magnetic charging mobile phone may not need to use magnetic sheet. *Because each mobile phone model corresponding wireless charging position may be different, please consult the corresponding mobile phone brand to obtain such information.

*Original support magnetic charging mobile phone may not need to use magnetic sheet. *Because each mobile phone model corresponding wireless charging position may be different, please consult the corresponding mobile phone brand to obtain such information.

SPECIFICATION

產品規格 / 产品规格

MODEL: BS6		型號: BS6
USB-C Input	: 5V ≈350mA	USB-C輸入
Capacity	: 700mAh	容量
Charging time	: < 3 hours	充電時間
Working time	: Up to 2 hours (100% Volume)	續航時間
Frequency Response	: 120Hz ~ 20kHz	頻率響應
Driver size	: Φ40mm	驅動單元尺寸
Output RMS	: 3W	額定輸出功率
Wireless connectivity	: V5.3	無線版本
Effective range	: < 10m / TWS > 5m	有效距離
Material	: ABS + Aluminum + Fabric	材質
Dimension	: Φ60mm*H37.3mm	產品尺寸
Weight	: 85g	產品重量

CONTAINS:

1. Magnetic Bluetooth speaker
2. USB-A to USB-C Cable (30cm)
3. Magnetic patch and protective film
4. Instruction Manual and Warranty Card

包裝內容:	包裝內容:
1. 磁吸藍牙音箱	1. 磁吸藍牙音箱
2. USB-A 至 USB-C 連接線 (30cm)	2. USB-A 至 USB-C 連接線 (30cm)
3. 磁性貼片及保護膜	3. 磁性貼片及保護膜
4. 使用說明書及保用證: 7.95 x Ø 59.5 mm	4. 使用說明書及保用證: 7.95 x Ø 59.5 mm

包裝內容:	包裝內容:
1. 磁吸藍牙音箱	1. 磁吸藍牙音箱
2. USB-A 至 USB-C 連接線 (30cm)	2. USB-A 至 USB-C 連接線 (30cm)
3. 磁性貼片及保護膜	3. 磁性貼片及保護膜
4. 使用說明書及保用證: 7.95 x Ø 59.5 mm	4. 使用說明書及保用證: 7.95 x Ø 59.5 mm

WARNING

1. Do not dismantle or modify the product;
2. Do not store the product in wet conditions;
3. Do not keep or use the product near heat sources;
4. Do not let water or any other liquid flows into the inside part of the product's interface. This would cause damages to the product;
5. Make sure to remove metallic or magnetic protective case of your device when charging;
6. While charging, the 1-VIBE GO may heat up. This is normal and should not affect 1-VIBE GO's performance. If the battery feels hot to the touch during this charging process, remove the 1-VIBE GO from the charger and allow it to cool down before restarting the charging process;
7. Avoid using bent or damaged USB cable.

DISPOSAL OF ELECTRONIC PRODUCTS

1. Do not place the product as household waste;
2. Please dispose of discarded electronic products properly according to local regulations.
3. MOMAX encourages you to participate in electronics recycling program.

WARRANTY CONDITIONS

1. For any defect in the judgment of our technician, caused under normal use, we are responsible for repairing free of charges 12 months commencing from the date of purchase at the discretion of our company;
2. A valid warranty card and original purchase invoice must be presented upon request of warranty service;

3. This warranty card shall not apply to the product if:
(a) it has explicitly modified or repaired in any way by persons other than technicians of this company, or;
(b) it has been damaged through misuse, malicious acts, negligence, inflow of any liquid, or;
(c) losses or damages are caused by force majeure or natural disasters.
4. No alteration to this warranty card will be allowed;
5. The warranty terms and conditions are subject to change without prior notice;
6. Please retain your proof of purchase for warranty service;
7. Please consult the dealer about the product compatibility with your cell phone / PDA before purchase. Product specifications are subject to change without prior notice;
8. Please visit www.momax.net for latest product information.

警告

1. 請勿自行拆開或改裝本產品；
2. 請勿將本產品存放在潮濕環境中；
3. 請勿將產品靠近熱源或於熱源附近充電；
4. 請勿將水或其它液體流入本產品內部，導致本產品損壞；
5. 如您有額外使用金屬或包含磁片的保護殼，請確保充電前須移除；

6. 充電時，1-VIBE GO 有可能產生熱力，此乃正常現象，並不會影響產品表現。但如果感到手機電池或 1-VIBE GO 過熱，請關閉 1-VIBE GO 電源供應，待冷卻後，再嘗試充電；
7. 避免使用彎曲或損壞的 USB 線材。

如何處理廢棄電子產品

1. 請勿將電子產品當成家庭廢棄物丟棄；
2. 請依當地的法例規定處理廢棄的電子產品；
3. MOMAX 鼓勵您積極參與電子產品回收計劃。

保養條款

1. 由購買日期起 12 個月內，如產品有損壞或故障，經本公司技術人員證實為在正常使用之情況下發生，本公司將提供免費維修服務；
2. 維修時必須出示本保用證及購買商號之發票正本，如果用戶不能提供，本公司有權不承擔任何責任；
3. 保用期內，出現以下條款產品保用證自動失效：
(a) 非本公司人員蓄意拆解或維修產品之任何部分；
(b) 錯誤的操作如：非法接駁電源，以及水、污穢物滲入產品內導致產品損壞；
(c) 不可抗拒意外事件或天然災害導致產品損壞；
4. 此保用證如經塗改，保用證自動失效；
5. 本公司有權增刪任何維修及保用條款而不作通知；
6. 如因錯誤使用本公司產品而導致手提電話或其他電子產品有任何損壞，本公司不會承擔任何責任；
7. 有關 MOMAX 原裝產品和您的手機或電子產品的兼容性，請在購買時向經銷商確認。此產品規格隨時可能變更，恕不另行通知；

LED Light Status (LED status)

LED 燈的狀態 / LED 燈的狀態

Power on	The working indicator light flashes blue
開機/開機	工作指示燈藍燈閃爍/工作指示燈藍燈閃爍
Power off	The blue indicator light turns off, entering shutdown mode.
關機/關機	指示燈藍燈熄滅，進入關機。
BT Search Pairing	The working indicator light flashes blue
BT 搜索配对	工作指示燈藍燈閃爍
Pairing Successful	After Bluetooth pairing is OK, the blue light stays on.
配对成功	藍牙配对OK後，藍燈常亮
After BT pairing is successful	When Bluetooth pairing is OK, the blue light stays on.
(automatically reconnects when powered on)	藍牙配对OK後，藍燈常亮
BT pairing is successful	When Bluetooth pairing is OK, the blue light stays on.
(automatically reconnects when powered on)	藍牙配对OK後，藍燈常亮
TWS Dual-speaker mode	The working indicator light will alternately flash blue and white.
TWS 組隊	工作指示燈將交替閃爍藍色和白色
In Call	Default LED Light Always On
通話中/通話中	默認LED燈常亮/默認LED燈常亮

- 果用戶不能提供，本公司有權不承擔任何責任；
2. 請勿將本產品存放在潮濕環境中；
3. 保用期內，出現以下條款產品保用證自動失效：
(a) 非本公司人員蓄意拆解或維修產品之任何部分；
(b) 錯誤的操作如：非法接駁電源，以及水、污穢物滲入產品內導致產品損壞；
(c) 不可抗拒意外事件或天然災害導致產品損壞；
4. 此保用證如經塗改，保用證自動失效；
5. 本公司有權增刪任何維修及保用條款而不作通知；
6. 如因錯誤使用本公司產品而導致手提電話或其他電子產品有任何損壞，本公司不會承擔任何責任；
7. 有關 MOMAX 原裝產品和您的手機或電子產品的兼容性，請在購買時向經銷商確認。此產品規格隨時可能變更，恕不另行通知；
8. 請瀏覽 www.momax.net 瞭解最新產品資訊。

警告

1. 請勿自行拆開或改裝本產品；
2. 請勿將本產品存放在潮濕環境中；
3. 請勿將產品靠近熱源或於熱源附近充電；
4. 請勿將水或其它液體流入本產品內部，導致本產品損壞；
5. 如您有額外使用金屬或包含磁片的保護殼，請確保充電前須移除；
6. 充電時，1-VIBE GO 有可能產生熱力，此乃正常現象，並不會影響產品表現。但如果感到手機電池或 1-VIBE GO 過熱，請關閉 1-VIBE GO 電源供應，待冷卻後，再嘗試充電；
7. 避免使用彎曲或損壞的 USB 線材。

如何處理廢棄電子產品

1. 請勿將電子產品當成家庭廢棄物丟棄；
2. 請依當地的法例規定處理廢棄的電子產品；
3. MOMAX 鼓勵您積極參與電子產品回收計劃。

保養條款

1. 由購買日期起 12 個月內，如產品有損壞或故障，經本公司技術人員證實為在正常使用之情況下發生，本公司將提供免費維修服務；
2. 維修時必須出示本保用證及購買商號之發票正本，如果用戶不能提供，本公司有權不承擔任何責任；
3. 保用期內，出現以下條款產品保用證自動失效：
(a) 非本公司人員蓄意拆解或維修產品之任何部分；
(b) 錯誤的操作如：非法接駁電源，以及水、污穢物滲入產品內導致產品損壞；
(c) 不可抗拒意外事件或天然災害導致產品損壞；
4. 此保用證如經塗改，保用證自動失效；
5. 本公司有權增刪任何維修及保用條款而不作通知；
6. 如因錯誤使用本公司產品而導致手提電話或其他電子產品有任何損壞，本公司不會承擔任何責任；
7. 有關 MOMAX 原裝產品和您的手機或電子產品的兼容性，請在購買時向經銷商確認。此產品規格隨時可能變更，恕不另行通知；

momax

WARRANTY/保用證/保用證

Model/型號/型号:

Date of Purchase/購買日期/購買日期:

Remarks/備註/备注:

Customer Service/客戶服務中心/客戶服務中心

Hong Kong and Macau:

Unit A, 4/F, Cheung Lung Ind. Bldg.,

Lai Chi Kok, Kowloon, Hong Kong 10 Cheung Yee Street,

Hotline: 852-2402 3186 E-Mail: info@momax.net

香港及澳門:

香港九龍荔枝角長興10號昌隆大廈4樓A室

服務熱線: 852-2402 3186 電郵: info@momax.net

中國內地:

摩米士科技(深圳)有限公司

廣東省深圳市龍崗區坂田街道崗頭社區雪蘭路2016號或

宇隆吉龍府A四層

郵編: 518000 全國服務熱線: 86-400-886-0010

電郵: info@momax.net.cn

Copyright © 2024 MOMAX Technology Ltd. All rights reserved.

MOMAX is registered trademark of MOMAX Technology Ltd.

All other trademarks are the property of their respective owners.

版權所有©2024 MOMAX Technology Ltd. 保留所有權利。

MOMAX是MOMAX Technology Ltd.的註冊商標。

所有其他商標均為其各自擁有者的財產。

版權所有©2024 MOMAX Technology Ltd. 保留所有權利。

MOMAX是MOMAX Technology Ltd.的註冊商標。

所有其他商標均為其各自擁有者的財產。

有毒有害物質或元素附表

零件名稱	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr ^{VI})	多環芳烴 (PAHs)	多環芳烴 (PBDEs)
主體	X	O	O	O	O	O
配件	X	O	O	O	O	O

O: 零件含有有毒有害物質或元素含量符合RoHS 2.0 標準要求
X: 零件含有有毒有害物質或元素含量超過RoHS 2.0 標準要求
註: 本產品標有 "X" 的部份，指該零件含有可供應的技術支援服務

CE

FC

RoHS

10

WEEE