

Model: Club Booster V2 remote



Speed Control - Press "C." [Go/Speed Up] button to move forward. Your Club Booster has 6 speeds and defaults to Speed 1 each time you stop, for safety. Cycle through speeds by pressing Go/Speed Up and Reverse/Slow Down; each time you press Up or Down, the speed changes.

Reverse/Slow Down - Press and hold the "4 多" [Reverse/Slow Down] button at stationary to reverse. Release the button and the unit will gradually stop. **Left/Right turn** - Press and hold the "t" [Left] or "f" [Right] buttons to turn left or right. Slow to Speed 1 or Speed 2 to turn a fixed-front wheel cart.

Stop - Press the "0" [Stop] button to bring your Club Booster to a gradual stop.

15-Yard/30-Yard Presets - Press "0" or "G" button and your cart will travel those preset yardages. You are able to steer your cart while in Preset Mode. **Free-Wheel Mode** - You can free-wheel to push your cart by holding down the Stop button for 3 seconds. The red light on the Club Booster console will flash. Press any button to exit Free-Wheel Mode.

Gyro On/Off - Press "0" [Gyro] button to deactivate the gyro. The yellow light on the Club Booster console will turn off. Turn off the gyro when you are using your Club Booster for power-assist, when walking with the unit and steering manually. **Keypad Lock** - Press the "(!)" [Keypad Lock] button to lock the keypad so buttons are not accidentally activated. The red light on the remote will flash. Press the Keypad Lock button and any other button within 3 seconds to exit Lock Mode. **Charging The Remote** - Charge the remote by plugging the micro USB cable (included) into the remote and any USB charging inlet.

Pairing The Remote - The remote is paired to your Club Booster at the factory. If your unit loses pairing to the remote, use the following procedure: 1) Turn off the Club Booster, 2) Press and hold both the "Stop" and "30-Yard" buttons until the light in the upper corner flashes, 3) Turn on the Club Booster, 4) Release the "Stop" and "30" buttons. The remote is paired when the red light stops flashing.

- English: "

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device."

- French:"

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil nedit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.