


GDR 49 BLK MINI PROGRAMMING

IMPORTANT: The remote will activate your door or gate during programming. Ensure door is clear of ALL obstructions.

- 1 Start with your garage door or gate closed.
- 2 Press and hold the bottom button on the remote control until the blue LED stays solid (approximately 10 seconds) then release the button.



- 3 Press and release the Program/LEARN button on your product. A ladder may be necessary to reach the Program/LEARN button.

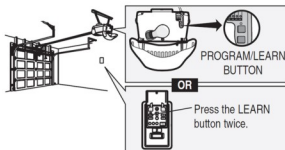

- 4 On the remote control, press and release the button **twice** that you would like to program. The blue LED will blink for up to 60 seconds and the remote control will begin sending the preprogrammed codes to the garage door opener. Transmission can take up to 60 seconds.
- 5 When the garage door or gate begins to open, immediately press and release either button on the remote control to confirm the code and exit programming.

The Universal Garage Door Mini Remote Control is compatible with the following brands, which use a program/learn button:

# of times to press the button	Compatible Brand	Learn Function	Frequency
1	Linear	Mega Code 1997-Current	310M
2	Chamberlain	Red or Orange	390M
3	Chamberlain	Purple	315M
4	Chamberlain	Green	390M
5	Genie Overhead Door	Intellicode 1 2005-Current	315M
6	Genie Overhead Door	Intellicode 1 1995-Current	390M
7	Stanley	Secure Code 1998	310M
8	Liftmaster, Chamberlain, Craftsman	Yellow	310/315/390
9	Wayne Dalton	Rolling Code 1999-Current	390M
10	Wayne Dalton	Blinking	Na
11	Xtreme Garage	Xtreme Garage 2016-Current	310M
12	Genie Overhead Door	Intellicode 2	315/390

a) The statement "Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate."

b) The statement "Even used batteries may cause severe injury or death."

c) The statement "Call a local poison control center for treatment information."

d) A statement indicating the compatible battery type (CR2032).

e) A statement indicating the nominal battery voltage.

f) The statement "Non-rechargeable batteries are not to be recharged."

g) The statement "Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns."

a) The statement "Ensure the batteries are installed correctly according to polarity (+ and -)."

b) The statement "Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries."

c) The statement "Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations."

d) The statement "Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children."

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

⚠ WARNING

- INGESTION HAZARD:** This product contains a button cell or coin battery.
- DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- KEEP** new and used batteries **OUT OF REACH OF CHILDREN**
- Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.