 


GD R51

1

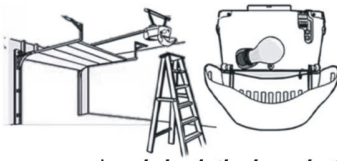

Use a ladder (if necessary) and check the learn button color on the motor unit and compare to the table below.



LED Color	Mode #	Compatible Opener Type	
GREEN ●	Mode 1	Purple Learn Button	Yellow Learn Button
RED ●	Mode 2	(Red/Orange Learn Button)	Green Learn Button

2

Mode 1–Green LED Flash
(Default mode for Purple /Red/Orange Learn)

Mode 2–Red LED Flash
(Secondary mode for Yellow/Green Learn)


To change modes:

Hold both buttons on the remote together for 10 seconds until the LED changes color, indicating the new programming mode.

Then press the first button you want to program, Repeat for the second button.


3

Press and release the Learn button on the motor unit. The Learn LED will light steadily for about 30 seconds

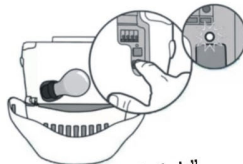

Within that time, press and hold the remote button you selected in Step 2.

Release the button when the motor light blinks or you hear two clicks

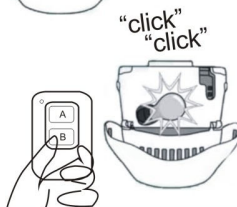

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.