

Scan QR code


APP download

CE IC PS E RoHS Made in China

English	01-06
Deutsch	07-12
Français	13-18
Español	19-24
Italiano	25-30
日本語	31-36

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Step 7:
To use one of the four coloured backdrops, open the top of the light tent, and then slide in your backdrop of choice into place. Attach the backdrop to the back of the tent using the Velcro tabs located at the top left and right-hand corners of the light tent. Tuck the bottom edge of the background into the pocket located at the front of the tent.

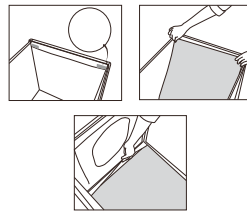

The diagram on the left shows a power cord being plugged into a device. The diagram on the right shows the correct way to plug and unplug the power cord. The top part shows the cord being plugged in, with an arrow pointing right. The bottom part shows the cord being unplugged, with an arrow pointing left.

Tips: this controller does not support APP external microphone function (music rhythm) for the time being, it is recommended not to use it!

control lens

- 05 -



3. Put the adapter, light diffuser and backdrops in the pouches, now you can take your light box everywhere you want to go!

- 06 -

Thank you very much for choosing Studio Box. Please read this manual before using the product as it may contains some information you don't know. If you have any questions, please feel free to send us email through amazon.


Input Voltage	AC110-240V 50/60Hz		
Output Voltage	DC12V		
Color Temperature	800W Adjustable		
Specifications	40×40×40cm	50×50×50cm	60×60×60cm
Output Current	3A	3A	3A
Actual Power	2.25W Adjustable	2.30W Adjustable	2.40W Adjustable
Lumens	80-1800lm	80-2600lm	80-3600lm

- 01 -


Step 1:
Open the box and make sure all parts are available.



Step 2:
Start by laying the tent on a flat surface, then open out the LED light tent.

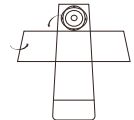


Step 3:
Unfold the panels of the light tent, and then attach the Velcro edges together to form a cube.

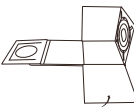


- 02 -


Step 4:
Now fold the first three panels over, to attach it to the bottom panel.

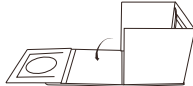

Step 5:
Finally fold the front panel of the tent up, and then attach it to the rest of the light tent using the Velcro edges.

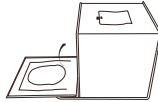


Step 6:
Roll up the flaps covering the front-shooting window, and attach it to the Velcro at the top of the LED light tent. You can also shoot from the top of the light tent. Simply open the flap covering the top shooting window.

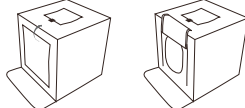


- 03 -

Step 7:
To use one of the four coloured backdrops, open the top of the light tent, and then slide in your backdrop of choice into place. Attach the backdrop to the back of the tent using the Velcro tabs located at the top left and right-hand corners of the light tent. Tuck the bottom edge of the background into the pocket located at the front of the tent.

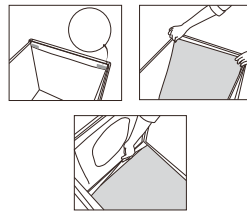

Step 8:
However, when connecting, please place the controller/sensor head outside the shed, do not put it inside! In case the sensitivity of the operation is affected.

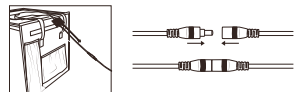

- 04 -