

168-P16-REMOTE

User Manual

01 Product Info

JCHR35W28 Hand-held 6-channel remote with vane adjustment



02 Buttons

- a. FrontHand-held 6-channel remote with vane adjustment
- b. BackBattery compartment

03 Parameters

Battery Type: AA battery × 2Working Temperature: -10°C – 50°CRadio Frequency:
433.92MHz ±100kHzTransmit Distance: ≥30m indoor

04 Caution!

1. The transmitter should not be exposed to moisture or impact, so as not to affect its life.
2. During use, when the remote control distance is significantly shorter or less sensitive, please check whether the battery needs to be replaced.
3. When the battery voltage is too low, orange LED flickers when you press button, indicating to replace battery.
4. Please properly dispose of used batteries according to the local garbage classification and recycling policy.

05 Instructions

a. Child-lock (Prohibit dual-key operation)

Press P1 or P2 for 10s Repeat ×3 Dual-key operation activated

Note: When dual-key operation prohibited, limit setting and other programming functions are not allowed.

b. Number of Channels Setting

When all LEDs are lit, that is channel 0 (All channels move together).

c. Vane Adjustment

Scroll 1 notch: vanes go up or down 1 notch
Scroll n notches: raise or lower the vanes by n steps

d. Other operations

Please refer to the motor operation instruction

06 FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.