

- Never dispose of the device in a fire.
- Avoid exposing your device to very cold or very hot temperatures.
- Extreme temperatures may damage the charger and reduce the lifespan of the device.
- Do not throw away the product with the household trash. The product needs to be recycled and disposed of responsibly.

Troubleshooting

If the product is not working properly please check the following troubleshooting, if your situation differs from normal conditions please try to solve the issue or call customer service. For full troubleshooting visit our website at:

www.eggtronic.com/support/troubleshooting

Has the Power Popper suffered not voluntary actions, such as fall, impact, compression? (normal conditions: **no**)

Try charging your smartphone directly with the power adapter using your cable. Does it work? (normal conditions: **yes**)

Is your smartphone officially compatible with Qi Wireless Charging or equipped with a working Qi Receiver? (normal conditions: **yes**)

Is the smartphone correctly aligned with the coil position of the Power Popper as shown in the manual? (normal conditions: **yes**)

Is there any metal between your smartphone and the charger? (normal conditions: **no**)

Is the Power Popper ON? (normal conditions: **yes**)

Is the Power Popper sufficiently charged? (normal conditions: **yes**)

Does the power outlet work? (normal conditions: **yes**)

Has the cable been properly connected to the adapter and to the Power Popper? (normal conditions: **yes**)

 
 
If you stick the power bank to the smartphone case, is the case thin enough to allow wireless charging? (normal conditions: **yes**)

Package content

1500 mAh Wireless Power Popper | USB-C to USB-A cable (2ft) | Replacement adhesive strips x4 | User manual.

Product overview

Thank you for choosing Eggtronic 1500mAh Wireless Power Popper. The Power Popper is a wireless power bank to charge your smartphone without cables while on the go. Works with all Qi-enabled phones. Please read the user manual before using the product.

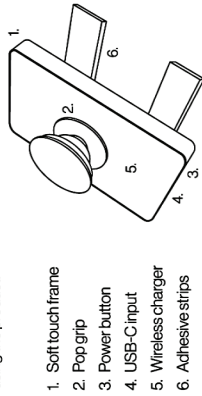

How to Use

1) Wireless power bank

Charge your smartphone without cables while on the go, enjoy more than three hours of extended battery life.

Limited warranty

 
For product warranty visit our website at:
www.eggtronic.com/support/download-area

This product is meant for use only with appropriate devices. Please consult your device packaging to determine whether this product is compatible with your particular device. Manufacturer will not be responsible for any damages you or any third party that may suffer as a result of use, intended or unintended, or misuse of this product. You agree to indemnify Manufacturer for any resulting injury or damage if the product is used with an unintended device. Product names, logos, brands and other trademarks referred to within this product are property of their respective trademark holders. These trademark holders are not affiliated with our company, our products or our website. They do not sponsor or endorse our materials.

This device complies with Part 15 of the FCC Rules. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -

2) Pass-through charge

Recharge your power bank with the included USB-C cable. The pass-through charge feature allows you to continue charging your phone wirelessly.



3) Quick setup

Easily stick the power bank to the phone with the adhesive strips to start wireless charging.

Additional four adhesive strips are included in the package.

You can remove the battery pack by carefully unsticking it from the smartphone. Clean the surface to remove any remaining glue.

Instructions

Before installing the product watch the installation video at:
www.eggtronic.com/1500-mah-power-popper

1. Turn on the Power Popper and find where to correctly place it on the back of the phone. Simply align the middle of the power ring base to the receiving coil in your phone, until it starts charging.

2. Stick the power bank to the smartphone through the adhesive strips.

3. Press the power button to turn the power bank on, wireless charging will start.

Consult the dealer or an experienced radio/TV technician for help. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.



Recharge your power bank

To recharge your power bank, connect the included USB-C cable to a power adapter and then to the power bank. Thanks to the pass-through charge feature, you can still continue charging your phone while recharging the power bank.

Approximate time for a full charge of the power bank:

Using a standard USB-A power adapter (5V 1A): 0.5 hrs.

Specifications

POWER POPPER Dimensions: 9.97 x 2.44 x 0.44 in | USB-C Input: 5V 1A | Wireless Output 5W | Battery capacity: 1500mAh | Finish: Soft touch finish, waterproof fabric, chrome plated frame. | **REPLACEMENT ADHESIVE STRIPS** x4 | **CABLE** USB-C to USB-A (2ft).

LED indicators

Short press the ON/OFF button on the power bank to turn it on and off.

 
When the power bank is turned on, the blue LED lights will show the remaining power of the power bank:

- One blue LED light means the battery is 30% charged.
 - Two blue LED lights mean the battery is 60% charged.
 - Three blue LED lights mean the battery is fully charged.
- When the power bank is wireless charging the smartphone, a green LED light will turn on too.

Safety information

Please read this safety information carefully before using the product.


- Do not damage the charging cable. Doing so may cause electric shock or fire.
- Keep the product away from hot surfaces and sharp corners.
- Do not carry or drag the product by the cable.
- Do not use the product if one or more of its components are damaged or faulty.
- The product contains electronic parts. Keep your device dry. Humidity and liquids may damage the electronic circuits of the device and may cause electric shock and fire.
- Handle the charger with care. Do not drop your device. It may get damaged or may malfunction.
- Do not disassemble, or repair, your charger. Any alteration or modification may void the manufacturer's warranty. If your device needs servicing, contact the manufacturer.
- Do not modify the product in any way. Any modification may increase the risk of injury.
- Do not bite or suck on the device. Doing so may damage the device or result in an explosion or fire.
- Children may choke on small parts. If children use the device, make sure that they use it correctly.
- If you notice a strange smell or smoke coming from your device, stop using it immediately. Continuing to do so may result in fire or explosion.
- In the event of a cell leakage, don't let the liquid come into contact with skin or eyes. If contact has been made, wash the affected area with water and seek medical attention.
- Do not use the device for anything other than its intended use. The device may malfunction or may cause an electric shock or fire.
- Don't leave the battery on prolonged charge when not in use.

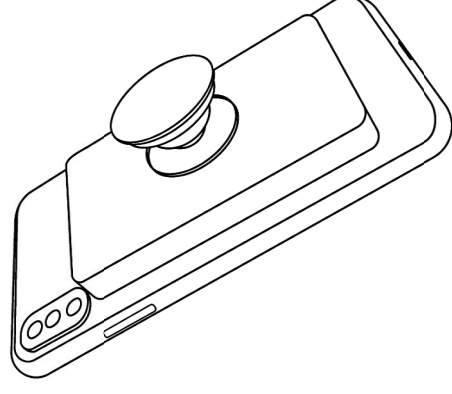

EGGTRONIC

1,500 mAh
Wireless Power Bank

 PPBK2 - PPBL2 - PPGP2

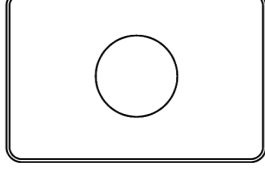

Call Eggtronic customer support
before returning the product to the retailer

(844) 282-2770

USER MANUAL

EGGTRONIC



eggtronic



www.eggtronic.com
support@eggtronic.com