

DIE-CAST

LET YOU EXPERIENCE DIFFERENT FEELING,
HAVE MORE FUN!

15 CH
EXCAVATOR
SIMULATE REAL RC



 
 
Excavator can move forward, backward, Left and Right, Workbench 680° Rotary, Sound Light, Simulate Real Excavator Manipulation, Digging arm each joint can be independently controlled, Program presentation capabilities, Fully reflect the superior performance.

2.4GHZ FREQUENCY CONTROL

HUI NA

15 CHANNEL PROFESSIONAL EXCAVATOR



Excavator can move forward, backward, Left and Right, Workbench 680° Rotary, Sound Light.
Simulate Real Excavator Manipulation, Digging arm each joint can be independently controlled, Program presentation capabilities.
Fully reflect the superior performance.

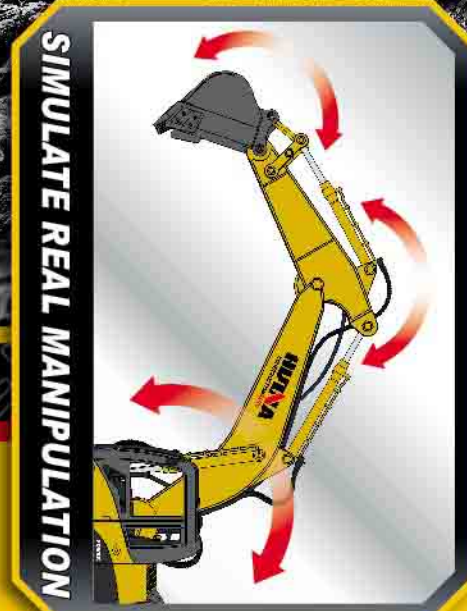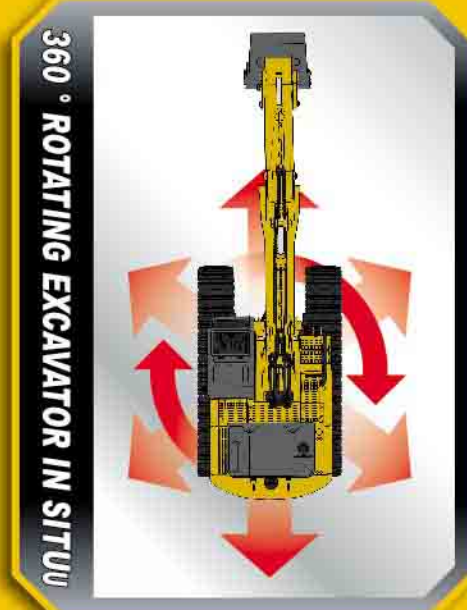

HUI NA

HUI NA

  1:14

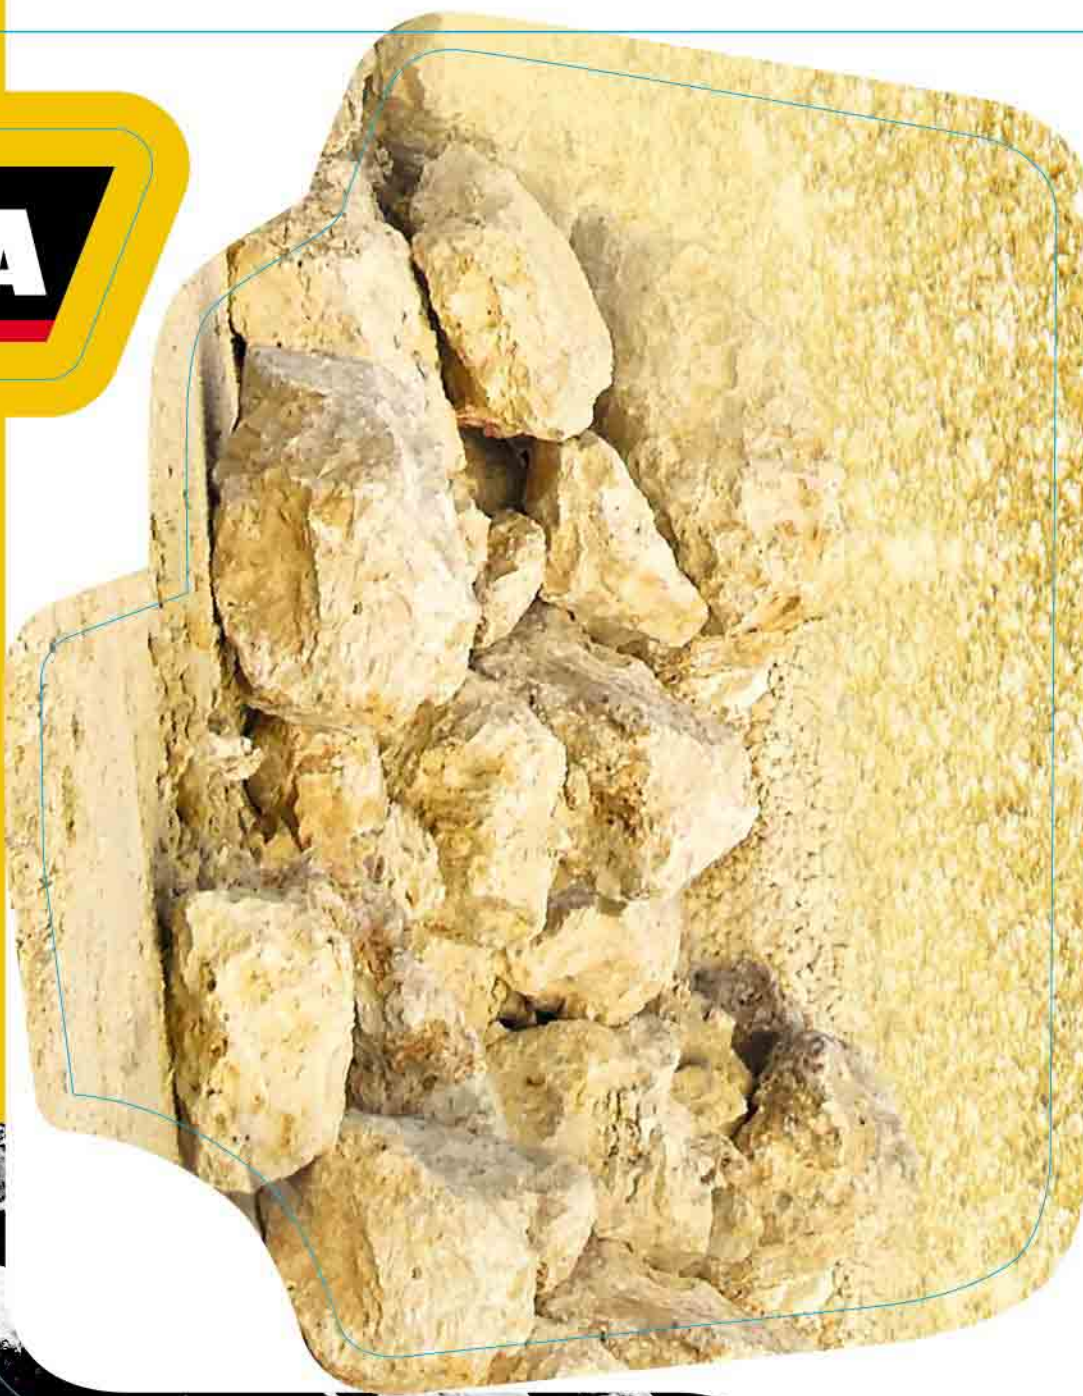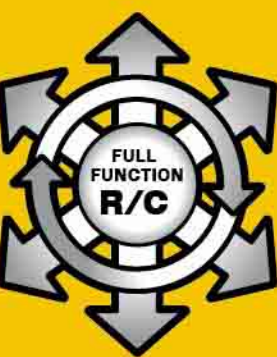

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

HUI NA TOYS
1550

15 CH
EXCAVATOR
SIMULATE REAL RC

2.4GHZ
FREQUENCY CONTROL



POWERFUL
METAL BUCKET

 
8+
AGES





DIE-CAST

ENDLESS FUN WHEN CONTROLLING!

Remote control car battery installation and charging instructions:
Open the remote control car battery cover, install 2x 1.5V "AA" batteries set, and close the batteries cover, tighten the screws.

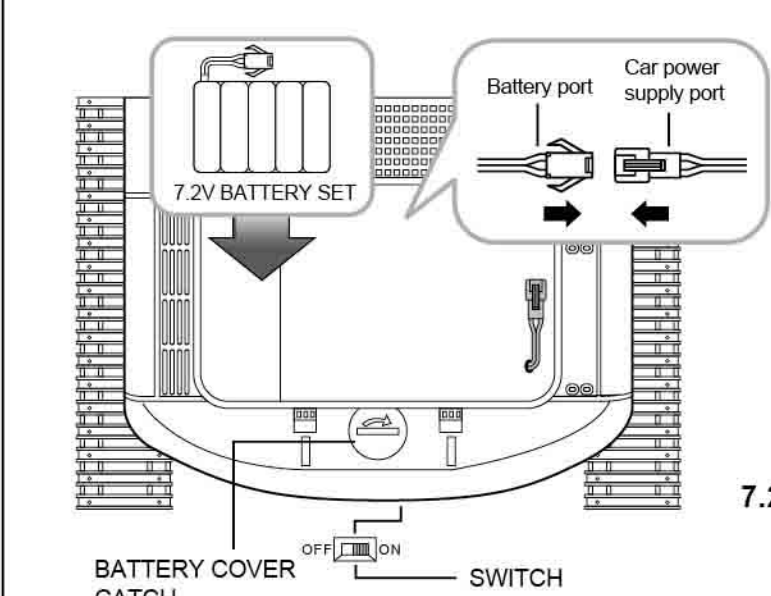


  1. Connection LED lights lit;
2. Charging LED lights flash slowly;
3. Full LED light goes out;

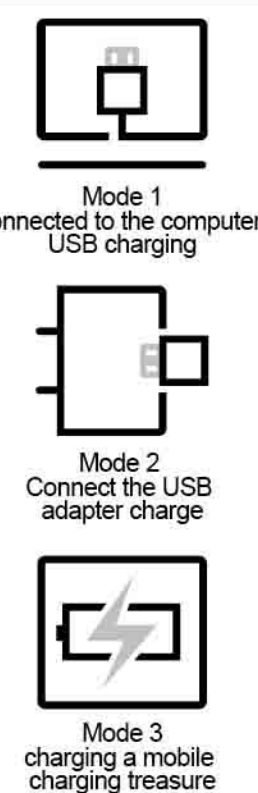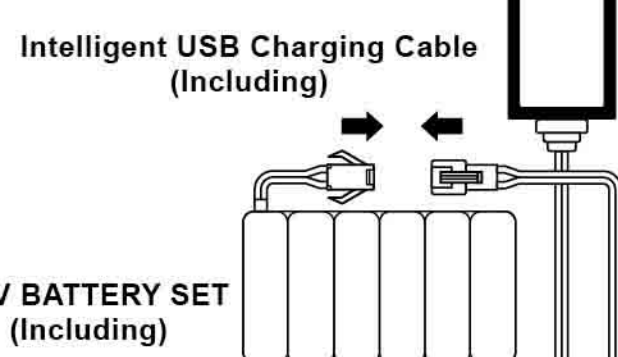


The remote control battery installation instructions:
Open the remote control car battery cover, install 2x 1.5V "AA" batteries, and close the batteries cover, tighten the screws.

 When the indicator light of the remote control is not lit, it indicates low battery, replace the battery.

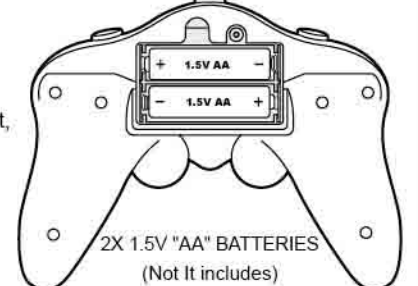

Frequency Pairing:
This product uses 2.4GHz frequency remote control, before the play, should be on the remote control and the vehicle frequency matching, remote control cars and remote control after installing the battery power is turned on.
Remote control car's power switch: OFF ON
Remote Power Switches: OFF ON
At this point the remote control will automatically find the frequency, light is blinking. When the remote control light stops flashing, Frequency matching is completed, the remote control function can be used normally.

 Remote Control Operation:

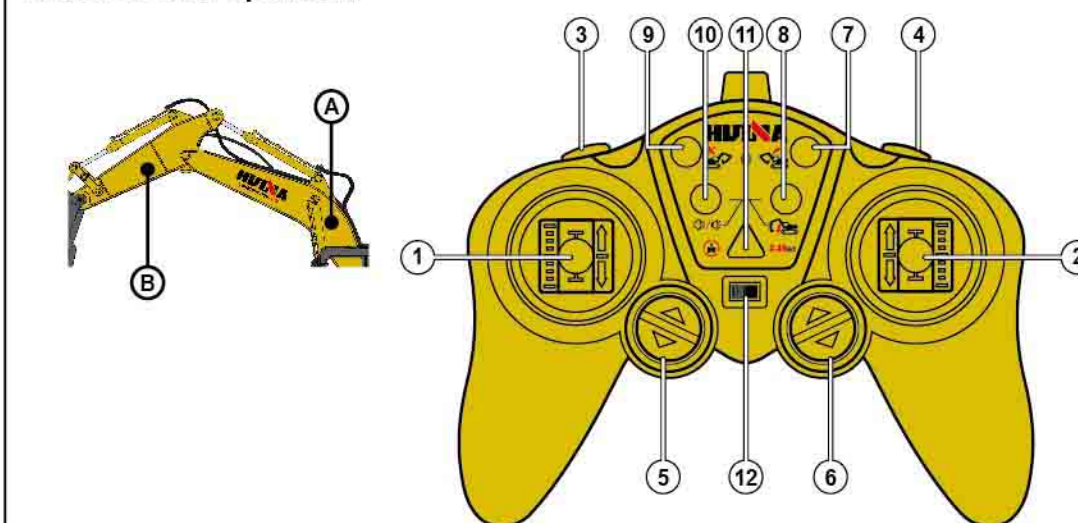

- Direction joystick:
1. Shake the "simultaneous forward" the car forward; crank "while back" the car back;
2. The left stick forward, the right stick backwards, excavators, turn right;
3. Left joystick backwards, right stick forward, excavators turn left;
- Left arrow key table: Key control table left rotation;
Right table Arrow keys: right-button control rotary table;
Bucket control keys: Control the bucket rise and fall;
Big arm (B) Segment control keys: Big arm (B) segment rise and fall;
Big arm (A) Segment control keys: Big arm (A) segment rise;
Big arm (A) Segment control keys: Big arm (A) segment fall;
- Programming key:
1. Press the programming button for 3 seconds to enter the programming mode, then the functional operation of the excavator, press the programming button, complete the programming mode;
2. On completion of the programming mode and then press the programming button at the programming mode start;
3. Press any key to release the programming mode;
- Mute switch button:
(Press: the music, the lights start press again: the music, the lights stop)
Auto Demo key: Auto Demo excavator each function;
- Remote power switch;

Battery use instruction and Cautions:

1. Batteries must be inserting with the correct polarity. Do not mixed different types of batteries or new and used batteries.
2. Only the recommends or the same types batteries can use with the car.
3. The supply terminals can not be short circuited.
4. Exhausted batteries must be removed from the car.
5. Non-rechargeable batteries should not be charged. The batteries are only to be charged under adult supervision.
6. The batteries must be removed from the toy before charging.
7. The user need to be regularly examined for the damage of the wire, plug, shell and related part, in the event of such damage, stop using until the damage has been repaired. Do not break off the antenna of the controller, or the sharp part may hurt you.
8. The R/C car should use 7.2V chargeable battery set, R/C controller should use 2x1.5V "AA" alkaline non-rechargeable battery.

NOT SUITABLE FOR CHILDREN UNDER YEARS
NOT RECHARGEABLE BATTERY
COUNTRY OF ORIGIN: CHINA
Tested according to international standards

WARNING:
CHOKING HAZARD - small parts,
Not for children under 3 years.

SPECIFICATIONS AND COLORS
OF CONTENTS MAY VARY FROM PHOTO.



NO.1550

MADE IN CHINA