

Smart Remote
USER GUIDE
YSG07

Online Documents and
Videos please scan QR



YOCTOP

LAYOUT

Insta

Indicator

A Key Screen On/Off Camera Off Camera Wake Up

B Key Mode QuickCapture

S Key Shutter Power

Lanyard Hole

Charging Port

GoPro

Indicator

A Key Sub Mode

B Key Main Mode QuickCapture

S Key Shutter Power

Lanyard Hole

Charging Port

PAIRING GUIDE

1 PUT THE REMOTE INTO PAIRING MODE

1. Press the **S key** for 1 second to turn on the remote control; The Green Light will start blinking.

2. Press and hold both the **A key** and **S key** for 3 seconds to enter pairing mode; The blue light and green light will alternate blinking.

Insta

1. In the camera menu, locate the Bluetooth Remote icon or the Bluetooth Remote menu.

2. Tap it, and the camera will start searching for the remote.

3. In the search results, select "Insta360 GPS Remote" and wait for the connection to establish.

Note: Models like X2 and X3 may take up to 20 seconds to find the remote. Please be patient.

GoPro

HERO 13 or 12

Swipe down the touch screen>Pair Device

HERO 11

Select Preferences > Wireless connections > Connect device >GoPro Quik App

3 PAIRING COMPLETE

Insta

1. After a successful connection, the remote control will automatically exit the pairing interface.

2. If the connection fails within 30 seconds, please strictly follow these steps to re-pair:

- Turn off the remote control.
- On the camera, tap Insta360 GPS Remote and select [Delete].
- Turn off the camera and re-pair.

GoPro

1. After a successful connection, the remote control's light will stay on continuously.

2. If pairing fails, please reset the camera to factory settings and try again.

3. The remote can wake up a paired camera.

4. After 8 hour of power off or runs out of battery, the camera may completely shut down the wireless connection. You need to turn on the camera manually, and the wireless connection will be automatically turned on.

GoPro

HERO 11 MINI

Press and hold the button with the camera off

Others

Select Connection>Connect Device>The Remote to enter Pairing mode.

FEATURES

Insta

On/Off

Power On: Press the **S key** for 1 second.

Power Off: Press the **S key** for 3 seconds.

Mode

Every time you press the **B key**, the camera will enter the next mode sequentially.

Some camera models require you to press the **B key** and then press the Shutter key to confirm the mode switch.

Shooting

Press the **S key** to start or end shooting.

Marking

Press the **B key** to mark a tag When Recording with supported camera model.

Camera Screen On and Off

Press the **A key** will turn the camera screen off; Press again to wake the screen.

Turning Off and Waking the Camera

Press and hold the **A key** for 3 seconds to turn off the

HOW TO USE THE BASE

Wrist Strap Installation Diagram

Elastic Band Installation Steps

Remote Control Base Installation

Remote Control Base Removal

CONTROL SMARTPHONE

Mode

Every time you press the **B key**, the camera will enter the next Main mode sequentially.

Press **A Key** will switch Sub-Mode.

Shooting

Press the **S key** to start or end shooting.

HiLight Marking

Press the **B key** to mark a HiLight tag When Recording.

Turning Off and Waking the Camera

The camera will turn on and off following the remote control.

Instant Capture

Power the remote on with the **S key** then press **B key**, and the camera will start recording after a successful connection.

Charing

When Off: The white light will turn on while charging. The light will turn off once charging is complete.

When On: The white light will turn on for 1 second and then off. Charging continues in the background.

When the battery is less than 10%, the white light will flash a few times every minute as a reminder.

GoPro

On/Off

Power On: Press the **S key** for 1 second.

Power Off: Press the **S key** for 3 seconds.

TROUBLESHOOTING

FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.- Consult the dealer or an experienced radio/TV technician for help

PARAMETER	
Battery Capacity	40mah
Charging Voltage	5V
Charging Current	<500ma
Charging Time	1.5H
Working Distance	25M