

LITE

Wireless Stereo Headset



USER MANUAL

Catalogue

Introduction.....	7
Accessories list.....	7
General function.....	8-9
Charging your device.....	9
Pairing to a computer and Entertainment.....	10
Pairing to Mobile phone or other device.....	10
Warning.....	11
Technical specification.....	11
FAQ.....	11
Safety Rules.....	12
Service and Support.....	12
Protection to Fix Card.....	13-14

Introduction

Congratulations, and thank you for choosing the Sport WirelessStereo Earphone. This manual will help you operate the Sport WirelessStereo Earphone, but you should first familiarize yourself with the Bluetooth functionality of your mobile phone or other devices before using the Sport Wireless Stereo Earphone Safety Rules.

- 1.Please follow the rules depicted in this manual closely to ensure your safety. Before using this Sport Wireless Stereo Earphone, we would strongly encourage you to read through this user manual.
- 2.Be more wary of any edges, uneven surfaces, metal parts, accessories and its packaging so as to prevent any possible injury or damage.
- 3.Do not modify, repair or dismantle this Bluetooth Stereo Earphone. Doing so may result in fires, electric shocks, complete breakdown of this Sport Wireless Stereo Earphone, etc. All of which, are not covered under warranty.
- 4.Do not use any diluents or volatile liquid to clean the Sport Wireless Stereo Earphone.
- 5.Do not use the Sport Wireless Stereo Earphone in a hazardous location.

Accessories List

1X LITE Wireless Stereo Earphone 1X USB Charger Cable
6X ear rubber (The Wireless earphone is with middle size ear rubbers and ear hooks)
6X ear hook (The Wireless earphone is with middle size ear rubbers and ear hooks)



General Functions

Power On: Press the " " button for 3 seconds when the device is off , (blue LED slowly flashes and a "power on" voice beep) .

Enter the pairing mode: In power off mode, press the " " button to power on the device and then sequentially hold on for 5 seconds.(blue LED and red LED quickly flash alternately with "pairing" voice) .

Pairing: Use a Bluetooth function mobile phone or other Bluetooth Master device and to perform pairing action (detail refer to the chapter about pairing) .

Play/pause: Press " " to play when the device is pausing and press " " to pause when the device is playing.

Volume up: Press "+" is for volume up.

Volume down: Press "-" is for volume down.

Playback/Previous: Press "-" 1 second is for previous music, press "+" 1 second is for the next music.

Power off: Press the " " button for 3 seconds when the device is off(a "power off " voice beep and all LED is off).

Low battery warning: a "battery low" voice beep and the red LED flash).

Charging : Charging via USB charging cable connected to a computer USB port (red LED is on) .

Answer call: Press the " " button once while the call is coming .

End call: Press the " " button once to end call .

Transfer call voice: Press the " " button for 2 second to transfer the call voice between the mobile phone and device.

Reject call: Double press the " " button to reject call when the call is ringing.

Connect two mobiles simultaneously: press the " " button for 3 seconds to power on the device, then keep on press the " " button for 5 seconds to come into pairing mode. Find the name of device on two mobile phones ,then press the name for pairing and connecting.

Connecting successfully: when there is a call from the first mobile phone,

press to receive the call. At that time, there is a call from the second mobile phone, press the " " button once to hold the call of the first mobile phone, and receive the call from the second mobile phone.

Transfer calls between two mobile phones: Double press the " " button can transfer the calls between two mobile phones.

Replay the phone: In stand-by mode or playing music, double press the " " button

Mute: When talking, double press the " " button to activate the function

Default setting: Charging it and press the " " button for 3-5 seconds, the purple LED flash 3 times.

Turn off the Voice Notification: Entering the pairing mode, press "-" for 3 seconds, the red LED flash 3 times.

Turn on the Voice Notification: Entering the pairing mode, press "+" for 3 seconds, the blue LED flash 3 times.

Charging your device

- 1.Connect the charger to the charging socket on the headset.
2. During charging, the indicator light will turn red.
3. When the headset is fully charged, the red indicator light changes to blue. Unplug the charger from the headset.

Use only QCY approved chargers, Unauthorized or Non-QCY chargers could cause damage to the headset, it could also invalidate any warranty on the product.

Repeatedly charging and discharging of the headset, over time will cause the battery performance to diminish, This is normal for all rechargeable batteries.

Pairing to a computer and Entertainment:

1. If there is no Wireless function supported by your computer, a Wireless adapter is necessary. Fix the adapter with your computer and ensure its Bluetooth function is activated.
2. Turn on the device go to the pairing mode.
- 3.Open the Wireless software (such as BlueSoleil) installed on your computer, and select search your Wireless devices function. Refer to user manual of the Wireless software for more information.
- 4.After a few seconds, the device name will be listed. Select the device name icon and click right button of mouse to select pairing item, then select to connect with audio device.
5. Open your media player to play music, watch TV/movie and play game, then you can hear all the sound or music from the device.

Pairing to Mobile phone or other device:

Pairing means unique and encrypted wireless connection between two Bluetooth devices when they agree to communicate with each other. In pairing mode, two devices should be placed close enough to each other.

Pairing to a phone and Entertainment:

1. Activate the Bluetooth feature on your phone and search for the Bluetooth headset . (see your phone' s user manual)
- 2.Turn on your device go to the pairing mode.
- 3.Select the headset from the list of devices found by your phone.
- 4.If requested enter the Wireless PIN 0000(4 zeros)to pair and connect the headset to your phone.
- 5.Your phone will confirm the pairing, and then press Yes/Ok.
- 6.Select to connect with device from your phone. You can play music, watch TV / movie and play game with your phone, then you can hear all the sound or music from the device. Also you can control the player by operating the device. Example, volume level and next music.

Warning:

You Must select a qualified charger from a regular manufacturer .
You Must charge the bluetooth headphone if it has been not used for more than 12 months .

Technical specification

Bluetooth Profile: HFP1.6, HSP1.2, AVRCP1.4, A2DP1.2
RF Range:10m
Noise reduction:CVC6.0
Stand-by time: about 175 hours
Calculating Conversation Time: about 5 hours
Charging time: About 2 hours
Dimension (L x W x H):40 x 24 x 32mm
Weight : 16.4g

FAQ

Q: Why can not turn the headset on?
A: Make sure your device is fully charged before using it for the first time.
Your device can not be turned on if battery level is very low.

Q: There is no sound when playback?
A: Check the connection between your device with phone or computer, if the connection is not established, please reconnect again. And adjust the volume level to a suitable level.

Q: Phone or computer can't find your device?
A: Check the Wireless is "Visible" in your phone or computer, if pair timeout, pairing mode will exit, please re-enter pairing mode. If your phone application have some problems, please re-start the phone. If your device has problem, re-start or reset it.

Safety Rules

- 1)Never disassemble or modify your headset for any reason. Doing this may cause the headset to malfunction or become combustible. These damage to your device can void your manufacturer's warranty.
 - 2)Do not allow your device to get wet, liquids can cause serious damage. Water damage to your device can void your manufacturer's warranty.
 - 3)Avoid exposing your device to very cold or very hot temperatures(below 0°C or above 45°C). Extreme temperatures can cause the deformation of the device and reduce the charging capacity and life of your device.
 - 4)Avoid using your device's light close to the eyes of children or animals.
 - 5)Do not use the device during a thunderstorm.
- Thunderstorms can cause the device to malfunction and increase the risk of electric shock.

Service and Support

If your device is not performing as it should, please take it to your local service providers or dealer for service.

Protection to Fix Card

Warranty Period:

12 months from the date you purchase.

Free Service:

During the warranty period,if there is any breakdown which caused by the product 's own quality,pls contact your dealer by this warranty card and purchasing invoice to enjoy free maintenance.

Free maintain wont be given under the following circumstance:

- 1.No Protection to Fix Card or the product repair labels is damage
2. The damage caused by the dismantle movement of a non-our-company authorized maintainer.
3. The damage due to water or drop and machinery caused by human.
4. The breakdown and the damage caused by the Force majeure.

Customer service information:



WWW.SOUNDBYVIBES.COM

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- -

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.