


Pantone Black C

Cut Line

4 in


WITH MAGNOLIA

wireless retro speaker

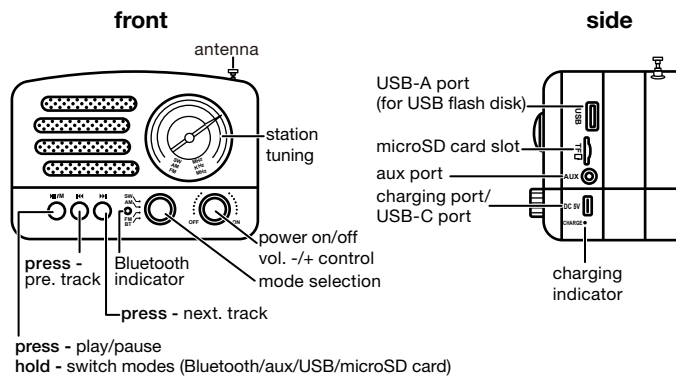

included

- Wireless Retro Speaker
- USB-C Charging Cable
- 3.5mm AUX Cable

Bluetooth Pairing Mode

- Turn the right knob clockwise to power on
- Turn the mode selector knob (left knob) to "BT". The Bluetooth indicator will rapid flashing **red** light
- Use Bluetooth settings on your phone to pair with **H&H Retro**
- White light turns solid followed by a chime - pairing successful
- Once paired, it will automatically connect next time you turn it on

indicators

- Charging indicator:
 - Solid Red - Charging
 - No Red Light - Fully Charged
- Bluetooth indicator:
 - Rapid Flashing **Red** - Pairing Mode
 - Solid **Red** - Bluetooth Connected
 - Slow Flashing **Red** - Play Music
- Ascending Tones - Power on
- Descending Tones - Power off

front

- Three Rapid Tones - Ready to pair
- Single Chime - Paired
- Two Rapid Dings - Low battery

radio function

- Switch Bands: Turn the left knob to cycle through SW (Shortwave), AM, FM
- Tune In: Rotate the large front dial to find your favorite station
- Pull out the telescopic antenna fully for clearer reception—this works great for FM and SW signals

media playback

- USB/TF Card: Plug a USB drive into the USB port or insert a TF (Micro SD) card into the TF slot
The speaker will play audio files from the device when using the "M" button to switch
- AUX Input: Use a 3.5mm audio cable to connect your media source to the AUX port

charging

- Full charge requires approximately 3 hours
 - Charging is complete when charging indicator red light turns off
 - Plug USB-C end of charging cable into **side** of speaker
 - Plug USB-A end of charging cable into a power supply of at least DC 5V 1A
- Warning: please use UL compliant power supply

troubleshooting

- If the speaker is not working correctly, turn it on/off to restart
- If the speaker won't turn on, recharge the battery and try again
- If the speaker won't charge, make sure the supply works, is 5V 1A, and not damaged
- If the speaker makes no sound or does not show as an available device, make sure it is not paired to other devices, if so unpair the device and repair the desired device
- Radio Has Static? Extend the antenna all the way and try moving the speaker to an area with less interference (like away from Wi-Fi routers)

safety

- The speaker is splash resistant, do not submerge under water
- Do not modify or repair this device
- Do not use in high temperatures or extreme weather
- Do not use chemical detergents to clean your device, use a soft dry cloth

6 in



FCC ID: 2A023-BTSP22 Model: BTSP22 Input: 5V ~ 1A Made in China

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Target Corp, Mpls, MN, 55403 Phone: 612-304-6073

For qualified repair specialists requesting repair information and parts please contact the original manufacturer at customersupport@gemfindyour.com

back