


 Pantone Black C

 Cut Line

ultra thin wireless speaker

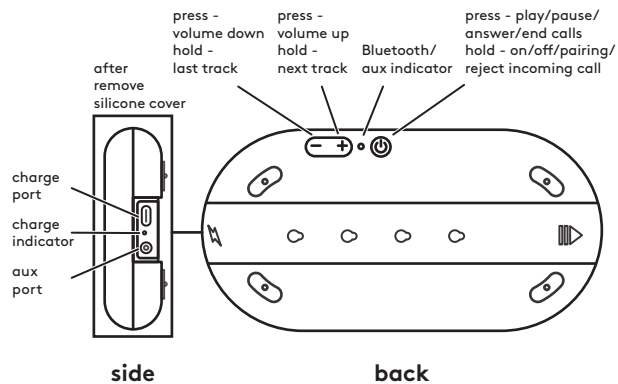

included

- Wireless Speaker
- USB-A to USB-C Charging Cable

pairing

- Hold power button to power on the speaker
- Rapid flashing white light
- Use Bluetooth settings on your phone to pair with **heyday ultra thin**
- White light turns solid followed by a chime - pairing successful

indicators

- * Flashing Red - Low Battery
- Solid Red - Charging
- No red Light - Fully Charged
- Rapid Flashing White - Pairing Mode
- Solid White - Bluetooth Connected/Pause Music
- Slow Flashing White- Play Music
- Ascending Tones - Power on
- Descending Tones- Power off
- Three Rapid Tones - Ready to pair
- Single Chime - Paired
- Two Rapid Dings - Low battery
- Quick Ascending Tone - Max volume
- Quick Descending Tone - Min. volume

front

4 in

charging

- Full charge requires approximately 2 hours and can play for 8 hours with fully charged the speaker
- Charging is complete when red light turns off
- Remove silicone cover, Plug USB-C end of charging cable into side of speaker
- Plug USB end of charging cable into a power supply of at least DC 5V 1A

aux/line in

- Insert your AUX cable (not included) into AUX port of the speaker
- Insert opposite end of the AUX cable into the media source

TWS (True Wireless Stereo) pairing

- You can pair two speakers of this same model together to get true stereo sound
- Turn Bluetooth off on your device, place two matching speakers together, switch them on, and double click power button to enter TWS pairing
- The speakers will automatically pair with one another, you will hear a chime when they pair
- After the speakers are paired, the indicator will be solid white on the left channel speaker and will flash white on the right channel speaker; use your device to connect to **heyday ultra thin**
- Pairing of multiple speakers does not rely on the "Dual Audio" feature of newer phones

troubleshooting

- If the speaker is not working correctly, power it on/off to restart
- If the speaker won't turn on, recharge the battery and try again
- If the speaker won't charge, make sure the supply works, is 5V 1A, and not damaged
- If the speaker makes no sound or does not show as an available device, make sure it is not paired with other devices, if so unpair the device and repair the desired device

need some help?

Can't get it to pair? Just have a question?



call us at: 1-833-TGT-Tech or: 1-833-848-8324

safety

- The speaker is waterproof IPX4 (splash resistant), do not submerge under water
- Do not modify or repair this device
- Do not use in high temperatures or extreme weather
- Do not use chemical detergents to clean your device, use a soft dry cloth

heyday 

FCC ID: 2A023-BTSP23 Model: BTSP23 Input: 5V=1A Made in China
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.
Target Corp. Mpls. MN. 55403 Phone: 612-304-6073
For qualified repair specialists requesting repair information and parts please contact the original manufacturer at customersupport@gemsfindyours.com

back

5.78in