




Yoda Portable Speaker

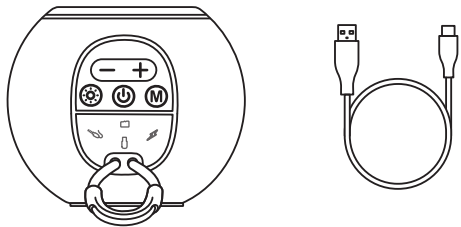


INCLUDED:
1. Bluetooth Speaker
2. USB-A to USB-C Charging Cable

PAIRING:
1. Hold power button to turn the speaker on.
2. The pairing indicator light will flash white when it is ready to pair.
3. Use the Bluetooth settings on your device to pair with “Target x Star Wars Speaker”
4. When pairing is successful, the white light will turn solid and there will be a chime.
5. The speaker will automatically reconnect to the device it was most recently paired to when you turn the speaker on and it is in Bluetooth mode.

AUDIO INDICATORS:
• Lightsaber Ignition - Power on
• Descending Tones - Power off
• "Feel the Force" Voice Prompt - Ready to pair
• Ascending Double Chime - Paired
• Low Descending Tune - Low battery
• Lightsaber Swoosh - Max volume
• Two low Chimes - Min volume

CHARGING:
1. A full charge requires approximately 4 hours.
2. Plug the USB-C end of the charging cable into the charge port on the side of the speaker.
3. Plug the opposite end of the charging cable into a power supply of at least DC 5V 1A.
4. Charging is complete when the red light turns off.
WARNING: Please use UL compliant power supply.

 **WARNING:**
CHOKING HAZARD—Small parts.
Not for children under 3 years.

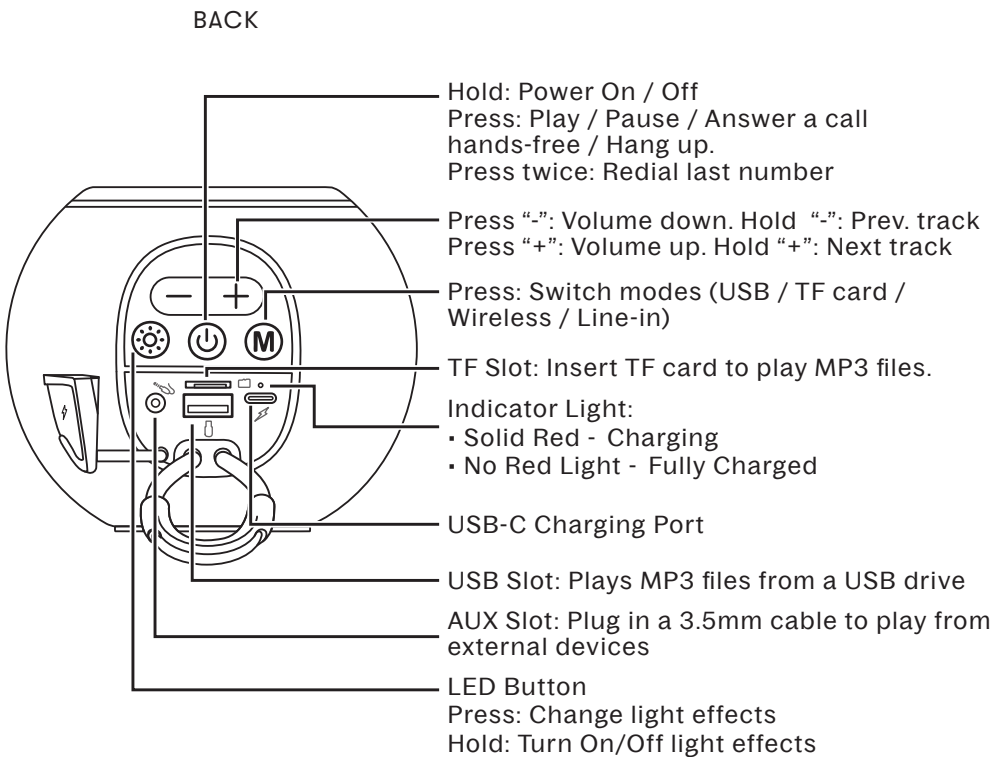

TWS (TRUE WIRELESS STEREO) PAIRING:
1. You can pair two speakers of the same model together.
2. Turn Bluetooth off on your mobile device, and ensure both speakers are in Wireless mode without being paired to any device.
3. Press and hold the "M" key on either speaker for 2-3 seconds until you hear a prompt tone.
4. Once the indicator light stops flashing, the speakers are successfully paired in TWS mode.
5. Turn on Bluetooth on your mobile device, and connect to the speaker to play music.
NOTE: To disconnect TWS, press and hold the "M" key on either speaker again.

TROUBLESHOOTING:
1. If the speaker is not working correctly, turn it on/off to restart.
2. If the speaker won't turn on, recharge the battery and try again.
3. If the speaker won't charge, make sure the power supply works, is 5V 1A or above, and is not damaged.
4. If the speaker makes no sound or does not show as an available device, make sure it is not paired. If it is, unpair the device and re-pair the desired device.
5. If the speaker freezes, insert a pin into the AUX slot to reset, or hold power for 8s.
6. If USB / TF cards won't play, format them to FAT32.

SAFETY:
1. Keep the speaker dry. Do not expose it to water, rain, moisture, or other liquids.
2. Do not modify or repair this device.
3. Do not allow small particles to get into the ports.
4. Do not use chemical detergents to clean; use a soft dry cloth.
5. Do not expose the product to fire, high temperature, direct sunlight, etc.

only at 

FCC ID: 2A023-BTSP26 Model: BTSP26 Input: 5V ~ 0.5A Max Made in China
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) if this device must accept any interference received, including interference that may cause undesired operation. WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.
Target Corp. Mpls, MN 55403 Phone: 1-612-304-6073
For qualified repair specialists requesting repair information and parts please contact the original manufacturer at customersupport@gemfindyours.com

© 2026 Target. The Bullseye Design is a registered trademark of Target Brands, Inc. All rights reserved.